



## Veiligheids-, Bedienings-, Onderhouds- en Onderdelenhandleiding Safety and Operation / Maintenance and Parts Manual

### **RANSOMES<sup>®</sup>** Sport 200 & Magna 250 Cutting Units



**WAARSCHUWING:** Bij verkeerd gebruik kan deze machine ernstig lichamelijk letsel veroorzaken. Degenen die de machine gebruiken en onderhouden moeten worden getraind in het juiste gebruik ervan, worden gewaarschuwd voor de gevaren ervan en behoren de volledige handleiding aandachtig te lezen alvorens de machine bedrijfs-klaar te maken, te bedienen, af te stellen en/of te onderhouden.



**WARNING:** If incorrectly used this machine can cause severe injury. Those who use and maintain this machine should be trained in its proper use, warned of its dangers and should read the entire manual before attempting to set up, operate, adjust or service the machine.



Dutch



## **1 CONTENTS**

---

<b>Contents:</b>	<b>Page</b>
2 INTRODUCTION .....	2
2.2 PRODUCT IDENTIFICATION .....	2
2.1 IMPORTANT .....	2
2.3 GUIDELINES FOR THE DISPOSAL .....	2
3 SAFETY INSTRUCTIONS .....	4
3.1 OPERATING INSTRUCTIONS .....	4
3.2 SAFETY SIGNS .....	4
3.3 STARTING THE ENGINE .....	4
3.4 DRIVING THE MACHINE .....	4
3.5 TRANSPORTING .....	4
3.6 LEAVING THE DRIVING POSITION .....	5
3.7 SLOPES .....	5
3.8 BLOCKED CUTTING CYLINDERS .....	5
3.9 ADJUSTMENTS, LUBRICATION AND MAINTENANCE .....	6
4 SPECIFICATION .....	7
5 DECALS .....	12
6 ASSEMBLY & OPERATION .....	13
7 MAINTENANCE & LUBRICATION .....	14
8 ADJUSTMENT .....	17
9 END OF SEASON .....	19
10 GUARANTEE .....	20

## **2 INTRODUCTION**

### **2.1 IMPORTANT**

**IMPORTANT:** This is a precision machine and the service obtained from it depends on the way it is operated and maintained.

This SAFETY AND OPERATORS MANUAL should be regarded as part of the machine. Suppliers of both new and second-hand machines are advised to retain documentary evidence that this manual was provided with the machine.


This machine is designed solely for use in customary grass cutting operations. Use in any other way is considered as contrary to the intended use. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer, also constitute essential elements of the intended use.

Before attempting to operate this machine, **ALL** operators **MUST** read through this manual and make themselves thoroughly conversant with Safety Instructions, controls, lubrication and maintenance.

Accident prevention regulations, all other generally recognized regulations on safety and occupational medicine, and all road traffic regulations shall be observed at all times.

Any arbitrary modifications carried out on this machine may relieve the manufacturer of liability for any resulting damage or injury.

### **2.2 PRODUCT IDENTIFICATION**

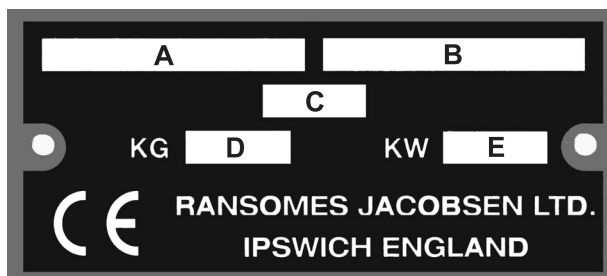

- A Machine Name
- B Serial Number
- C Year of Manufacture
- D Machine Weight
- E Engine Power

## **2 INTRODUCTION**

---

### **2.3 GUIDELINES FOR THE DISPOSAL OF SCRAP PRODUCTS**

When it has been identified that a turf care product has no further functional value and requires disposal, the following actions should be taken.

These guidelines should be used in conjunction with applicable Health, Safety and Environmental legislation and use of approved local facilities for waste disposal and recycling.

- Position the machine in a suitable location for any necessary lifting equipment to be used.
- Use appropriate tools and Personal Protective Equipment (PPE) and take guidance from the technical manuals applicable to the machine.
- Remove and store appropriately:
  1. Batteries
  2. Fuel residue
  3. Engine coolant
  4. Oils
- Disassemble the structure of the machine referring to the technical manuals where appropriate. Special attention should be made for dealing with 'stored energy' within pressurised elements of the machine or tensioned springs.
- Any items that still have a useful service life as second hand components or can be re-serviced should be separated and returned to the relevant centre.
- Other worn out items should be separated into material groups for recycling and disposal consistent with available facilities. More common separation types are as follows:
  - Steel
  - Non ferrous metals
    - Aluminium
    - Brass
    - Copper

- Plastics
  - Identifiable
    - Recyclable
    - Non recyclable
  - Not identified
- Rubber
- Items that cannot be separated economically into different material groups should be added to the 'General waste' area.
- Do not incinerate waste.

Finally update machinery records to indicate that the machine has been taken out of service and scrapped.

## **3 SAFETY INSTRUCTIONS**



This safety symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of injury, carefully read the message that follows, and inform other operators.

### **3.1 OPERATING INSTRUCTIONS**

- Ensure that the instructions in this book are read and fully understood.
- No person should be allowed to operate this machine unless they are fully acquainted with all the controls and the safety procedures.
- Never allow children or people unfamiliar with these instructions to use this machine. Local regulations may restrict the age of the operator.

### **3.2 SAFETY SIGNS**

- It is essential all safety labels are kept legible, if they are missing or illegible they must be replaced. If any part of the machine is replaced and it originally carried a safety label, a new label must be affixed to the replacement part. New safety labels are obtainable from Ransomes dealers.

### **3.3 STARTING THE ENGINE**

- Before starting the engine check that the brakes are applied, drives are in neutral, guards are in position and intact, and bystanders are clear of the machine.
- Do not run the engine in a building without adequate ventilation.

### **3.4 DRIVING THE MACHINE**

- Before moving the machine, check to ensure that all parts are in good working order, paying particular attention to brakes, tyres, steering and the security of cutting blades.
- Replace faulty silencers, mow only in daylight or good artificial light
- Always observe the Highway Code both on and off the roads. Keep alert and aware at all times. Watch out for traffic when crossing or near roadways.
- Stop the blades rotating before crossing surfaces other than grass.

- Remember that some people are deaf or blind and that children and animals can be unpredictable.
- Keep travelling speeds low enough for an emergency stop to be effective and safe at all times, in any conditions.
- Remove or avoid obstructions in the area to be cut, thus reducing the possibility of injury to yourself and/or bystanders.
- When reversing, take special care to ensure that the area behind is clear of obstructions and/or bystanders. **DO NOT** carry passengers.
- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.
- When the machine is to be parked, stored or left unattended, lower the cutting means unless the transport locks are being used.
- While mowing, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals.
- Check the grass catcher frequently for wear or deterioration. After striking a foreign object inspect the lawnmower for damage and make repairs before restarting and operating the equipment.
- If the machine starts to vibrate abnormally, check immediately.

### **3.5 TRANSPORTING**

- Ensure that the cutting units are securely fastened in the transport position. Do not transport with cutting mechanism rotating.
- Drive the machine with due consideration of road and surface conditions, inclines and local undulations.
- Sudden decelerating or braking can cause the rear wheels to lift.
- Remember that the stability of the rear of the machine is reduced as the fuel is used.

### **3 SAFETY INSTRUCTIONS**

#### **3.6 LEAVING THE DRIVING POSITION**

- Park the machine on level ground.
- Before leaving the driving position, stop the engine and make sure all moving parts are stationary. Apply brakes and disengage all drives. Remove the starter key.

#### **3.7 SLOPES**

##### **TAKE EXTRA CARE WHEN WORKING ON SLOPES**

- Local undulations and sinkage will change the general slope. Avoid ground conditions which can cause the machine to slide.
- Keep machine speeds low on slopes and during tight turns.
- Sudden decelerating or braking can cause the rear wheels to lift. Remember there is no such thing as a "safe" slope.
- Travel on grass slopes requires particular care.

##### **DO NOT USE ON SLOPES GREATER THAN 15°**

**IMPORTANT:** When working on any slope select weight transfer, having adjusted to provide adequate traction.

#### **3.8 BLOCKED CUTTING CYLINDERS**

- Stop the engine and make sure all moving parts are stationary.
- Apply brakes and disengage all drives.
- Release blockages with care. Keep all parts of the body away from the cutting edge. Beware of energy in the drive which can cause rotation when the blockage is released.
- Keep other people away from the cutting units as rotation of one cylinder can cause the others to rotate.

#### **3.9 ADJUSTMENTS, LUBRICATION AND MAINTENANCE**

- Stop the engine and make sure all moving parts are stationary.
- Apply brakes and disengage all drives.
- Read all the appropriate servicing instructions.
- Use only the replacement parts supplied by the original manufacturer.
- When adjusting the cutting cylinders take care not to get hands and feet trapped when rotating cylinders.
- Make sure that other people are not touching any cutting units, as rotation of one cylinder can cause the others to rotate.
- To reduce the fire hazard, keep the engine, silencer and battery compartments free of grass, leaves or excessive grease.

- Replace worn or damaged parts for safety.
- When working underneath lifted parts or machines, make sure adequate support is provided.
- Do not dismantle the machine without releasing or restraining forces which can cause parts to move suddenly.
- Do not alter engine speed above maximum quoted in Engine Specification. Do not change the engine governor settings or overspeed the engine. Operating the engine at excessive speed may increase the hazard of personal injury.
- When refuelling, STOP THE ENGINE, DO NOT SMOKE. Add fuel before starting the engine, never add fuel while the engine is running.
- Use a funnel when pouring fuel from a can into the tank.
- Do not fill the fuel tank beyond the bottom of the filler neck.
- Replace all fuel tank and container caps securely.
- Store fuel in containers specifically designed for this purpose.
- Refuel outdoors only and do not smoke while refuelling.
- If fuel is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until fuel vapours have dissipated.
- Allow the engine to cool before storing in any enclosure.
- Never store the equipment with fuel in the tank inside a building where fumes may reach an open flame or spark.
- If the fuel tank has to be drained, this should be done outdoors.
- Do not spill fuel onto hot components.
- When servicing batteries, DO NOT SMOKE, and keep naked lights away.
- Do not place any metal objects across the terminals.

### 3 SAFETY INSTRUCTIONS

---

**DANGER** - Indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.

**WARNING** - Indicates a potentially hazardous situation which, if not avoided, COULD result in death or serious injury.

**CAUTION** - Indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury and property damage. It may also be used to alert against unsafe practices.

**IMPORTANT:** Transport speed is for highway use only. Never select transport speed on grass areas or uneven or unsurfaced roads or tracks.



Hydraulic Fluid escaping under pressure can penetrate skin and do serious damage. Immediate medical assistance must be sought.



## 4 SPECIFICATION

### MAGNA 250.

#### CONSTRUCTION

Heavy duty welded pressed steel construction

#### CYLINDER:

Diameter:	254mm
Width of cut:	762mm
Number of knives:	4, 6 and 8
Height of cut:	12.7mm - 61mm

### SPORT 200

#### CONSTRUCTION

Heavy duty welded pressed steel construction

#### CYLINDER:

Diameter:	197mm
Width of cut:	762mm
Number of knives:	4, 6, 8 and 11
Height of cut	
Fixed head:	12.7mm - 89mm
Floating head	
Standard blade:	12.7mm - 35.7mm
Thin blade:	9mm - 32mm

### MAGNA 250 AND SPORT 200

#### HEIGHT OF CUT ADJUSTMENT

Adjustable screw system on rear roll. (MAGNA 250 & SPORT 200)

Fixed front roll. (SPORT 200 Floating Head)

#### REAR ROLL

Full width 76mm (3in) diameter solid roll running on taper roller bearings with shaft seals and lubricators.

#### FRONT ROLL

Full width 76mm (3in) diameter grooved roll running on taper roller bearings with shaft seals and lubricators.

#### BOTTOM BLOCK & BLADE

Blade replaceable, mounted onto steel constructed bottom block.

#### TRANSMISSION

By hydraulic motor through toothed drive belt to cutting cylinder. Or by hydraulic motor through cardan shaft to cutting cylinder

# RANSOMES SPORT 200 & MAGNA 250 CUTTING UNITS SAFETY, OPERATORS, MAINTENANCE & PARTS MANUAL

## 4 SPECIFICATION

**EC Declaration of Incorporation** • **Déclaration de constitution CE**  
**EG Verklaring van Conformiteit** • **EG Einbauerklärung**  
**Dichiarazione di costituzione CE** • **EF Erklæring om overholdelse af standard**  
**Överensstämmelse med EU:s regler** • **EY-liitântädeklaraatio**  
**Declaración de Incorporación de la CE**

We the undersigned • Nous, soussignés • Wij, de ondergetekenden •  
 Wir, die Unterzeichneten • Noi sottoscritti • Undertegnede • Nedanstående företag •  
 Me allekirjoittaneet • Nosotros, los abajo firmantes:

**Ransomes Jacobsen Limited**  
**Central Avenue, Ransomes Europark, Ipswich, England, IP3 9QG**

Certify that the cutting unit • Certifions que le bloc de coupe • Verklaren hierbij dat de maai-eenheid • Bescheinigen,  
 daß die Schneidanlage • Certificiamo che il gruppo di taglio • Attesterer herved at dette klippeaggregat, • Intygar att  
 klippenheten • Vakuutamme, että leikkuulaite • Certificamos que la unidad cortadora

Make • Marque • Merk • Fabrikat • Marca • Fabrikat • Märke • Merkki • Marca: **Ransomes**

Product Code	Series	Description
LMAB751	AF	Magna 250, 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB752	AG	Magna 250, 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB753	AH	Magna 250, 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB755	AT	Magna 250, 8 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB756	AU	Magna 250 8 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB757	AV	Magna 250 8 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB829	AW	Sport 200 8 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB830	AX	Sport 200 8 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB831	AY	Sport 200 8 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB833	AZ	Sport 200 11 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB834	BA	Sport 200 11 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB835	BB	Sport 200 11 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB789	BC	Sport 200 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB790	BD	Sport 200 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB791	BD	Sport 200 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment

Conforms to the Harmonised standard • Est conforme à la norme • Voldoet aan de Standaard •  
 Mit der Norm • E' conforme allo standard • Overholder den standard • överstämmer med den standarden •  
 Noudattaa standardia • Conformata con la norma:

**EN836**

This cutting unit has been designed to be fitted to the • Ce bloc de coupe a été conçu pour se monter sur • Deze maai-  
 eenheid werd ontworpen om te worden gemonteerd op de • übereinstimmt. Diese Schneidanlage wurde zur  
 Installation in • Questo gruppo di taglio è stata progettato per essere installato su • Dette klippeaggregat er beregnet til  
 monterings på • Denna klippenhett är avsett att monteras på • Tämä leikkuulaite on suunniteltu sopimaan seuraavaan •  
 Esta unidad cortadora ha sido diseñada para su montaje en:

**Commander 3520 series ZE**

  
**T. Lansdell**  
 Managing Director

Certificate Number: **Com3520ZE-Incorp (rev.2)**

## 4 SPECIFICATION

**EC Declaration of Incorporation** • **Déclaration de constitution CE**  
**EG Verklaring van Conformiteit** • **EG Einbauerklärung**  
**Dichiarazione di costituzione CE** • **EF Erklæring om overholdelse af standard**  
**Överensstämmelse med EU:s regler** • **EY-liitântädeklaraatio**  
**Declaración de Incorporación de la CE**

We the undersigned • Nous, soussignés • Wij, de ondergetekenden •  
 Wir, die Unterzeichneten • Noi sottoscritti • Undertegnede • Nedanstående företag •  
 Me allekirjoittaneet • Nosotros, los abajo firmantes:

**Ransomes Jacobsen Limited**  
**Central Avenue, Ransomes Europark, Ipswich, England, IP3 9QG**

Certify that the cutting unit • Certifions que le bloc de coupe • Verklaren hierbij dat de maai-eenheid • Bescheinigen, daß die Schneidanlage • Certifichiamo che il gruppo di taglio • Attesterer herved at dette klippeaggregat, • Intygat att klippenheten • Vakuutamme, että leikkuulaite • Certificamos que la unidad cortadora

Make • Marque • Merk • Fabrikat • Marca • Fabrikat • Märke • Merkki • Marca: **Ransomes**


Product Code	Series	Description
LMAB577	WK	Sport 200 4 Knife, Fixed Head, Standard Roll, Spanner Adjustment
LMAB578	WL	Sport 200 4 Knife, Fixed Head, Standard Roll, Spanner Adjustment
LMAB546	WM	Sport 200 4 Knife, Fixed Head, Disposable Roll, Spanner Adjustment
LMAB548	WN	Sport 200 4 Knife, Fixed Head, Disposable Roll, Spanner Adjustment
LMAB579	WP	Sport 200 4 Knife, Fixed Head, Standard Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB580	WQ	Sport 200 4 Knife, Fixed Head, Standard Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB549	WR	Sport 200 4 Knife, Fixed Head, Disposable Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB550	WS	Sport 200 4 Knife, Fixed Head, Disposable Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB581	WT	Sport 200 6 Knife, Fixed Head, Standard Roll, Spanner Adjustment
LMAB582	WU	Sport 200 6 Knife, Fixed Head, Standard Roll, Spanner Adjustment
LMAB551	WV	Sport 200 6 Knife, Fixed Head, Disposable Roll, Spanner Adjustment
LMAB552	WV	Sport 200 6 Knife, Fixed Head, Disposable Roll, Spanner Adjustment
LMAB583	WX	Sport 200 6 Knife, Fixed Head, Standard Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB584	WY	Sport 200 6 Knife, Fixed Head, Standard Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB553	WZ	Sport 200 6 Knife, Fixed Head, Disposable Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB554	XA	Sport 200 6 Knife, Fixed Head, Disposable Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB445	XT	Sport 200 11 Knife Floating Head, Standard Roll, Handwheel Adjustment
LMAB446	XU	Sport 200 11 Knife Floating Head, Standard Roll, Handwheel Adjustment

Conforms to the Harmonised standard • Est conforme à la norme • Voldoet aan de Standaard •  
 Mit der Norm • E' conforme allo standard • Overholder den standard • överstämmer med den standarden •  
 Noudattaa standardia • Conformata con la norma:

### EN836

This cutting unit has been designed to be fitted to the • Ce bloc de coupe a été conçu pour se monter sur • Deze maai-eenheid werd ontworpen om te worden gemonteerd op de • übereinstimmt. Diese Schneidanlage wurde zur Installation • Questo gruppo di taglio è stata progettato per essere installato su • Dette klippeaggregat er beregnet til montering på • Denna klippenhet är avsett att monteras på • Tämä leikkuulaite on suunniteltu sopimaan seuraavaan • Esta unidad cortadora ha sido diseñada para su montaje en:

**Highway 2130 series WJ, CS, CU, DK**

  
**T. Lansdell**  
 Technical Director

Certificate Number: **HW2130WJ-Incorp (rev.2)**

# RANSOMES SPORT 200 & MAGNA 250 CUTTING UNITS SAFETY, OPERATORS, MAINTENANCE & PARTS MANUAL

## 4 SPECIFICATION

**EC Declaration of Incorporation** • **Déclaration de constitution CE**  
**EG Verklaring van Conformiteit** • **EG Einbauerklärung**  
**Dichiarazione di costituzione CE** • **EF Erklæring om overholdelse af standard**  
**Överensstämmelse med EU:s regler** • **EY-liitântädeklaraatio**  
**Declaración de Incorporación de la CE**

We the undersigned • Nous, soussignés • Wij, de ondergetekenden •  
 Wir, die Unterzeichneten • Noi sottoscritti • Undertegnede • Nedanstående företag •  
 Me allekirjoittaneet • Nosotros, los abajo firmantes:

**Ransomes Jacobsen Limited**  
**Central Avenue, Ransomes Europark, Ipswich, England, IP3 9QG**

Certify that the cutting unit • Certifions que le bloc de coupe • Verklaren hierbij dat de maai-eenheid • Bescheinigen, daß die Schneidanlage • Certificiamo che il gruppo di taglio • Attesterer herved at dette klippeaggregat, • Intygat att klippenheden • Vakuutamme, että leikkuulaite • Certificamos que la unidad cortadora

Make • Marque • Merk • Fabrikat • Marca • Fabrikat • Märke • Merkki • Marca: **Ransomes**

Product Code	Series	Description
LMAB751	AF	Magna 250, 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB752	AG	Magna 250, 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB753	AH	Magna 250, 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB755	AT	Magna 250, 8 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB756	AU	Magna 250 8 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB757	AV	Magna 250 8 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB829	AW	Sport 200 8 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB830	AX	Sport 200 8 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB831	AY	Sport 200 8 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB833	AZ	Sport 200 11 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB834	BA	Sport 200 11 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB835	BB	Sport 200 11 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB789	BC	Sport 200 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB790	BD	Sport 200 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB791	BD	Sport 200 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment

Conforms to the Harmonised standard • Est conforme à la norme • Voldoet aan de Standaard •  
 Mit der Norm • E' conforme allo standard • Overholder den standard • överstämmer med den standarden •  
 Noudattaa standardia • Conformata con la norma:

**EN836**

This cutting unit has been designed to be fitted to the • Ce bloc de coupe a été conçu pour se monter sur • Deze maai-eenheid werd ontworpen om te worden gemonteerd op de • übereinstimmt. Diese Schneidanlage wurde zur  
 Installation in • Questo gruppo di taglio è stata progettato per essere installato su • Dette klippeaggregat er beregnet til  
 montering på • Denna klippenheden är avsett att monteras på • Tämä leikkuulaite on suunniteltu sopimaan seuraavaan •  
 Esta unidad cortadora ha sido diseñada para su montaje en:

**Parkway 2250 Plus series WB**

  
**T. Lansdell**  
 Technical Director

Certificate Number: **PW2250WB-Incorp (rev.2)**

## 4 SPECIFICATION

**EC Declaration of Incorporation** • **Déclaration de constitution CE**  
**EG Verklaring van Conformiteit** • **EG Einbauerklärung**  
**Dichiarazione di costituzione CE** • **EF Erklæring om overholdelse af standard**  
**Överensstämmelse med EU:s regler** • **EY-liitântädeklaraatio**  
**Declaración de Incorporación de la CE**

We the undersigned • Nous, soussignés • Wij, de ondergetekenden •  
 Wir, die Unterzeichneten • Noi sottoscritti • Undertegnede • Nedanstående företag •  
 Me allekirjoittaneet • Nosotros, los abajo firmantes:

**Ransomes Jacobsen Limited**  
**Central Avenue, Ransomes Europark, Ipswich, England, IP3 9QG**

Certify that the cutting unit • Certifions que le bloc de coupe • Verklaren hierbij dat de maai-eenheid • Bescheinigen,  
 daß die Schneidanlage • Certifichiamo che il gruppo di taglio • Attesterer herved at dette klippeaggregat, • Intygat att  
 klippenheten • Vakuutamme, että leikkuulaite • Certificamos que la unidad cortadora

Make • Marque • Merk • Fabrikat • Marca • Fabrikat • Märke • Merkki • Marca: **Ransomes**

Product Code	Series	Description
LMA354	UG	Magna 250, 6 Knife, Fixed Head,
LMA355	UH	Magna 250, 6 Knife, Fixed Head,
LMA352	UV	Sport 200 8 Knife, Floating Head,
LMA353	UW	Sport 200 8 Knife, Floating Head,

Conforms to the Harmonised standard • Est conforme à la norme • Voldoet aan de Standaard •  
 Mit der Norm • E' conforme allo standard • Overholder den standard • överstämmer med den standarden •  
 Noudattaa standardia • Conformata con la norma:

### EN836

This cutting unit has been designed to be fitted to the • Ce bloc de coupe a été conçu pour se monter sur • Deze maai-  
 eenheid werd ontworpen om te worden gemonteerd op de • übereinstimmt. Diese Schneidanlage wurde zur  
 Installation in • Questo gruppo di taglio è stata progettato per essere installato su • Dette klippeaggregat er beregnet til  
 montering på • Denna klippenhet är avsett att monteras på • Tämä leikkuulaite on suunniteltu sopimaan seuraavaan •  
 Esta unidad cortadora ha sido diseñada para su montaje en:

### Hydraulic 3400 series UD & Hydraulic 4650 series UC




T. Lansdell  
 Technical Director

Certificate Number: **3400-UD-4650-UC-Incorp (rev.2)**



A = 009034940 Cation rotating blades

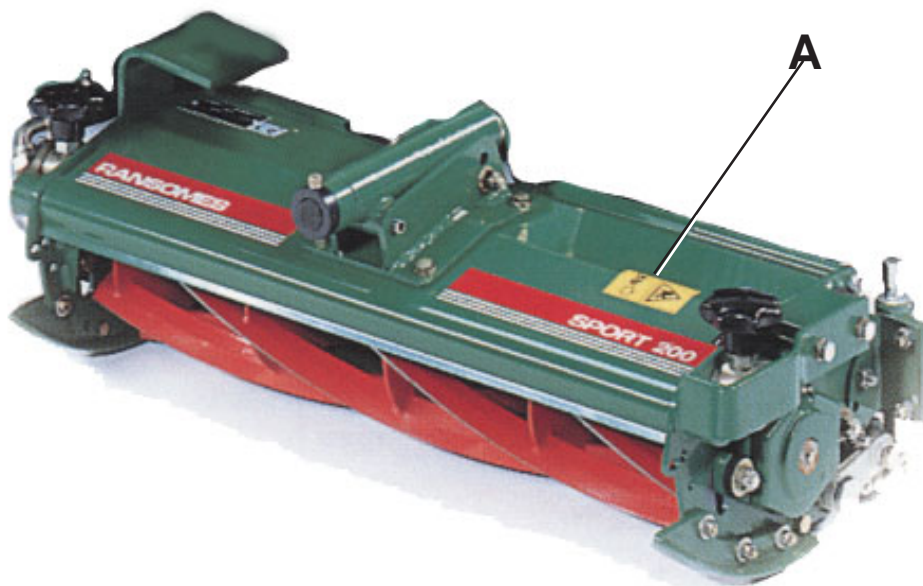

## 6 ASSEMBLY & OPERATION

---

### FITTING THE UNIT TO THE MACHINE



*Read the Safety Instructions*

Fitting the unit to the machine is described in the power unit operating instruction book.

### OPERATING THE UNIT



*Read the Safety Instructions*

Operating the unit is described in the power unit operating instruction book.



## 7 MAINTENANCE & LUBRICATION



*Read the Safety Instructions*

Lubricate the following with Shell Darina R2 grease.

Cutting cylinder bearings      weekly or every 50 hours.  
(A Fig.1)

Roll bearings                      weekly or every 50 hours.  
(A Fig.2)

Unit pivot                          weekly or every 50 hours.  
(A Fig.3)

Cylinder on cut adjusters - If for any reason the adjusters are dismantled they should be half filled with gear oil EP90.

### **Lubrication of Direct Drive Hydraulic Motor (Every 400 hours)**

Lower all cutting units onto level ground. Before leaving the driving position, stop the engine and make sure all moving parts are stationary. Apply brakes and disengage all drives. remove the starter key. The direct drive hydraulic motor can be removed from the cutting unit by removing the two screws and washers holding the motor to the bearing housing. Carefully withdraw the motor from the bearing housing, it is important not to contaminate the motor shaft or internal splines of the cutting cylinder. If for any reason they are contaminated, they should be cleaned by degreasing. Liberally lubricate the motor and cylinder splines with Shell Malleus JB1 grease (Textron Part no. MBE3927) before reassembling.

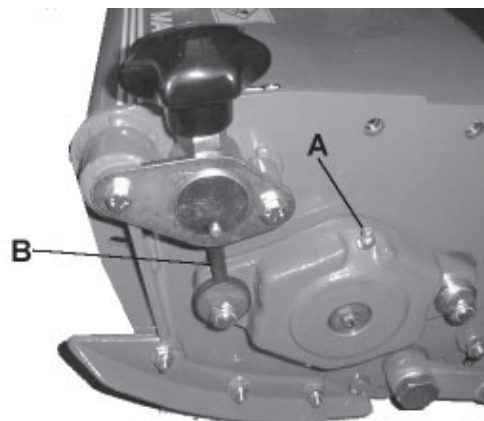


Fig.1

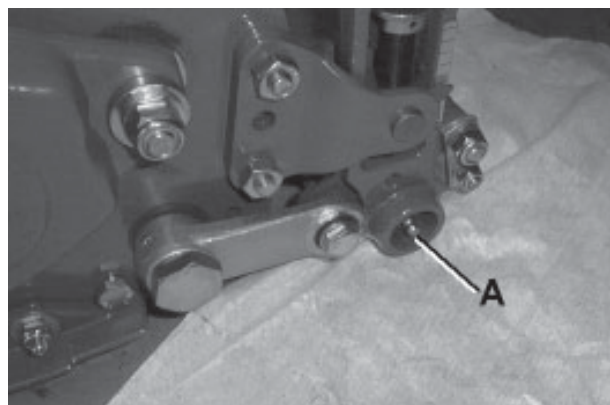


Fig.2

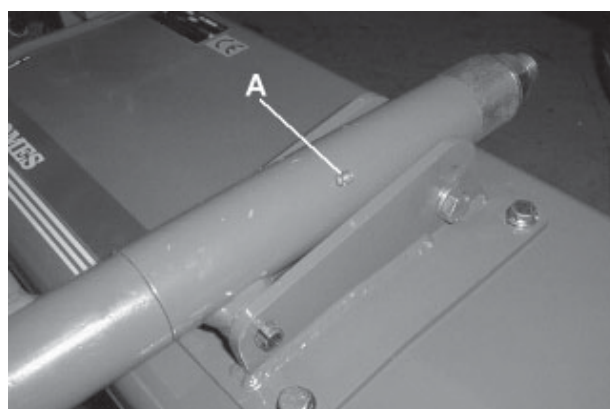


Fig.3



## **7 MAINTENANCE & LUBRICATION**



*Read the Safety Instructions*

**Check all nuts and bolts every 75 hours**

### **BELT DRIVE UNIT**

#### **HYDRAULIC MOTOR TO CUTTING CYLINDER**

This is located in the drive housing and is accessed by removing the drive housing complete with hydraulic motor from cutting unit. The cylinder drive belt should not need any adjustment in normal use.

#### **REMOVAL OF DRIVE HOUSING**

If the drive housing should need any maintenance it is first removed from the cylinder bearing housing by removal of two bolts M10 x 45 together with plain washers 10mm. (It is important these bolts and washers are used as any other arrangement will not give the correct engagement of bolt in the cylinder bearing housing).

#### **REMOVAL OF HYDRAULIC MOTOR**

To remove the hydraulic motor remove the bolts holding the motor to the drive housing. Carefully withdraw the motor together with its attached toothed pulley from the drive housing and toothed belt.

#### **REMOVAL OF DRIVE BELT**

Belt removal can now be achieved by the removal of the larger driven toothed pulley, the pulley assembly can be released from the drive housing by the removal of 3 screws, the belt can now be removed through the large drive housing orifice.

#### **BELT STORAGE AND HANDLING**

For storage, the belt should be protected from moisture, temperature extremes, direct sunlight and high ozone environments. The belt should be stored in its original package, avoiding any sharp bends or crimping, which will damage the belt.

There is no problem with leaving tension on the belt during equipment storage. Tension could be backed off if desired. Consideration should be given to extended storage of equipment with belts installed if the environment is detrimental as described above.

Handling of the Poly Chain GT belt is also important. Due to the high performance characteristics of the Poly Chain GT belt, do not twist, crimp, invert, bend or coil the belt. Belts should not be bent tighter than the smallest recommended pulley diameter for that cross section on the inside - approximately 60mm for 8mm pitch.

Backside bending should be limited to two times the inside permissible diameter. Under no circumstances should the belt be forced or prised onto a drive.

The belt may be cleaned by wiping with a rag slightly dampened with a light, non-volatile solvent, such as mineral spirits or paraffin. Soaking or brushing on of such a solvent is not advisable. More obviously, sanding or scraping the belt with a sharp object to remove grease or debris is not recommended. Similar solvent procedures should be applied to the pulleys.

#### **FITMENT OF DRIVE BELT, HYDRAULIC MOTOR AND DRIVE HOUSING**

1. Assemble toothed belt into drive housing through large orifice taking care not to 'crimp' or 'nip' the belt in anyway. The hydraulic motor complete with toothed pulley should be assembled next taking care to make sure the flange of the pulley is correctly assembled through the belt, with the belt sitting squarely on the pulley teeth.

2. Finally assemble the large pulley assembly retaining it with the 3 screws.

3. Belt adjustment is best achieved after the drive housing has been refitted to the cutting unit.

4. Fitting the drive housing assembly to the cylinder bearing housing is the reverse of REMOVAL OF DRIVE HOUSING. Care should be taken that the plastic drive element is correctly engaged between driving 'dogs' on the cylinder drive shaft and pulley.

#### **DRIVE BELT TENSIONING**

With the hydraulic motor clamp bolts just slack enough to allow the hydraulic motor to rotate about its pivot bolt grasp the hydraulic motor by one hand and pull upwards firmly to tension the belt and while held in this position tighten the clamp bolt and finally the pivot bolt.

### **DIRECT DRIVE UNIT**

#### **REMOVAL OF HYDRAULIC MOTOR**

To remove the hydraulic motor, remove the two screws and washers holding the motor to the bearing housing. Carefully withdraw the motor together with the cardan shaft.

**NOTE:** When dismantling it is important not to contaminate the cardan shaft or the internal splines of the hydraulic motor and cutting cylinder shaft. If for any reason they should become contaminated, they should be cleaned by degreasing and then lubricated using Shell Malleus JB1 grease before reassembling.

## 8 ADJUSTMENT



*Read Safety Instructions*

### HEIGHT OF CUT (FIG.4 & 5)

#### TO ADJUST HAND WHEEL TYPE:

1. Turn the adjuster handwheel or nut (A Fig.4) situated on handwheel clockwise (+) to increase the height of cut, or anticlockwise (-) to decrease the height of cut.

2. Ensure that an equal amount of adjustment is made to both adjusters on all the cutting units. To assist in obtaining equal adjustment height of cut indicators (B Fig.2) are provided at each end of the roll assembly.

**NOTE:** The numbers 1 to 9 are only for reference from one side of the roll to the other and bear no relation to the height of cut other than each graduation gives approximately 6.25mm (1/4in) height of cut movement for fixed head units and 3.75mm (5/32in) for floating head units. These indicators are set at the factory and when the pointer is set the same at each end of the roll the roll will be parallel with the bottom blade. If due to any reason the roll and bottom blade are not parallel with each other the roll can be set parallel with the bottom blade by rotating one of the handwheels and then one indicator adjusted by slackening the small clamping screw in the centre of the indicator plate and positioning the indicator relative to the pointer at the opposite end of the roll assembly.

3. No other adjustments are necessary.

4. THIS IS A SELF LOCKING MECHANISM THERE BEING NO NECESSITY TO UNLOCK OR LOCK THE MECHANISM.

#### TO ADJUST SPANNER TYPE:

- 1) Release the two screws (78 Fig.5) which hold the eccentric bush in the lever.
- 2) Turn the adjuster (83 Fig.5) at the rear of the unit, clockwise to reduce the height of cut, or anticlockwise to increase the height of cut.
- 3) After adjusting securely tighten screws (78 Fig.5).

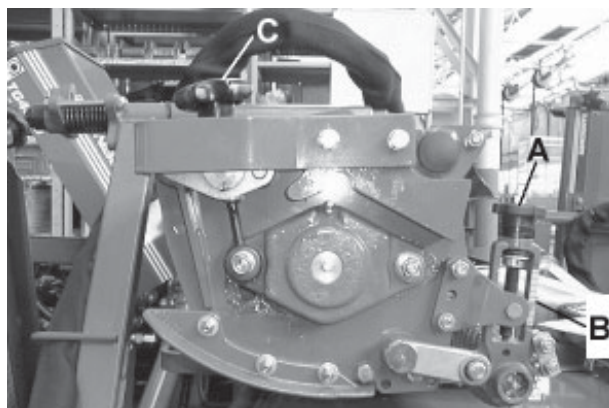


Fig.4

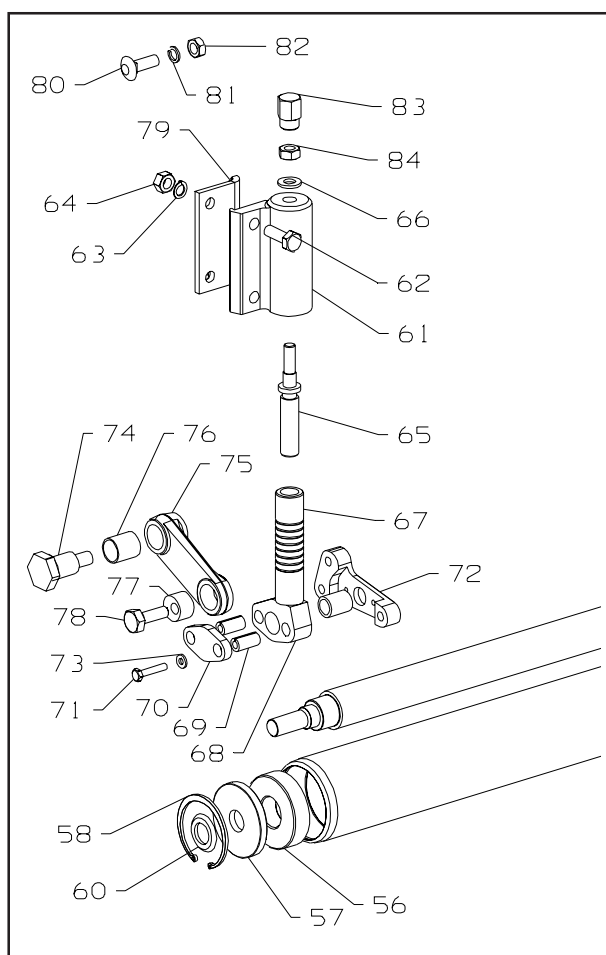


Fig.5

## 8 ADJUSTMENT

### SPORT 200 FIXED HEAD ADDITIONAL ADJUSTMENT

1. Accommodation for extra high height of cut adjustment is built into the cutting unit centre pivot.
2. By repositioning the rear centre pivot bolt height of cut up to 101mm (4in) can be achieved.

### SPORT 200 FLOATING HEAD FRONT ROLL SETTING

1. The right hand end of the front roll is fixed. To set the roll parallel to the bottom blade rotation of an eccentric clamping nut on the left hand front roll bearing housing is necessary.
2. Slacken left hand roll bearing housing clamping bolts.
3. Rotate the eccentric nut to give the desired parallelism of the roll to the bottom blade.
4. While still holding the eccentric nut from rotating tighten the the roll bearing housing clamping bolts.

### CUTTING CYLINDER TO BOTTOM BLADE ADJUSTMENT (FIG.6)

To check that the cutting cylinder is set to the bottom blade correctly, hold a piece of thin paper between the edge of the blade and the spiral cutters and turn the cylinder manually.

The paper should be cut cleanly along the total length of the bottom blade, if not, some adjustment may be necessary, BUT DO NOT OVERTIGHTEN. Alternatively if the cylinder is worn it may require back lapping before adjusting.

#### TO ADJUST HANDWHEEL TYPE:

1. To adjust the cylinder to the bottom blade turn alternately left and right hand handwheels (C Fig.6) clockwise to put on cut. A 'notching' effect will be felt as the handwheel is rotated in a clockwise direction this 'notching' is moving the cylinder in increments of approximately 0.035mm (0.0014in) towards the bottom blade.
2. The correct 'on cut' must be achieved with the adjustment mechanism 'slack' (i.e. between 'notches'). A requirement of the hand adjustment is that the cylinder must always be moved towards the bottom blade (i.e. clockwise rotation of handwheels)

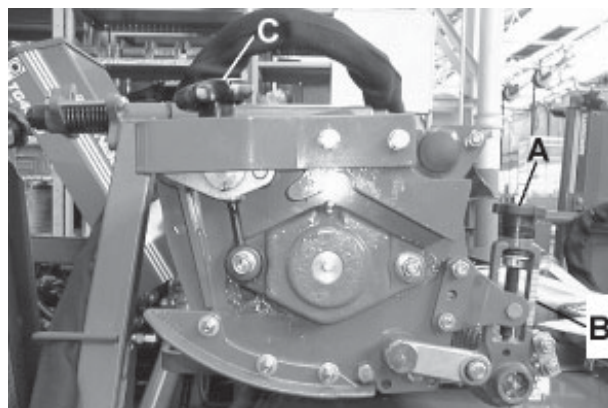


Fig.6



### CUTTING CYLINDER TO BOTTOM BLADE ADJUSTMENT

#### COMMANDER 3520

To ensure the cutting circuit has no back pressure. The following procedure should be used.

1. Stop cutting cylinder rotation by putting control lever into the neutral position.
2. The units should be raised (to close the diverter valves) then lowered and the engine switched off.

The cutting units can now be rotated freely to assist setting the cylinder to bottom blade.

## 8 ADJUSTMENT

to attain the correct cutting relationship of cylinder and bottom blade. NEVER PLACE CYLINDER HARD 'ON CUT', and by anticlockwise rotation of handwheel try to attain the correct cutting relationship.

3. If cylinder is placed too hard 'on cut' it must be adjusted to clear the bottom blade by anticlockwise rotation of handwheel then re-adjusted back down to the bottom blade.

4. THIS IS A SELF LOCKING MECHANISM THERE BEING NO NECESSITY TO UNLOCK OR LOCK THE MECHANISM.

### TO ADJUST SPANNER TYPE:

1. Slacken the cutting cylinder clamp nuts and bolts (48 Fig.7) on both sides of the unit and adjust the nuts (58 Fig.7) to bring the cylinder slightly off cut so that it will revolve freely.
2. Adjust the cylinder down to the bottom blade on one end of the unit until the blade of the cylinder lightly contacts the bottom blade. Back off the adjustment slightly until the blades are just clear of each other.
3. Repeat the adjustment on the opposite end of the unit until the cylinder contacts the bottom blade.
4. Finally, the first end of the cylinder should be adjusted down again so that it just contacts the bottom blade.
5. Re-tighten the cylinder bearing housing clamp bolts and nuts (48 Fig.7) securely.

**NOTE:** When using the above method it should be possible to rotate the cylinder freely during all stages of adjustment.

### CUTTING CYLINDER BEARINGS

The cutting cylinder bearings are self adjusting taper roller bearings and require no adjustments.

### FRONT AND REAR ROLL BEARINGS

The roll bearings are self adjusting taper roller bearings and require no adjustment

### GRASS DEFLECTOR

The grass deflector can be positioned by hand as it is 'friction clamped' by nuts (tightening the nuts will increase the clamping effect).

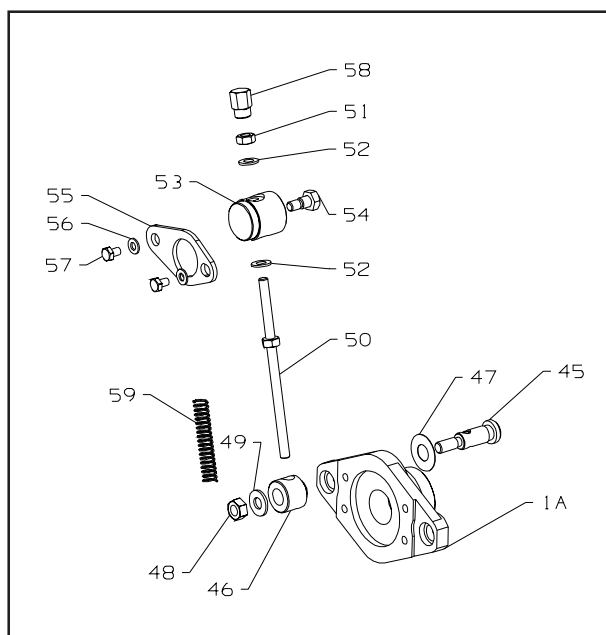


Fig.7

### VERTICUT REEL ADJUSTMENT.

The position of the reel must not be altered after being set. Any changes required in height must only be made by moving the front and rear rolls. Normal setting of the blades is that the tips should be 3mm (1/8 in) above the ground. The blade tips MUST NOT penetrate the top surface of the soil.

To Adjust :

- (a) Release bolt and nut at front end.
- (b) Turn adjusters above rear roll clockwise to reduce height of cut and anticlockwise to increase height of cut.
- (c) Re-tighten nut at front of skid.

## **9 END OF SEASON**

---

- a. The units should be thoroughly cleaned down to remove all accumulations of grass clippings and debris.
- b. Turn the cutting cylinders to clean the cutting edges.
- c. Apply a little oil with a brush to the spiral cutters to prevent rusting.
- d. Slowly turn the cylinders which will then spread the oil on the bottom blades.

**WARNING NOTE:** Do not turn the cylinders manually.

## **GUARANTEE**

We GUARANTEE that should any defect in workmanship or material occur in the goods within TWO YEARS or two thousand hours (on models equipped with hour meters), or whichever occurs first.

Exception to this warranty will be Aeration products, which are covered for a period of TWO-YEARS or five hundred hours (on models equipped with hour meters) or whichever occurs first.

We will repair, or at our option, replace the defective part without making any charge for labour or for materials, provided that the claim under this guarantee is made through an authorised dealer and that the defective part shall, if we so request, be returned to us or to the dealer.

This guarantee is in addition to, and does not exclude, any condition or warranty implied by law, except that we accept no liability in respect of used/second-hand goods, or in respect of defects which in our opinion are in any way or to any extent attributable to misuse, lack of reasonable care or ordinary wear and tear, or to the fitting of spares, replacements, or extra components which are not supplied or approved by us for the purpose. The use of non-recommended oil or lubricant nullifies the guarantee.

Damage through transport or normal wear does not come under the guarantee.

The warranty is extended to the original purchaser only and is not transferable to subsequent owners. The warranty period begins on the date the product is delivered to the end user (customer), unless otherwise agreed with the manufacturer. At the end of the first year the owner must have the product serviced by an authorised dealer to be eligible for the second year of warranty coverage.

## **SALES & SERVICE**

A network of authorised Sales and Service dealers has been established and these details are available from your supplier.

When service attention, or spares, are required for the machine, within or after the guarantee period your supplier or any authorised dealer should be contacted.

Always quote the registered number of the machine.

If any damage is apparent when delivery is made, report the details at once to the supplier of the machine.



## **HOW TO USE THE PARTS MANUAL**

### **ITEM NUMBER**

Each part which is identified in the illustrations has an item number. Parts which do not have an item number may not be readily identified in the illustration but are usually closely associated with the immediately adjacent part.

### **ASSEMBLIES**

A complete assembly, e.g. a wheel motor or hydraulic motor or roll assembly, is listed as a complete item with subsequent individual components listed separately.

The assembly is listed under its part number with component parts being listed offset to the right, e.g:-

ITEM	PART NO.	DESCRIPTION	QTY	REMARKS
1	LMSD798	Roll Assy.	1	ALL MACHINES
2	MBB4490	• Tube	1	
3	LMSD926	• End Cap Assy.	2	
4	MBB6851	• • End Cap	1	
5	H009116	• • Bearing	1	
6	MBB2356	• Seal Housing	1	
7	A224016	• Seal	2	
*	A122192	Screw	2	

It may not be possible to illustrate every item. With certain items purchased from outside suppliers some component parts may not be available from Ransomes and may need to be specially ordered from the supplier e.g. Volvo hydraulic motor components.

### **QUANTITIES**

Quantities shown are for one assembly or sub-assembly.

### **USING THE PARTS LIST**

Determine the function and application of the part required. Turn to the main index page and select the appropriate section. Locate the part on the illustration and parts list and read off the quantity from the appropriate MODEL column.

### **NUMERICAL INDEX**

This is a summary of all part numbers used in the manual arranged in numerical sequence and showing the page and item number under which the parts appear.

### **ORDERING OF SPARE PARTS**

When ordering replacement parts, it is most important to quote the SERIAL NUMBER of the machine, PART NUMBER, DESCRIPTION and QUANTITY required.

Any arbitrary modifications carried out on this machine may relieve the manufacturer of liability for any resulting damage or injury.

### **ABBREVIATIONS**

N/A Not Available  
AR As Required





## 1 CONTENTS

---

Contents:	Page
1 CONTENTS .....	1
2.2 PRODUCTIDENTIFICATIE .....	2
2.1 BELANGRIJK .....	2
2.3 GUIDELINES FOR THE DISPOSAL PRODUCTS .....	2
3 VEILIGHEIDSINSTRUCTIES .....	4
3.1 BEDIENINGSVOORSCHRIFTEN .....	4
3.2 VEILIGHEIDSINDICATIES .....	4
3.3 DE MOTOR STARTEN .....	4
3.4 DE MACHINE BESTUREN .....	4
3.6 HET VERLATEN VAN DE .....	5
3.7 HELLINGEN .....	5
3.8 GEBLOKKEERDE MAAICILINDERS .....	5
3.9 AFSTELLINGEN, SMERING EN ONDERHOUD .....	5
4 SPECIFICATIES .....	7
5 STICKERS .....	12
6 DE EENHEID OP DE MACHINE MONTEREN .....	13
7 ONDERHOUD .....	15
8 AFSTELLINGEN .....	17
9 ONDERHOUD AAN HET EIND VAN HET SEIZOEN .....	18
10 GARANTIE .....	19

## **2 INTRODUCTIE**

### **2.1 BELANGRIJK**

**BELANGRIJK:** Dit is een precisie-machine en de kwaliteit van de werkzaamheden die hiermee kunnen worden uitgevoerd, is afhankelijk van de manier waarop de maaimachine wordt bediend en onderhouden.

Dit bedienershandboek dient te worden gezien als een onderdeel van de machine. Leveranciers van zowel nieuwe als tweedehands-machines worden geadviseerd om altijd documentair bewijsmateriaal beschikbaar te hebben waaruit blijkt dat dit handboek bij de machine werd geleverd.


Deze machine werd uitsluitend ontworpen als een grasmaaimachine. Als de machine voor andere doeleinden wordt gebruikt, dan zal dit worden geïnterpreteerd als een inbreuk op de toepassingsmogelijkheden waarvoor de machine bestemd is. Het nakomen van en het zich houden aan de bedrijfscondities, het onderhoud en de reparaties overeenkomstig de specificaties van de klant, zijn in feite ook essentiële elementen van het bedoelde gebruik van de machine.

Voordat wordt getracht om deze machine te bedienen, dienen ALLE bedieners dit handboek goed te hebben doorgelezen. Ook moeten zij geheel op de hoogte zijn van de veiligheidsinstructies, de bedieningsorganen, de smering en het onderhoud.

Bepalingen voor de preventie van ongevallen, alle andere algemeen erkende bepalingen van toepassing op veiligheid en de medische behandeling van bedrijfsrisico's en alle bepalingen in de wegenverkeerswet, mogen nooit worden overschreden.

Het is mogelijk dat door eventueel eigenmachtig aan de machine uitgevoerde modificaties, de fabrikant wordt ontheven van verwondingen voortvloeiend uit eventuele beschadiging of verwondingen.

### **2.2 PRODUCTIDENTIFICATIE**

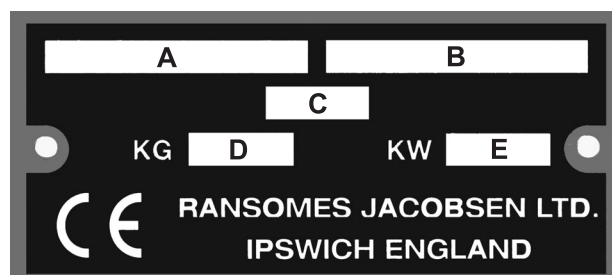

- A    Machinenaam
- B    Serienummer
- C    Productiejaar
- D    Machinegewicht
- E    Motorvermogen

## 2 INTRODUCTION

### 2.3 RICHTLIJNEN VOOR HET AFVOEREN VAN AFVALPRODUCTEN

Wanneer wordt bepaald dat een gazonverzorgingsproduct geen verdere functionele waarde meer heeft en moet worden weggegooid, moet het volgende gedaan worden.

Deze richtlijnen dienen te worden gebruikt in combinatie met de toepasbare Gezondheid, Veiligheid en Milieuwetgeving en het gebruik van goedgekeurde lokale faciliteiten voor afvalverwerking en recycling.

- Zet de machine op een geschikte plaats zodat de nodige hefinstrumenten kunnen worden gebruikt.
- Gebruik geschikt gereedschap en Persoonlijke Veiligheidsuitrusting (Personal Protective Equipment, PPE) en laat u leiden door de technische handleidingen die bij de machine horen.
- Verwijder en sla op de juiste manier op:
  1. Accu
  2. Brandstofresten
  3. Koelvloeistof van de motor
  4. Olie
- Haal daar waar nodig de machine uit elkaar met behulp van de technische handleidingen. Speciale aandacht moet worden gegeven aan het omgaan met 'opgeslagen energie' in de elementen van de machine, die onder druk staan, of gespannen veren.
- Elk onderdeel dat nog bruikbaar is als tweedehands component of kan worden hergebruikt moet apart worden gehouden en worden teruggestuurd naar het relevante servicepunt.

- Overige versleten onderdelen moeten worden gescheiden in materiaalgroepen voor recycling en afvoer overeenkomstig met de beschikbare faciliteiten. De meer gebruikelijke scheiding is als volgt:

- Staal
- Niet ijzerhoudende metalen
  - Aluminium
  - Koper (geel)
  - Koper (rood)
- Plastics
  - Identificeerbaar
    - Recyclebaar
    - Niet recyclebaar
  - Niet identificeerbaar
- Rubber
- Onderdelen die niet economisch kunnen worden gescheiden in verschillende materiaalgroepen moeten aan een groep 'Algemeen afval' worden toegevoegd.
- Afval niet verbranden.

Werk tenslotte de machinebestanden bij om aan te geven dat de machine uit de handel is genomen en is gedemonteerd.

### 3 VEILIGHEIDSinSTRUCTIES



Door dit veiligheidssymbool worden belangrijke veiligheidsmeldingen in dit handboek aangegeven. Als u dit symbool ziet, wees u dan bewust van fysieke risico's. Altijd de bijbehorende instructies goed lezen en ook andere bedieners op de hoogte brengen.

#### 3.1 BEDIENINGSVOORSCHRIFTEN

- Zorg ervoor dat alle machinebedieners de voorschriften in dit boek lezen en volledig begrijpen.
- Machinebedieners mogen deze machine pas bedienen wanneer ze alle bedieningsinrichtingen en veiligheidsprocedures kennen. Nooit kinderen of mensen die niet bekend zijn met deze instructies, deze machine laten gebruiken.
- Het is mogelijk dat door plaatselijke wettelijke bepalingen wordt gesteld dat personen onder een bepaalde leeftijd, deze machine niet mogen gebruiken.

#### 3.2 VEILIGHEIDSinDICATIES

- Het is essentieel dat alle veiligheidsetiketten goed leesbaar blijven. Als dergelijke etiketten niet aanwezig zijn, of onleesbaar worden, dan moeten die altijd worden vervangen. Als een onderdeel van de machine wordt vervangen, waarop oorspronkelijk een veiligheidsetiket was aangebracht, een dergelijk etiket ook altijd weer aanbrengen op het nieuwe onderdeel. Nieuwe veiligheidsetiketten kunnen worden aangevraagd bij de Afdeling Onderdelen van Ransomes.

#### 3.3 DE MOTOR STARTEN

- Controleer, voordat de motor wordt gestart, of de remmen zijn aangehaald, de aandrijfmechanismen in de neutrale stand staan, de beveiligingsmiddelen zijn aangebracht en intact zijn en er geen omstanders in de buurt van de machine staan.
- Start de motor niet in een gebouw zonder goede ventilatie.

#### 3.4 DE MACHINE BESTUREN

- Controleer, voordat de machine wordt verplaatst, of alle onderdelen goed functioneren. Let daarbij vooral op de remmen, de banden, de stuurinrichting en de beveiliging van snijcilinders.
- Defecte dempers vervangen. Uitsluitend maaien bij daglicht of als goed kunstlicht beschikbaar is.
- Neem altijd de verkeersvoorschriften in acht, zowel op openbare wegen als elders. Blijf altijd alert. In de buurt van wegen of gedurende het oversteken van wegen, altijd letten op andere weggebruikers.
- Voordat over andere oppervlakken dan gras wordt gereden, de maaibladen altijd stilzetten.
- Denk eraan dat sommige mensen doof of blind zijn en dat kinderen en dieren onvoorspelbaar kunnen reageren.
- Houd een rijsnelheid aan die laag genoeg is om te allen tijde en onder alle omstandigheden een effectieve en veilige noodstop te kunnen maken.
- Verwijder of vermijd obstakels in het gebied dat wordt gemaaid, om te voorkomen dat uzelf en/of omstanders letsel oplopen.
- Let extra goed op obstakels en/of omstanders wanneer de machine achteruitrijdt. NOOIT passagiers meevoeren.
- Nooit vergeten dat de bediener of gebruiker verantwoordelijk blijft voor ongevallen of risico's waaraan andere personen of hun eigendommen kunnen worden blootgesteld.
- Als de machine wordt geparkeerd, opgeslagen of onbewaakt wordt achtergelaten, de maaieenheid altijd laten zakken tenzij de transport-vergrendeling wordt gebruikt.
- Gedurende het maaien, altijd stevig schoeisel en een lange pantalon dragen. De uitrusting nooit op blote voeten bedienen. Ook nooit open sandalen dragen.
- De grasopvangbak regelmatig controleren. Altijd letten op tekenen die wijzen op slijtage of beschadiging. Als een voorwerp wordt geraakt, altijd een controle uitvoeren. De maaimachine controleren op tekenen die wijzen op beschadiging. Vóór het starten of bedienen van de machine altijd eerst de noodzakelijke reparaties uitvoeren.
- Als de machine zeer sterk gaat trillen, altijd onmiddellijk controleren.

### 3 VEILIGHEIDSinSTRUCTIES

#### 3.5 DE MACHINE VERVOEREN

- Zorg ervoor dat de maaieenheden stevig zijn vergrendeld in de transportstand. Vervoer de machine niet met een draaiende maai-inrichting.
- Let bij het vervoer van de machine op de conditie van het wegdek, hellingen en plaatselijke oneffenheden.
- Door plotseling snelheid te verminderen of te remmen kunnen de achterwielen omhoog komen.
- Onthoud dat de stabiliteit van de achterkant van de machine vermindert naarmate de brandstof wordt verbruikt.

#### 3.6 HET VERLATEN VAN DE BESTUURDERSPLAATS

- Parkeer de machine op een horizontaal vlak.
- Alvorens de bestuurdersplaats te verlaten, moet de motor worden stilgezet en dient u zich ervan te overtuigen dat alle bewegende delen stationair zijn. Trek de parkeerrem aan en ontkoppel alle aandrijvingen. Verwijder de contactsleutel.

#### 3.7 HELLINGEN

##### WEES EXTRA VOORZICHTIG TIJDENS HET WERKEN OP HELLINGEN

- Plaatselijke terreingolving en -verzakking veranderen de globale hellingshoek. Vermijd bodemomstandigheden die verschuiving van de machine kunnen veroorzaken.
- Op hellingen en bij het nemen van nauwe bochten moet met lage snelheid worden gereden.
- Plotseling versnellen of remmen kan omhoogbrenging van de achterwielen veroorzaken. Onthoud dat er geen 'veilige' helling bestaat.
- Neem u bijzonder in acht tijdens het rijden op grashellingen.

##### VERMIJD HELLINGEN STEILER DAN 15°

**BELANGRIJK:** Wanneer op een helling wordt gewerkt dient, waar aangebracht, de gewichtsverplaatsing in de maximumstand (+) te worden gezet.

#### 3.8 GEBLOKKEERDE MAAICILINDERS

- Zet de motor stil en overtuig u ervan dat alle bewegende delen stationair zijn.
- Trek de parkeerrem aan en ontkoppel alle aandrijvingen.

- Verwijder de blokkering zorgvuldig. Houd alle lichaamsdelen op veilige afstand van de snijrand. Wees attent op energie in de aandrijving die rotatie kan veroorzaken zodra de blokkering is opgeheven.
- Houd omstanders op veilige afstand van de maaieenheden aangezien draaiing van een van de cilinders hetzelfde bij de andere kan teweegbrengen.

#### 3.9 AFSTELLINGEN, SMERINGEN ONDERHOUD

- Zet de motor stil en overtuig u ervan dat alle bewegende delen stationair zijn.
- Trek de handrem aan en ontkoppel alle aandrijvingen.
- Lees alle toepasselijke onderhoudsvoorschriften aandachtig door.
- Gebruik uitsluitend de vervangingsonderdelen die door de oorspronkelijke fabrikant zijn geleverd.
- Bij het afstellen van de maaicilinders moet worden voorkomen dat handen of voeten bekneld raken tijdens draaiing ervan.
- Zorg ervoor dat niemand de maaieenheden aanraakt, aangezien draaiing van een van de cilinders hetzelfde bij de andere kan teweegbrengen.
- Om brandgevaar te verminderen dienen de motor, geluiddemper en accuhouder vrij van gras, bladeren en overmatig veel vet te blijven.
- Vervang versleten of beschadigde delen uit veiligheidsoverwegingen.
- Tijdens werkzaamheden onder geheven onderdelen of machines moet worden verzekerd dat sprake is van voldoende ondersteuning.
- Demonteer de machine niet zonder voorafgaande ontspanning of beheersing van krachten die er de oorzaak van kunnen zijn dat onderdelen plotseling bewegen.
- Verander het motortoerental niet tot boven het maximum dat in de motorspecificatie wordt aangegeven. Ook de afstelling van de motorreguleerder mag niet worden veranderd en de motor mag nooit worden overbelast. Het laten lopen van de motor met een te hoog toerental kan het gevaar van lichamelijk letsel doen toenemen.
- Bijvullen van brandstof: MOTOR STILZETTEN EN NIET ROKEN. Bijvullen moet dus gebeuren voordat de motor wordt gestart en nooit terwijl de motor loopt.

### 3 VEILIGHEIDSINSTRUCTIES

- Gebruik een trechter wanneer brandstof uit een jerrycan of blik in de tank wordt gegoten.
- Vul de brandstoftank nooit hoger dan tot de onderkant van de vulhals.
- Plaats de brandstofdop en de afsluiting van de houder zorgvuldig terug.
- Bewaar brandstof in specifiek voor dat doel bestemde houders.
- Bijvulling van brandstof mag uitsluitend in de openlucht gebeuren waarbij niet mag worden gerookt.
- Na het morsen van brandstof mag de motor niet worden gestart maar dient de machine van de betreffende plaats te worden weggeduwd. Vermijd het ontstaan van enige ontstekingsbron totdat het gemorste is opgenomen en de brandstofdampen zijn vervlogen.
- Laat de motor eerst afkoelen voordat de machine overdekt wordt gestald.
- Stal de machine nooit met brandstof in de tank in een ruimte waar de dampen een open vlam of vonk kunnen bereiken.
- Als de brandstoftank moet worden afgetapt, dient dit altijd in de openlucht te gebeuren.
- Mors geen brandstof op hete onderdelen.
- Tijdens het onderhoud van accu's MAG NIET WORDEN GEROOKT en moeten open licht op veilige afstand worden gehouden.
- Leg nooit een metalen voorwerp op de polen.

**GEVAAR** - Aanduiding van een dreigende gevaarlijke situatie die, indien niet vermeden, **ZAL** resulteren in dodelijke verwonding of ernstig letsel.

**WAARSCHUWING** - Aanduiding van een potentieel gevaarlijke situatie die, indien niet vermeden, **KAN** resulteren in dodelijke verwonding of ernstig letsel.

**VOORZICHTIG** - Aanduiding van een potentieel gevaarlijke situatie die, indien niet vermeden, **KAN** resulteren in licht tot middelmatig letsel en beschadiging van eigendommen. Kan tevens worden gebruikt om de aandacht op onveilige praktijken te vestigen.

**BELANGRIJK:** Rijsnelheid is uitsluitend bestemd voor gebruik op openbare weg. Kies de rijsnelheid nooit op grasgebieden noch op oneffen of onbestrate/ongeasfalteerde wegen/paden.



#### WAARSCHUWING



Onder druk ontsnappende hydraulische vloeistof kan door de huid dringen en ernstige verwondingen veroorzaken. Altijd onmiddellijk medische hulp inroepen.

## 4 SPECIFICATIES

### MAGNA 250.

#### CONSTRUCTIE

Zwaar gelaste, uit geperst staal vervaardigde, constructie

#### CILINDER:

Diameter:	254mm
Maaibreedte:	762mm
Aantal messen:	4, 6 en 8
Maiihoogte:	12.7mm - 61mm

### SPORT 200

#### CONSTRUCTIE

Zwaar gelaste, uit geperst staal vervaardigde, constructie

#### CILINDER:

Diameter:	197mm
Maaibreedte:	762mm
Aantal messen:	4, 6, 8 en 11
Maiihoogte	
Vaste kop:	12.7mm - 89mm
Zwevende kop	
Standaard blad:	12.7mm - 35.7mm
Dun blad:	9mm - 32mm

### MAGNA 250 EN SPORT 200

#### MAAIHOOGTE-AFSTELLING

Stelschroefstelsysteem op achterste rol. (MAGNA 250 & SPORT200)

Vaste voorste rol. (SPORT 200 met zwevende kop)

#### ACHTERSTEROL

Massieve rol met 76mm diameter over volle breedte op tapse rollagers met asafdichtingen en smerinrichtingen.

#### VOORSTEROL

Gegroefde rol met 76mm diameter over volle breedte op tapse rollagers met asafdichtingen en smerinrichtingen.

#### ONDERSTEBLOK & MAIIBLAD

Vervangbaar blad op uitstaal vervaardigd onderste blok.

#### OVERBRENGING

Doormiddel van een hydraulische motor via een aandrijfriem naar de maaicilinder; of door middel van een hydraulische motor via een cardanas naar de maaicilinder.

# RANSOMES SPORT 200 & MAGNA 250 CUTTING UNITS

## Veiligheids-, Bedienings-en Onderhouds

### 4 SPECIFICATIES

**EC Declaration of Incorporation** • **Déclaration de constitution CE**  
**EG Verklaring van Conformiteit** • **EG Einbauerklärung**  
**Dichiarazione di costituzione CE** • **EF Erklæring om overholdelse af standard**  
**Överensstämmelse med EU:s regler** • **EY-liitântädeklaraatio**  
**Declaración de Incorporación de la CE**

We the undersigned • Nous, soussignés • Wij, de ondergetekenden •  
 Wir, die Unterzeichneten • Noi sottoscritti • Undertegnede • Nedanstående företag •  
 Me allekirjoittaneet • Nosotros, los abajo firmantes:

**Ransomes Jacobsen Limited**  
**Central Avenue, Ransomes Europark, Ipswich, England, IP3 9QG**

Certify that the cutting unit • Certifions que le bloc de coupe • Verklaren hierbij dat de maai-eenheid • Bescheinigen,  
 daß die Schneidanlage • Certifichiamo che il gruppo di taglio • Attesterer herved at dette klippeaggregat, • Intygat att  
 klippenheten • Vakuutamme, että leikkuulaite • Certificamos que la unidad cortadora

Make • Marque • Merk • Fabrikat • Marca • Fabrikat • Märke • Merkki • Marca: **Ransomes**

Product Code	Series	Description
LMAB751	AF	Magna 250, 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB752	AG	Magna 250, 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB753	AH	Magna 250, 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB755	AT	Magna 250, 8 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB756	AU	Magna 250 8 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB757	AV	Magna 250 8 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB829	AW	Sport 200 8 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB830	AX	Sport 200 8 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB831	AY	Sport 200 8 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB833	AZ	Sport 200 11 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB834	BA	Sport 200 11 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB835	BB	Sport 200 11 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB789	BC	Sport 200 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB790	BD	Sport 200 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB791	BD	Sport 200 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment

Conforms to the Harmonised standard • Est conforme à la norme • Voldoet aan de Standaard •  
 Mit der Norm • E' conforme allo standard • Overholder den standard • överstämmer med den standarden •  
 Noudattaa standardia • Conformata con la norma:

#### EN836

This cutting unit has been designed to be fitted to the • Ce bloc de coupe a été conçu pour se monter sur • Deze maai-  
 eenheid werd ontworpen om te worden gemonteerd op de • übereinstimmt. Diese Schneidanlage wurde zur  
 Installation in • Questo gruppo di taglio è stata progettato per essere installato su • Dette klippeaggregat er beregnet til  
 montering på • Denna klippenhet är avsett att monteras på • Tämä leikkuulaite on suunniteltu sopimaan seuraavaan •  
 Esta unidad cortadora ha sido diseñada para su montaje en:

**Commander 3520 series ZE**

  
**T. Lansdell**  
 Managing Director

Certificate Number: **Com3520ZE-Incorp (rev.2)**



### 4 SPECIFICATIES

**EC Declaration of Incorporation** • **Déclaration de constitution CE**  
**EG Verklaring van Conformiteit** • **EG Einbauerklärung**  
**Dichiarazione di costituzione CE** • **EF Erklæring om overholdelse af standard**  
**Överensstämmelse med EU:s regler** • **EY-liitântädeklaraatio**  
**Declaración de Incorporación de la CE**

We the undersigned • Nous, soussignés • Wij, de ondergetekenden •  
 Wir, die Unterzeichneten • Noi sottoscritti • Undertegnede • Nedanstående företag •  
 Me allekirjoittaneet • Nosotros, los abajo firmantes:

**Ransomes Jacobsen Limited**  
**Central Avenue, Ransomes Europark, Ipswich, England, IP3 9QG**

Certify that the cutting unit • Certifions que le bloc de coupe • Verklaren hierbij dat de maai-eenheid • Bescheinigen, daß die Schneidanlage • Certifichiamo che il gruppo di taglio • Attesterer herved at dette klippeaggregat, • Intygat att klippenheten • Vakuutamme, että leikkuulaite • Certificamos que la unidad cortadora

Make • Marque • Merk • Fabrikat • Marca • Fabrikat • Märke • Merkki • Marca: **Ransomes**

Product Code	Series	Description
LMAB577	WK	Sport 200 4 Knife, Fixed Head, Standard Roll, Spanner Adjustment
LMAB578	WL	Sport 200 4 Knife, Fixed Head, Standard Roll, Spanner Adjustment
LMAB546	WM	Sport 200 4 Knife, Fixed Head, Disposable Roll, Spanner Adjustment
LMAB548	WN	Sport 200 4 Knife, Fixed Head, Disposable Roll, Spanner Adjustment
LMAB579	WP	Sport 200 4 Knife, Fixed Head, Standard Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB580	WQ	Sport 200 4 Knife, Fixed Head, Standard Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB549	WR	Sport 200 4 Knife, Fixed Head, Disposable Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB550	WS	Sport 200 4 Knife, Fixed Head, Disposable Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB581	WT	Sport 200 6 Knife, Fixed Head, Standard Roll, Spanner Adjustment
LMAB582	WU	Sport 200 6 Knife, Fixed Head, Standard Roll, Spanner Adjustment
LMAB551	WV	Sport 200 6 Knife, Fixed Head, Disposable Roll, Spanner Adjustment
LMAB552	WV	Sport 200 6 Knife, Fixed Head, Disposable Roll, Spanner Adjustment
LMAB583	WX	Sport 200 6 Knife, Fixed Head, Standard Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB584	WY	Sport 200 6 Knife, Fixed Head, Standard Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB553	WZ	Sport 200 6 Knife, Fixed Head, Disposable Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB554	XA	Sport 200 6 Knife, Fixed Head, Disposable Roll, Spanner HOC, Handwheel on Cut Adjustment
LMAB445	XT	Sport 200 11 Knife Floating Head, Standard Roll, Handwheel Adjustment
LMAB446	XU	Sport 200 11 Knife Floating Head, Standard Roll, Handwheel Adjustment

Conforms to the Harmonised standard • Est conforme à la norme • Voldoet aan de Standaard •  
 Mit der Norm • E' conforme allo standard • Overholder den standard • överstämmer med den standarden •  
 Noudattaa standardia • Conformata con la norma:

#### EN836

This cutting unit has been designed to be fitted to the • Ce bloc de coupe a été conçu pour se monter sur • Deze maai-eenheid werd ontworpen om te worden gemonteerd op de • übereinstimmt. Diese Schneidanlage wurde zur Installation in • Questo gruppo di taglio è stata progettato per essere installato su • Dette klippeaggregat er beregnet til montering på • Denna klippenhett är avsett att monteras på • Tämä leikkuulaite on suunniteltu sopimaan seuraavaan • Esta unidad cortadora ha sido diseñada para su montaje en:

**Highway 2130 series WJ, CS, CU, DK**

  
**T. Lansdell**  
 Technical Director

Certificate Number: **HW2130WJ-Incorp (rev.2)**

# RANSOMES SPORT 200 & MAGNA 250 CUTTING UNITS

## Veiligheids-, Bedienings-en Onderhouds

### 4 SPECIFICATIES

**EC Declaration of Incorporation** • **Déclaration de constitution CE**  
**EG Verklaring van Conformiteit** • **EG Einbauerklärung**  
**Dichiarazione di costituzione CE** • **EF Erklæring om overholdelse af standard**  
**Överensstämmelse med EU:s regler** • **EY-liitântädeklaraatio**  
**Declaración de Incorporación de la CE**

We the undersigned • Nous, soussignés • Wij, de ondergetekenden •  
 Wir, die Unterzeichneten • Noi sottoscritti • Undertegnede • Nedanstående företag •  
 Me allekirjoittaneet • Nosotros, los abajo firmantes:

**Ransomes Jacobsen Limited**  
**Central Avenue, Ransomes Europark, Ipswich, England, IP3 9QG**

Certify that the cutting unit • Certifions que le bloc de coupe • Verklaren hierbij dat de maai-eenheid • Bescheinigen,  
 daß die Schneidanlage • Certificiamo che il gruppo di taglio • Attesterer herved at dette klippeaggregat, • Intygat att  
 klippenheten • Vakuutamme, että leikkuulaite • Certificamos que la unidad cortadora

Make • Marque • Merk • Fabrikat • Marca • Fabrikat • Märke • Merkki • Marca: **Ransomes**


Product Code	Series	Description
LMAB751	AF	Magna 250, 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB752	AG	Magna 250, 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB753	AH	Magna 250, 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB755	AT	Magna 250, 8 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB756	AU	Magna 250 8 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB757	AV	Magna 250 8 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB829	AW	Sport 200 8 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB830	AX	Sport 200 8 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB831	AY	Sport 200 8 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB833	AZ	Sport 200 11 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB834	BA	Sport 200 11 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB835	BB	Sport 200 11 Knife, Floating Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB789	BC	Sport 200 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB790	BD	Sport 200 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment
LMAB791	BD	Sport 200 6 Knife, Fixed Head, Spanner HOC, Handwheel on Cut Adjustment

Conforms to the Harmonised standard • Est conforme à la norme • Voldoet aan de Standaard •  
 Mit der Norm • E' conforme allo standard • Overholder den standard • överstämmer med den standarden •  
 Noudattaa standardia • Conformata con la norma:

#### EN836

This cutting unit has been designed to be fitted to the • Ce bloc de coupe a été conçu pour se monter sur • Deze maai-  
 eenheid werd ontworpen om te worden gemonteerd op de • übereinstimmt. Diese Schneidanlage wurde zur  
 Installation in • Questo gruppo di taglio è stata progettato per essere installato su • Dette klippeaggregat er beregnet til  
 montering på • Denna klippenhet är avsett att monteras på • Tämä leikkuulaite on suunniteltu sopimaan seuraavaan •  
 Esta unidad cortadora ha sido diseñada para su montaje en:

**Parkway 2250 Plus series WB**

  
**T. Lansdell**  
 Technical Director

Certificate Number: **PW2250WB-Incorp (rev.2)**

4 SPECIFICATIES

EC Declaration of Incorporation • Déclaration de constitution CE  
EG Verklaring van Conformiteit • EG Einbauerklärung  
Dichiarazione di costituzione CE • EF Erklæring om overholdelse af standard  
Överensstämmelse med EU:s regler • EY-liitântädeklaraatio  
Declaración de Incorporación de la CE

We the undersigned • Nous, soussignés • Wij, de ondergetekenden •  
Wir, die Unterzeichneten • Noi sottoscritti • Undertegnede • Nedanstående företag •  
Me allekirjoittaneet • Nosotros, los abajo firmantes:

**Ransomes Jacobsen Limited**  
**Central Avenue, Ransomes Europark, Ipswich, England, IP3 9QG**

Certify that the cutting unit • Certifions que le bloc de coupe • Verklaren hierbij dat de maai-eenheid • Bescheinigen,  
daß die Schneidanlage • Certifichiamo che il gruppo di taglio • Attesterer herved at dette klippeaggregat, • Intygat att  
klippenheten • Vakuutamme, että leikkuulaite • Certificamos que la unidad cortadora

Make • Marque • Merk • Fabrikat • Marca • Fabrikat • Märke • Merkki • Marca: **Ransomes**

Product Code	Series	Description
LMAB354	UG	Magna 250, 6 Knife, Fixed Head,
LMAB355	UH	Magna 250, 6 Knife, Fixed Head,
LMAB352	UV	Sport 200 8 Knife, Floating Head,
LMAB353	UW	Sport 200 8 Knife, Floating Head,

Conforms to the Harmonised standard • Est conforme à la norme • Voldoet aan de Standaard •  
Mit der Norm • E' conforme allo standard • Overholder den standard • överstämmer med den standarden •  
Noudattaa standardia • Conformata con la norma:

**EN836**

This cutting unit has been designed to be fitted to the • Ce bloc de coupe a été conçu pour se monter sur • Deze maai-  
eenheid werd ontworpen om te worden gemonteerd op de • übereinstimmt. Diese Schneidanlage wurde zur  
Installation in • Questo gruppo di taglio è stata progettato per essere installato su • Dette klippeaggregat er beregnet til  
montering på • Denna klippenhet är avsett att monteras på • Tämä leikkuulaite on suunniteltu sopimaan seuraavaan •  
Esta unidad cortadora ha sido diseñada para su montaje en:

**Hydraulic 3400 series UD & Hydraulic 4650 series UC**




T. Lansdell  
Technical Director

Certificate Number: **3400-UD-4650-UC-Incorp (rev.2)**



A = 009034940 Cation rotating blades

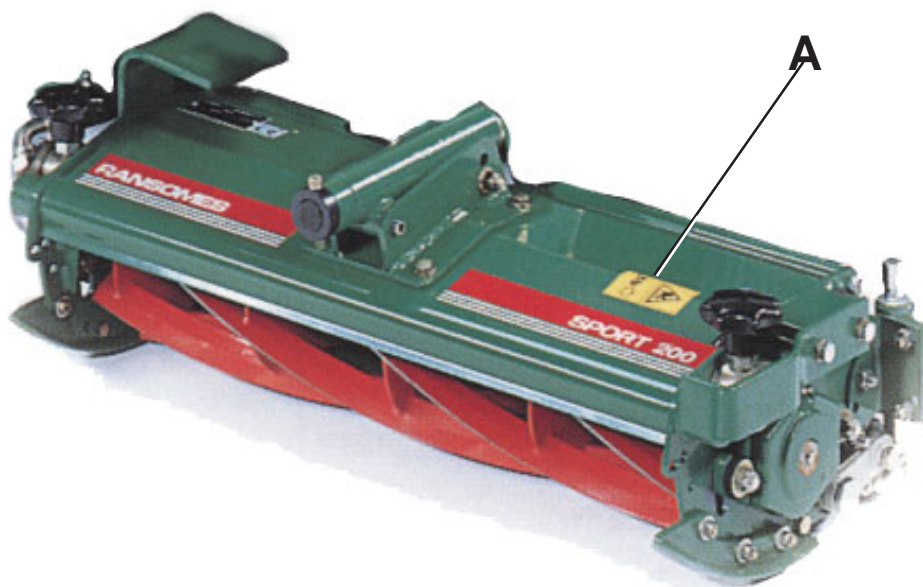

## FITTING THE UNIT TO THE MACHINE



*Read the Safety Instructions*

Fitting the unit to the machine is described in the power unit operating instruction book.

## OPERATING THE UNIT



*Read the Safety Instructions*

Operating the unit is described in the power unit operating instruction book.

## 7 ONDERHOUD



*Altijd de veiligheidsinstructies lezen*

### De onderstaande componenten smeren met Shell Darina R2 vet.

Maaicilinders - lagers	wekelijks of om de 50 uur.
	(A Fig. 1)
Rollagers	wekelijks of om de 50 uur.
	(A Fig. 2)
Ophanging van de eenheid	wekelijks of om de 50 uur.
	(A Fig. 3)

Afstellingen van de maaicilinders - Als de afstellingen van de maaicilinders om de een of andere reden zijn gedemonteerd, dan moeten die voor de helft worden gevuld met tandwielolie EP90.

Smering van hydraulische motor met directe aandrijving (iedere 400 bedrijfsuren)

Laat alle maaieenheden op de grond neer. Vóór het verlaten van de bestuurdersplaats moet de motor worden stilgezet en worden gezorgd dat alle bewegende delen stationair zijn. Schakel de remmen in, ontkoppel alle aandrijvingen en verwijder de contactsleutel. De direct aangedreven hydraulische motor kan van de maaieenheid worden losgehaald door de twee schroeven en pakkingen te verwijderen die hem aan het lagerhuis vastzetten. Trek de motor voorzichtig van het lagerhuis af. Het is belangrijk dat de motoras en de inwendige spievertandingen van de maaicilinder niet vuil worden. Mocht dit onverhoopt toch gebeuren, dan moet reiniging worden uitgevoerd middels ontvetting. Daarna dienen, voorafgaande aan montage, de motoras en cilindervertandingen rijkelijk te worden gesmeerd met Shell Malleus JB1 vet (Textron onderdeelnr. MBE3927).

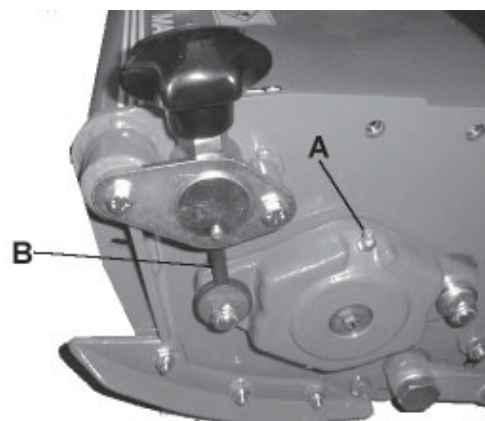


Fig.1

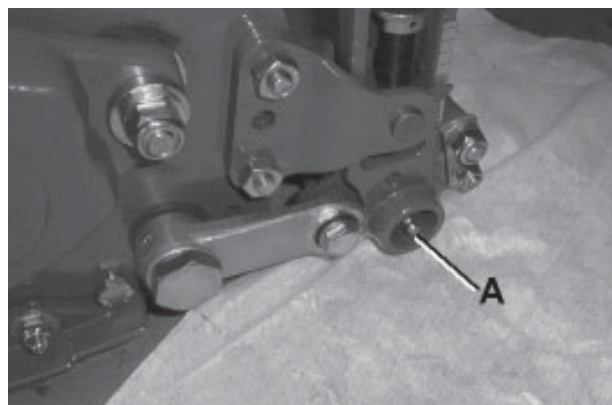


Fig.2

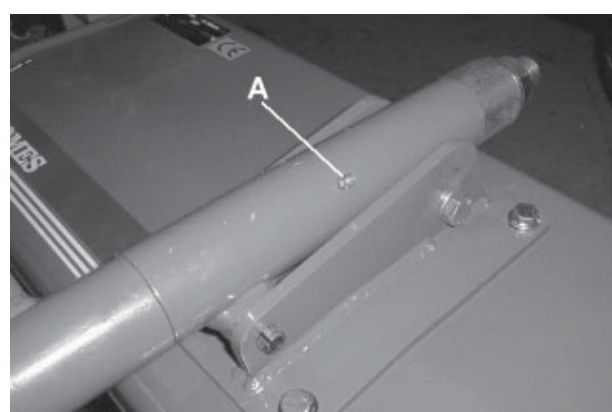


Fig.3





*Altijd de veiligheidsinstructies lezen*

## Alle moeren en bouten om de 75 uur, controleren

### DRIJFRIEM

#### HYDRAULISCHE MOTOR VAN DE MAAICILINDER

Deze bevindt zich in het aandrijfhuis. De drijfriem kan worden bereikt door het aandrijfhuis, compleet met de hydraulische motor van de maaieenheid, te verwijderen. Onder normale omstandigheden dient het niet noodzakelijk te zijn om de drijfriem van de cilinder, af te stellen.

#### VERWIJDEREN VAN HET AANDRIJFHUIS

Als aan het aandrijfhuis onderhoud moet worden uitgevoerd, dient dit eerst van het lagerhuis van de cilinder te worden verwijderd door de twee M10 x 45 bouten te verwijderen, inclusief de 10mm platte vulringen. (Het is belangrijk dat deze bouten en vulringen worden gebruikt, daar anders de bout niet goed zal ingrijpen in het lagerhuis van de cilinder).

#### DE HYDRAULISCHE MOTOR UITBOUWEN

De hydraulische motor uitbouwen door de bouten te verwijderen waarmee de motor op het aandrijfhuis is bevestigd. De motor, inclusief de daaraan bevestigde getande riemschijf, voorzichtig van het aandrijfhuis verwijderen. De getande riem verwijderen.

#### DE DRIJFRIEM VERWIJDEREN

De drijfriem kan nu worden uitgebouwd door de grotere getande riemschijf te verwijderen. De complete riemschijf kan van het aandrijfhuis worden losgemaakt door de drie schroeven te verwijderen. Het is nu mogelijk om de riem te verwijderen via de grote opening in het aandrijfhuis.

#### HANTEREN EN BEWAREN VAN DE RIEM

Gedurende opslag dient de riem te worden beschermd tegen vocht, extreme temperaturen, direct zonlicht en hoge ozon-concentraties in de atmosfeer. De riem moet in de oorspronkelijke verpakking worden bewaard. Teneinde beschadiging te voorkomen mag de riem nooit worden verbogen of verknikt.

Wanneer uitrusting wordt opgeslagen, kan de riem gespannen blijven. Desgewenst kan de spanning worden opgeheven. Als de machine langere tijd wordt opgeslagen zonder dat de riemen zijn verwijderd, altijd rekening houden met de hierboven beschreven omstandigheden.

Ook de hantering van de Poly Chain GT riem is belangrijk. Als gevolg van de hoge prestatiekenmerken van de Poly Chain GT riem, de riem nooit verdraaien, omdraaien of wikkelen. Ook

bochten en knikken voorkomen. Bochten mogen nooit strakker zijn dan de kleinste aanbevolen riemschijf-diameter voor de betreffende dwarsdoorsnede aan de binnenkant - circa 60mm bij een tandsteek van 8mm. De riemen mogen niet meer dan tweemaal de toegelaten binnendiameter, naar buiten gebogen worden.

De riemen mogen nooit met geweld op een aandrijving worden aangebracht.

De riem kan worden gereinigd door die af te vegen met een doek die licht is bevochtigd met een licht, niet vervlegend oplosmiddel, zoals bijvoorbeeld paraffine. Het laten inweken of opborstelen van een dergelijk oplosmiddel, wordt niet aanbevolen. Het spreekt ook vanzelf dat het afschuren of schrapen van de riem met een scherp voorwerp voor het verwijderen van vet of vuil, niet wordt aanbevolen. Voor het reinigen van de riemschijven, soortgelijke procedures toepassen.

#### MONTAGE VAN DE DRIJFRIEM, DE HYDRAULISCHE MOTOR EN HET AANDRIJFHUIS

1. De getande riem door de grote opening in het aandrijfhuis monteren. Zorg ervoor dat de riem op geen enkele manier wordt 'gekinkt' of 'vastgeklemd'. De hydraulische motor, compleet met de getande riemschijf, moet vervolgens worden gemonteerd. Er altijd voor zorgen dat de flens van de riemschijf correct door de riem is gemonteerd. Hierbij moet de riem loodrecht op de tanden van de riemschijf zijn geplaatst.

2. Tenslotte de grote riemschijf plaatsen en bevestigen met de 3 schroeven.

3. De riem kan het best worden afgesteld nadat het aandrijfhuis op de maaieenheid is gemonteerd.

4. Het aandrijfhuis op het cilinder-lagerhuis monteren door de procedure voor het VERWIJDEREN VAN HET AANDRIJFHUIS, uit te voeren in omgekeerde volgorde. Er altijd voor zorgen dat het plastic aandrijfelement correct ingrijpt tussen de aandrijf-'tanden' op de drijfas van de cilinder en de riemschijf.

#### DE RIEMSCHIJF OPSPANNEN

De klembouten van de hydraulische motor voldoende losdraaien, zodat de hydraulische motor rond de draaipuntbout kan roteren. De hydraulische motor met één hand vastpakken en stevig omhoog trekken, teneinde de riem de juiste spanning te geven. De motor in deze positie houden en de klembout en tenslotte de draaipuntbout, vastdraaien.

OPMERKING: Bij het demonteren is het belangrijk dat de cardanas of de interne spiebanen van de hydraulische motor en de as van de maaicilinder, niet worden vervuild. Als deze componenten, om welke reden dan ook toch worden vervuild, dan moeten die worden gereinigd door de onderdelen te ontvetten. Vervolgens weer smeren met Shell Malleus JB1 vet. Dan pas monteren.

## 8 AFSTELLINGEN



*Altijd de veiligheidsinstructies lezen*

### MAAIHOOGTE (FIG. 4 & 5)

#### AFSTELLEN VAN HANDWIELTYPE:

1. Het stelwiel of de moer (A Fig. 4) op het handwiel, rechtson (+) draaien om de maaiahogte te verhogen. Linkson (-) draaien, om de maaiahogte te verminderen.

2. Controleren of beide afstellingen op alle maaieenheden, in gelijke mate worden afgesteld. Teneinde het verkrijgen van een gelijke afstelling te vergemakkelijken, zijn aan weerskanten van de rol, maaiahogte-indicators (B Fig.4) aangebracht.

**OPMERKING:** De nummers 1 tot 9 zijn uitsluitend voor verwijzing van één kant van de rol naar de andere en hebben niets te maken met de maaiahogte, afgezien van het feit dat iedere eenheid een maaiahogte-verandering vertegenwoordigt van circa 6,25mm voor eenheden met vaste kop en 3,75mm voor eenheden met zwevende kop. Deze indicators zijn op de fabriek ingesteld en als de pijl aan weerskanten van de rol, op dezelfde hoogte wordt geplaatst, dan staat de rol evenwijdig met het onderste blad. Als de rollen het onderste blad, om welke reden dan ook, niet evenwijdig met elkaar staan, kan de rol weer evenwijdig worden gezet met het onderste blad, door één van de wieltjes rond te draaien, waarna de indicator dient te worden afgesteld door de kleine klemmschroef die in het midden van de indicator is geplaatst, los te draaien en de indicator de juiste positie te geven ten opzichte van de pijl aan de andere kant van de rol.

3. Andere afstellingen zijn overbodig.

4. DIT IS EEN ZELFVERGRENDELEND MECHANISME. HET IS DUS NIET NODIG OM HET MECHANISME TE ONTGRENDELEN OF TE VERGRENDELEN.

#### AFSTELLEN VAN SCHROEFSLEUTELTYPE (MAAIHOOGTE):

- 1 De twee schroeven (78 fig. 5) waarmee de excentrische bus in de hendel vastgehouden wordt, loszetten.
3. Stelschroef (83 fig. 5) achter op eenheid draaien, rechtson om maaiahogte te verminderen, linkson om deze te vergroten.
3. Na afstellen, schroeven (78 fig 5) stevig aantrekken .

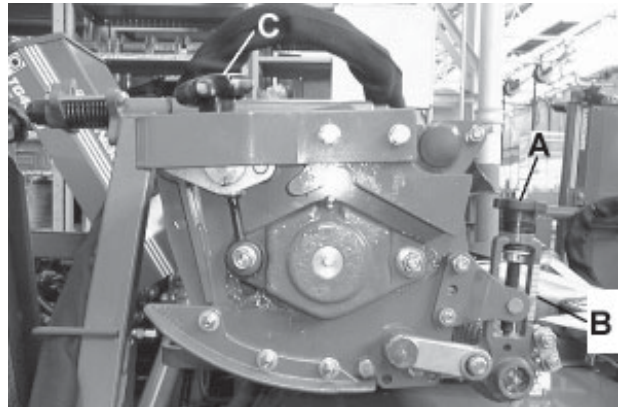


Fig.4

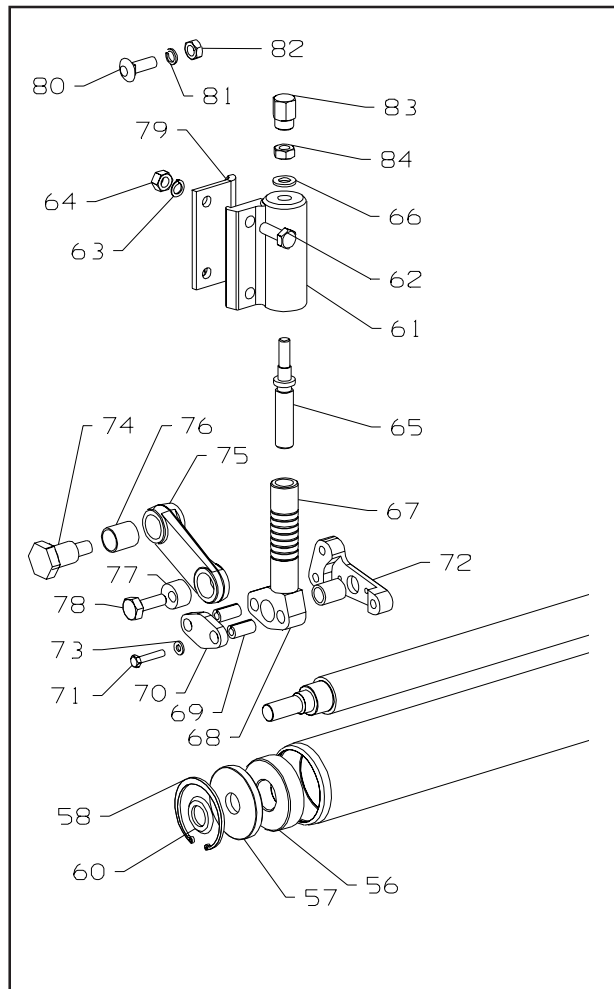


Fig.5



## 8 AFSTELLINGEN

### SPORT 200 MET VASTE KOP - AANVULLENDE AFSTELLING

1. In het middelste draaipunt van de maaieenheid is een faciliteit aangebracht voor een extra maaihoogte-afstelling.
2. Door de achterste middelste draaipuntbout te verstellen, is een maximum maaihoogte van 101mm , mogelijk.

### SPORT 200 MET ZWEVENDE KOP - VOORSTE ROLINSTELLEN

1. Het rechter uiteinde van de rol kan niet worden afgesteld. De rol kan evenwijdig worden geplaatst met het onderste blad door een excentrische klemmoer op het lagerhuis aan de linkerkant van de rol, rond te draaien.
2. De klembouten van het lagerhuis aan de linkerkant van de rol, losdraaien.
3. De excentrische moer ronddraaien tot de rol evenwijdig staat met het onderste blad.
4. Voorkomen dat de excentrische moer kan ronddraaien en tegelijkertijd de klembouten van het lagerhuis van de rol, vastdraaien.

### DE MAAICILINDER VASTSTELLEN OP HET ONDERSTE BLAD (FIG. 6)

Om te controleren of de maaicilinder correct op het onderste blad is ingesteld, een stukje dun papier tussen de rand van het blad en de spiraalmessen plaatsen. De cilinder met de hand ronddraaien.

Het papier moet langs de gehele lengte van het onderste blad, worden doorgesneden. Het papier mag niet scheuren. Wordt het resultaat niet bereikt, dan is het mogelijk dat afstellingen moeten worden uitgevoerd. **ECHTER NOOIT TE STRAK AFSTELLEN.** Het is ook mogelijk dat de cilinder is versleten, in welk geval die moet worden opgeslepen voordat afstellingen worden uitgevoerd.

### AFSTELLEN VAN HANDWIELTYPE:

1. De cilinder afstellen op het onderste blad door eerst het linker en dan het rechter handwiel (C, Fig. 6) rechtsom te draaien om het systeem op 'maaien' in te stellen. Een 'keep' effect is voelbaar als het handwiel rechtsom wordt rondgedraaid. Hierdoor wordt de cilinder in eenheden van circa 0,035mm in de richting bewogen van het onderste blad.

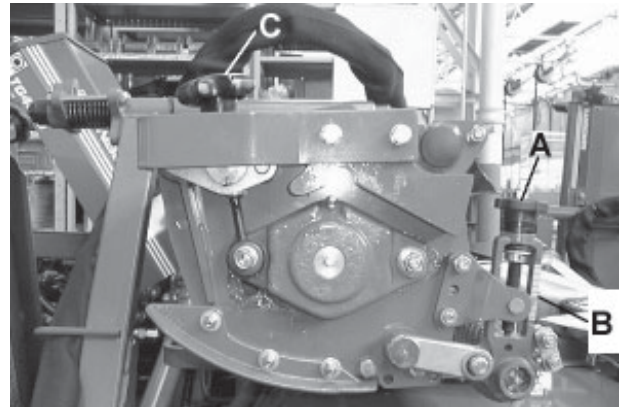


Fig.6



**WAARSCHUWING**



### AANPASSING MAAICILINDER AAN GRONDMES

#### COMMANDER 3520

**Om te zorgen dat het maaicircuit geen tegendruk heeft, moet de volgende procedure uitgevoerd worden.**

1. Stop het ronddraaien van de maaicilinder door de besturingshendel in de neutrale stand te zetten.
2. De eenheden moeten opgekrikt worden (voor het sluiten van de wisselkleppen), vervolgens weer neergelaten worden en de motor moet uit staan.

**De maaieenheden kunnen nu vrij gedraaid worden bij het instellen van de cilinder aan het grondmes.**

2. De correcte 'maai-actie' moet zijn bereikt met het stelmechanisme 'los' (m.a.w. tussen 'kepen'). Bij met de hand instellen moet de cilinder altijd in de richting worden bewogen van het onderste blad (m.a.w. de wieltjes moeten rechtsom worden gedraaid) zodat de correcte maai-actie wordt verkregen tussen de cilinder en het onderste blad. **DE CILINDER NOOIT TE STRAK ZETTEN.** Tracht altijd de juiste maai-actie te verkrijgen door het handwiel linksom te draaien.

**9 ONDERHOUD AAN HET EIND VAN HET SEIZOEN**

---

a. Deze machines moeten goed worden gereinigd. Al het gemaaid gras en vuil verwijderen dat op componenten of onderdelen van de machine aanwezig is.

b. De maaicilinders ronddraaien en de maairanden reinigen.

c. De spiraalmessen smeren met een kleine hoeveelheid olie, zodat die niet kunnen gaan roesten. Een borstel gebruiken.

d. De cilinders langzaam ronddraaien. Hierdoor zal de olie op de onderste bladen worden verspreid.

**WAARSCHUWING:** De cilinders nooit met de hand ronddraaien.

## **GARANTIE**

Wij GARANDEREN dat wanneer er fouten optreden bij de constructie of de materialen van de goederen binnen TWEE JAAR of na twee duizend uur voor machines voorzien van uurmeters, vanaf de aankoopdatum, wij het defecte onderdeel repareren of vervangen. Hierbij worden geen arbeidsloon, materiaalkosten of vervoerskosten binnen het Verenigd Koninkrijk in rekening gebracht, op voorwaarde dat de vordering onder deze garantie wordt ingediend via een erkende Ransomes dealer en het defecte onderdeel, op ons verzoek, naar ons of naar de dealer wordt teruggezonden. Deze garantie is een aanvulling op de wettelijke garantiebepalingen voor goederen die worden verkocht in het Verenigd Koninkrijk. Wij accepteren echter geen aansprakelijkheid voor tweedehands goederen of voor defecten die naar ons oordeel zijn te wijten aan misbruik, onzorgvuldige behandeling of normale slijtage, of voor het monteren van reserve-onderdelen, vervangingsdelen of extra onderdelen die niet door ons worden geleverd of zijn goedgekeurd voor dat doeleinde. Bij gebruik van andere olie of smeermiddelen dan de aanbevolen middelen vervalt deze garantie.

Transportschade en normale slijtage vallen niet onder deze garantie.

## **VERKOOP EN KLANTENSERVICE**

In het Verenigd Koninkrijk en Ierland is een netwerk opgezet van erkende verkoop- en klantenservicepunten, waarvan u de adressen kunt opvragen bij uw leverancier. Wanneer u service of reserve-onderdelen nodig hebt voor de machine, binnen of na de garantieperiode, kunt u het beste contact opnemen met uw leverancier of een erkende dealer. Vermeld daarbij altijd het registratienummer van de machine. Als u schade vaststelt bij ontvangst van de machine, moet u dit onmiddellijk melden bij uw leverancier.

## **GEBRUIK VAN DE ONDERDELENLIJST**

### **ILLUSTRATIE-NUMMER**

Ieder onderdeel dat in de illustratie wordt weergegeven, is voorzien van een illustratie-nummer. Het is mogelijk dat onderdelen zonder een dergelijk illustratie-nummer, niet onmiddellijk in de illustratie kunnen worden gevonden. Deze behoren echter, over het algemeen, bij het onmiddellijk daarnaast geplaatste onderdeel.

### **SYSTEMEN**

Een compleet systeem, zoals bijvoorbeeld een wiel, een motor, een hydraulische motor of rol, wordt als een compleet illustratie-nummer vermeld. De afzonderlijke componenten worden apart vermeld. Het systeem wordt ook vermeld onder het onderdeelnummer, terwijl onderdelen, iets inspringend naar rechts, zijn vermeld.

Bijvoorbeeld:-

<b>ILLUSTRATIE NUMMER</b>	<b>ONDERDEELNR.</b>	<b>BESCHRIJVING</b>	<b>AANTAL</b>	<b>OPMERKINGEN</b>
1	LMSD798	Rol - compleet	1	ALLE MACHINES
2	MBB4490	• Buis	1	
3	LMSD926	• Eindkap - compleet	2	
4	MBB6851	• • Eindkap	1	
5	H009116	• • Lager	1	
6	MBB2356	• Keerringhuis	1	
7	A224016	• Keerring	2	
*	A122192	Schroef	2	

Het is niet altijd mogelijk om ieder onderdeel te illustreren. Aangezien bepaalde onderdelen van externe leveranciers afkomstig zijn, bestaat de kans dat ze niet door Ransomes kunnen worden geleverd, maar speciaal bij de betrokken leverancier moeten worden besteld. Het gaat hier bijvoorbeeld om onderdelen van de hydraulische Volvo-motor.

### **AANTALLEN**

De vermelde aantallen zijn voor één systeem of sub-systeem.

## **GEBRUIK VAN DE ONDERDELENLIJST**

Eerst de functie en toepassing van het betreffende onderdeel vaststellen. Vervolgens de pagina met de hoofdindex opslaan en juiste sectie kiezen. Het onderdeel in de illustratie en de onderdelenlijst opzoeken en de hoeveelheid aflezen in de kolom met de titel 'MODEL'.

### **NUMERIEKE INDEX**

Deze index is een samenvatting van alle onderdeelnummers die worden gebruikt in het handboek. Deze onderdeelnummers zijn in numerieke volgorde geplaatst, inclusief het pagina- en illustratie-nummer, waaronder de onderdelen verschijnen.

### **BESTELLEN VAN VERVANGINGSONDERDELEN**

Als vervangingsonderdelen worden besteld, is het uiterst belangrijk dat het SERIENUMMER van de machine, het ONDERDEELNUMMER, de BESCHRIJVING en het VEREISTE AANTAL worden vermeld.

Iedere eigenmachtig aan deze machine uitgevoerde verandering kan de fabrikant ontslaan van enige aansprakelijkheid voor enige resulterende beschadiging of verwonding.

### **AFKORTINGEN**


N/A Niet beschikbaar  
AR Zoals vereist


## CONTENTS

	Page
MAIN FRAME,CYLINDER & BOTTOM BLOCK (MAGNA 250) .....	3
MAIN FRAME,CYLINDER & BOTTOM BLOCK (MAGNA 250) .....	5
MAIN FRAME,CYLINDER & BOTTOM BLOCK (SPORT 200) .....	7
MAIN FRAME,CYLINDER & BOTTOM BLOCK (SPORT 200) .....	9
MAIN FRAME,CYLINDER & BOTTOM BLOCK (SPORT 200) .....	11
CYLINDER ADJUSTER & BEARING HOUSINGS .....	13
CYLINDER ADJUSTER & BEARING HOUSINGS .....	15
CYLINDER ADJUSTER & BEARING HOUSINGS .....	17
BELT DRIVE ASSEMBLY .....	19
DIRECT DRIVE MOTOR WITH CARDAN SHAFT .....	21
DIRECT DRIVE MOTOR (BI-DIRECTIONAL) WITH SPLINED SHAFT .....	23
REAR ROLL ASSEMBLY & ADJUSTERS .....	25
REAR ROLL ASSEMBLY & ADJUSTERS .....	27
REAR ROLL ASSEMBLY & ADJUSTERS .....	29
FRONT ROLL ASSEMBLY AND ADJUSTERS .....	31
HIGH HIGHT OF CUT KIT (FRONT) FOR FLOATING HEAD SPORT 200 (COMMANDER 3500, 3510 & 3520) .....	33
MAIN FRAME, VERTICUT. ....	35
CYLINDER ADJUSTER & BEARING HOUSINGS VERTICUT. ....	37
FRONT ROLL ASSEMBLY AND ADJUSTERS FOR VERTICUT. ....	39
HYDRAULIC MOTOR (BELT DRIVE) .....	41


**RANSOMES**  
**SPORT 200**  
**MAGNA 250**

---

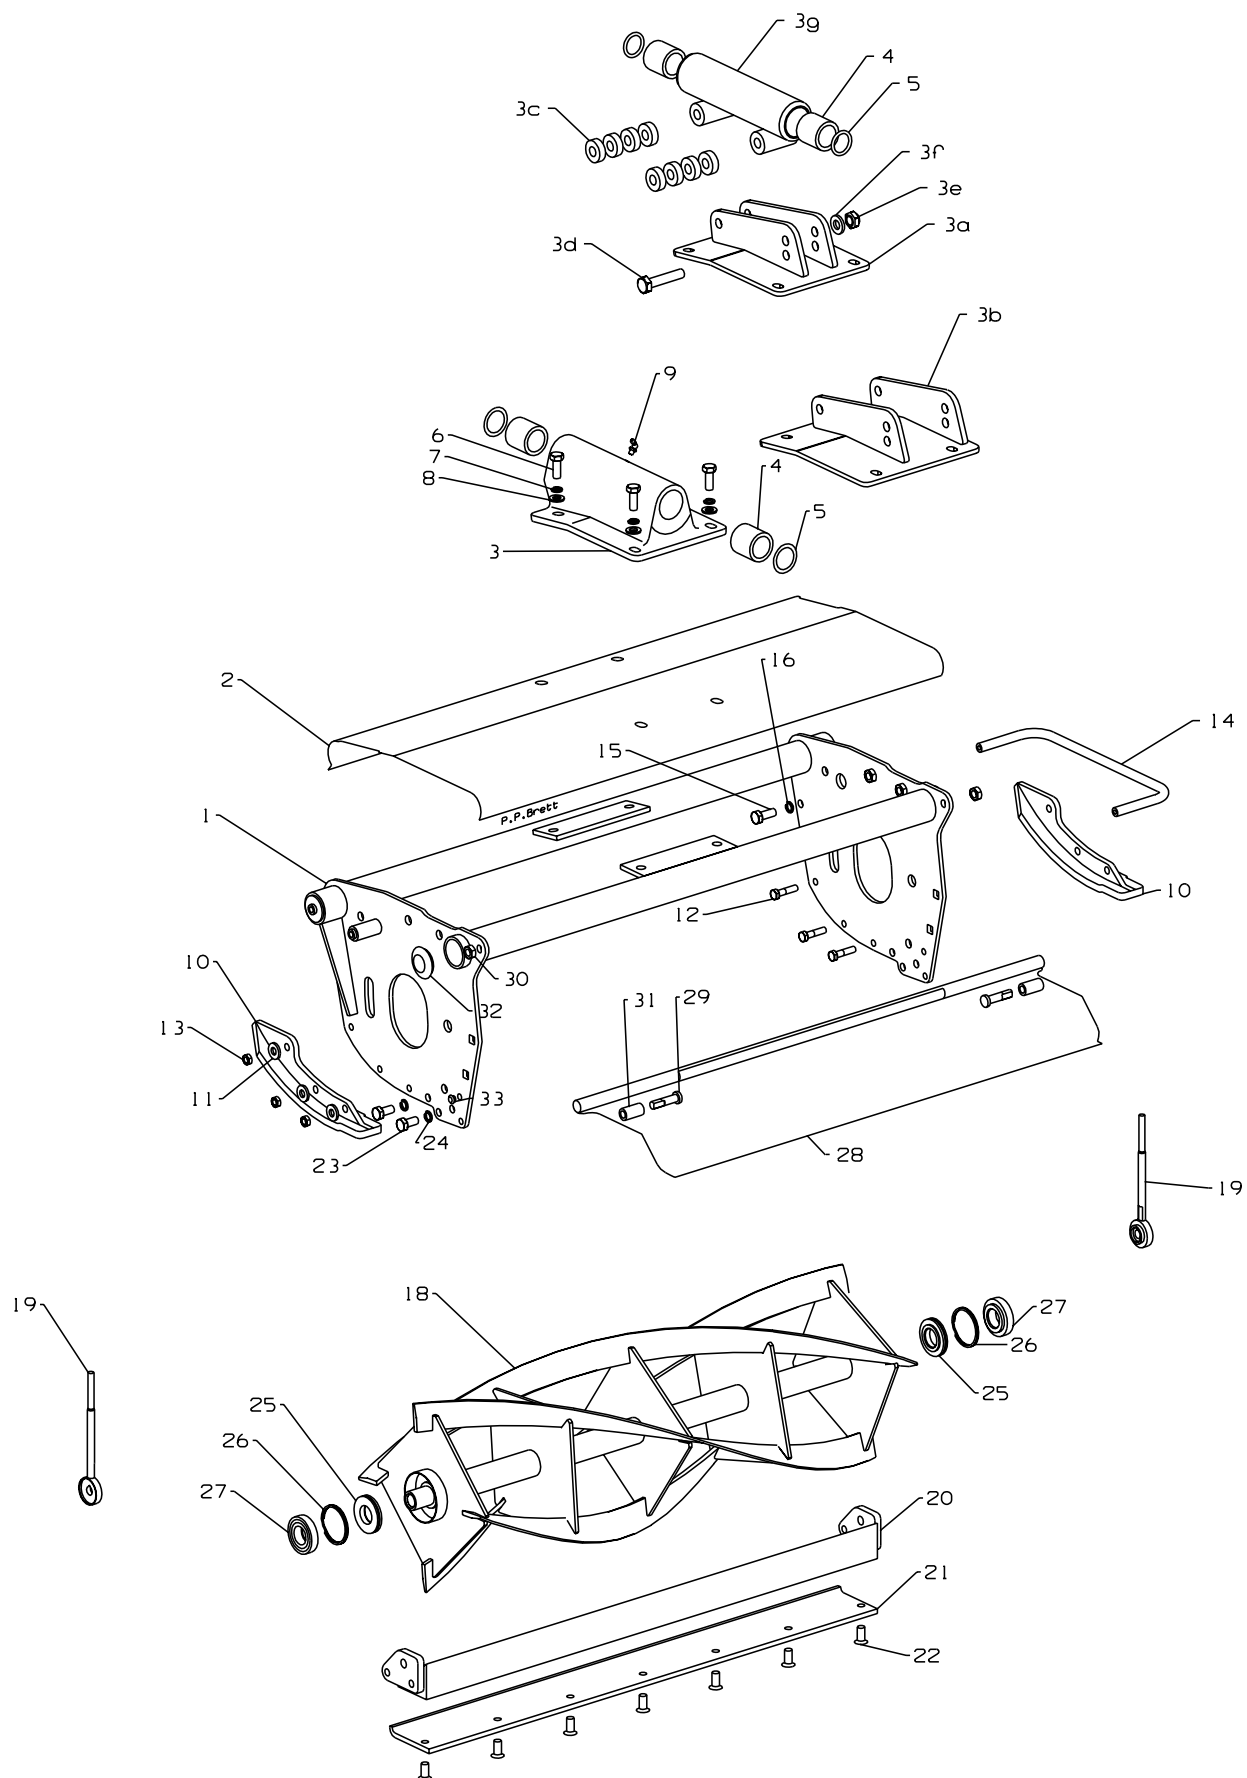


ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
1	MBC8949B	FRAME ASSEMBLY	1	TG3400 / TG4650 ONLY TG3400 / TG4650 CENTRE UNIT OPTION(OVERLAPADJUSTMENT)
2	MBC8935A	COVER	1	
3	MBE0021A	PIVOT BRACKET	1	
3A	MBF0683A	PIVOT BRACKET	1	
3B	MBF1297	PIVOT BRACKET	1	
3C	MBG1023	SPACER	8	TG3400 / TG4650 ONLY
3D	450062	BOLT M12 X 130	2	
3E	450380	NUT M12 NYLOC	2	
3F	450392	WASHER M12	2	
3G	MBC8414	PIVOT BEARING	1	
4	A219331	BUSH	2	
5	A221321	O RING	2	
6	450026	SCREW M10 X 35	4	
7	450412	S.L.WASHER M10	4	
8	MBE4682	WASHER 10MM	4	
9	A299306	LUBRICATOR	1	
10	MBC8985	SKID	2	
11	A907207	WASHER	6	
12	450014	BOLT M8 X 30	6	
13	450378	STIFFNUT M8	6	
14	MBE2649	BAR	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5/ COMMANDER 3520
15	A110396	SCREW M8 X 16	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
16	A150008	WASHER 8MM	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
18	MBC8391B	CYLINDER 4K	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
18*	MBE4102	CYLINDER 4K	1	COMMANDER 3500DX / 3510
18*	MBF1412	CYLINDER 4K	1	HIGHWAY2130/PARKWAY2250+/ COMMANDER 3520
18*	MBF0565	CYLINDER 6K	1	HIGHWAY2130/PARKWAY2250+
18*	MBC8392B	CYLINDER 6K	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5111
18*	MBE2230	CYLINDER 6K	1	COMMANDER 3500DX / 3510
18*	MBF0565A	CYLINDER 6K	1	PARKWAY 2250 / TG 3400 & 4650 COMMANDER 3520

\* NOT ILLUSTRATED

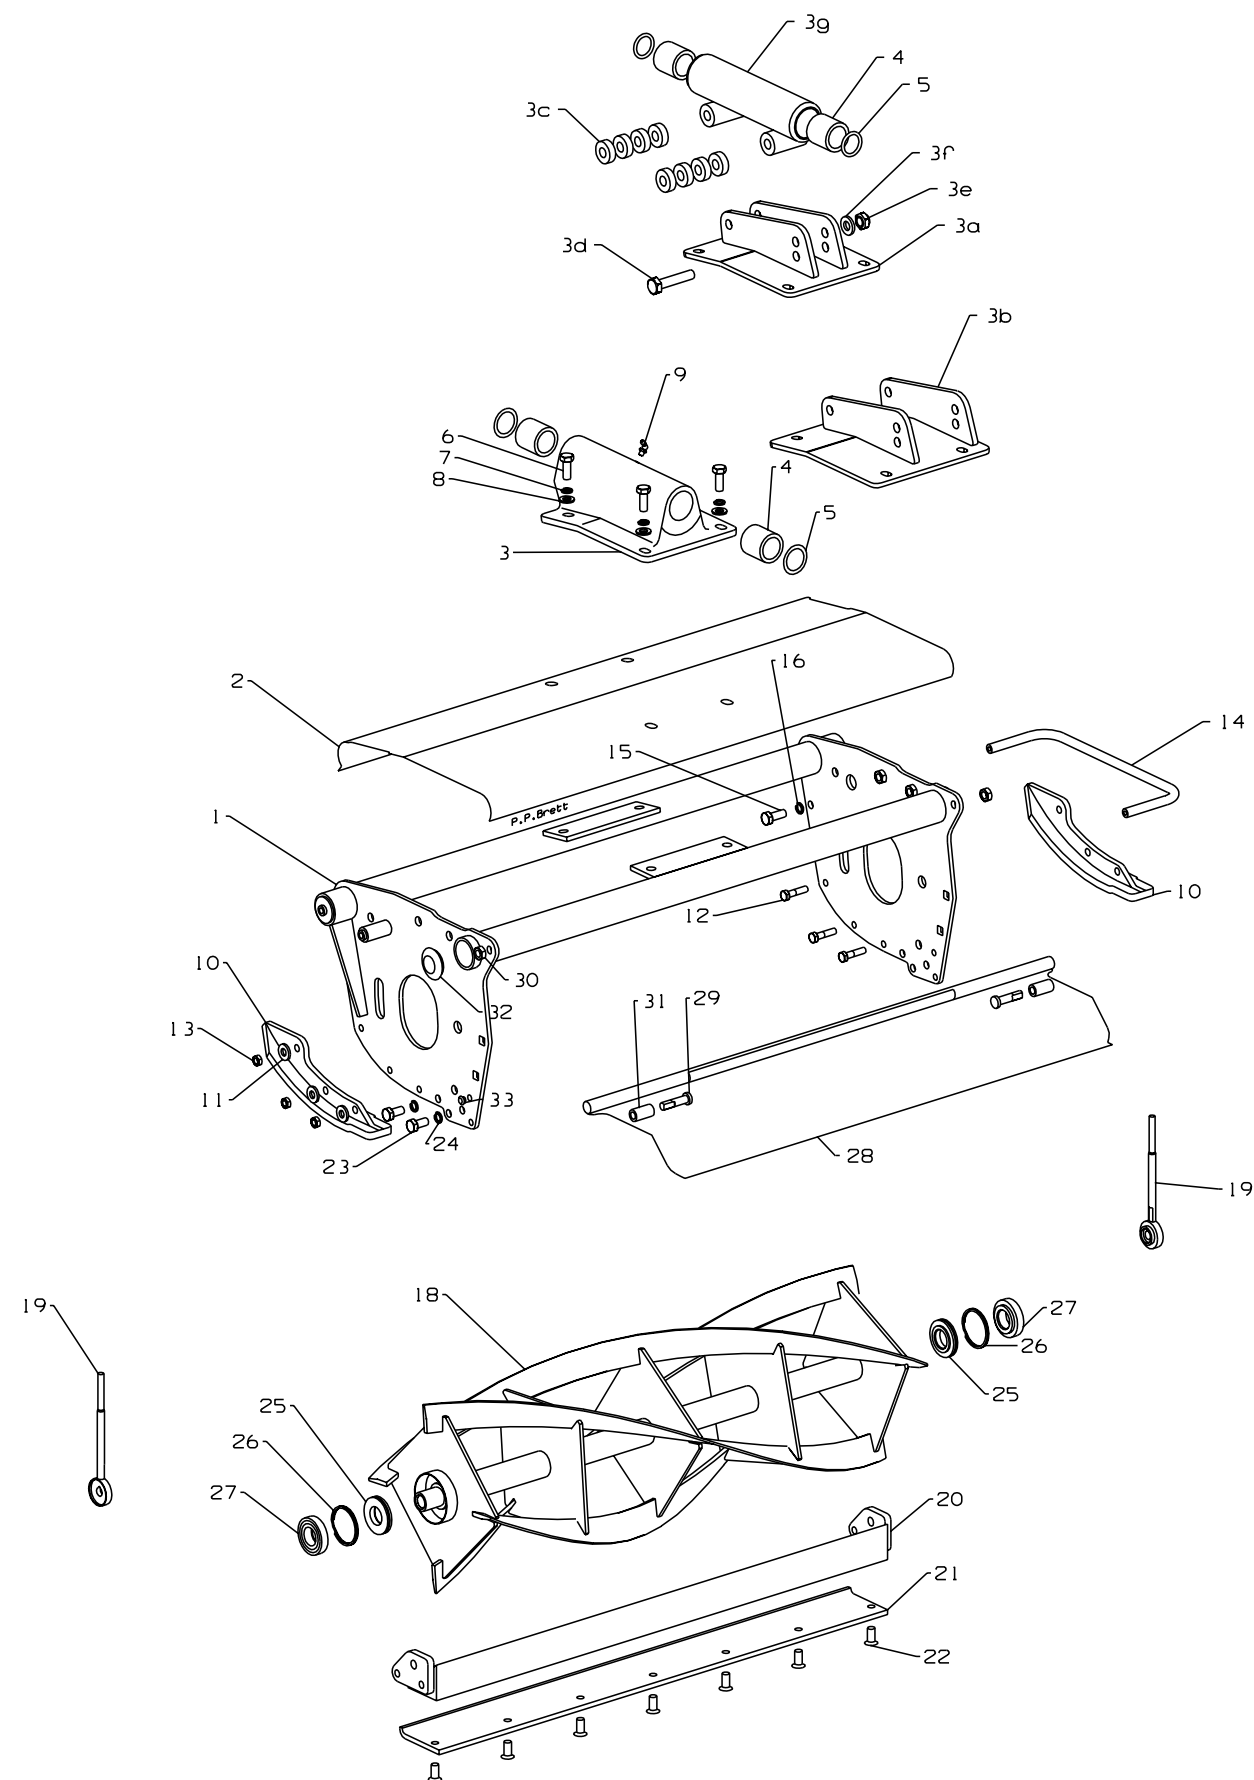




ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
18*	MBE2250	CYLINDER 8K	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
18*	MBE4103	CYLINDER 8K	1	COMMANDER 3500DX / 3510
18*	MBF2024	CYLINDER 8K	1	PARKWAY 2250 PLUS COMMANDER 3520
19	MBE0270	ADJUSTING ROD	2	
20	MBE1150	BOTTOM BLOCK ASSY	1	
20		• BOTTOM BLOCK	1	
21	MBA7024A	• BOTTOM BLADE	1	
22	A119000	• SCREW 3/8" X 11/16"	7	
23	450213	SCREW M10 X 20	4	
24	450412	S.L.WASHER 10MM	4	
25	MBE1185	RING CARRIER	2	220 M28 / MOTOR 350D MK5 / PARKWAY 225
25*	MBE2231	RING CARRIER	2	COMMANDER 3500DX / 3510 / 3520 TG 3400 & 4650 / PARKWAY 2250 PARKWAY 2250 + / HIGHWAY 2130
26	A230021	SEAL RING	2	220 M28 / MOTOR 350D MK5 / PARKWAY 225
26*	A230013	SEAL RING	2	COMMANDER 3500DX / 3510 / 3520 TG 3400 & 4650 / PARKWAY 2250 PARKWAY 2250 + / HIGHWAY 2130
27	A205902	BEARING	2	220 M28 / MOTOR 350D MK5 / PARKWAY 225
27*	A209044	BEARING	2	COMMANDER 3500DX / 3510 / 3520 TG 3400 & 4650 / PARKWAY 2250 PARKWAY 2250 + / HIGHWAY 2130
28	MBC9586A	DEFLECTOR (LONG)	1	MOTOR 350D / PARKWAY 225
28*	MBC8328D	DEFLECTOR (SHORT)	1	MOTOR 350D / PARKWAY 225
29	MBC8956A	BOLT X	2	MOTOR 350D / PARKWAY 225
30	450379	STIFFNUT M10	2	MOTOR 350D / PARKWAY 225
31	A298383	SPACER	2	MOTOR 350D / PARKWAY 225
32	A295274	PLASTIC PLUG	2	
33	A295286	ROUND INSERT	2	PARKWAY 225
34*	A903468	LABEL - (-<->+)	4	
35*	A903816	LABEL - RANSOMES	1	
36*	A903817	LABEL - MAGNA 250	1	
37*	A903494	LABEL - DANGER -	1	CUTTING CYLINDER

\* NOT ILLUSTRATED

**RANSOMES**  
**SPORT 200**  
**MAGNA 250**

---

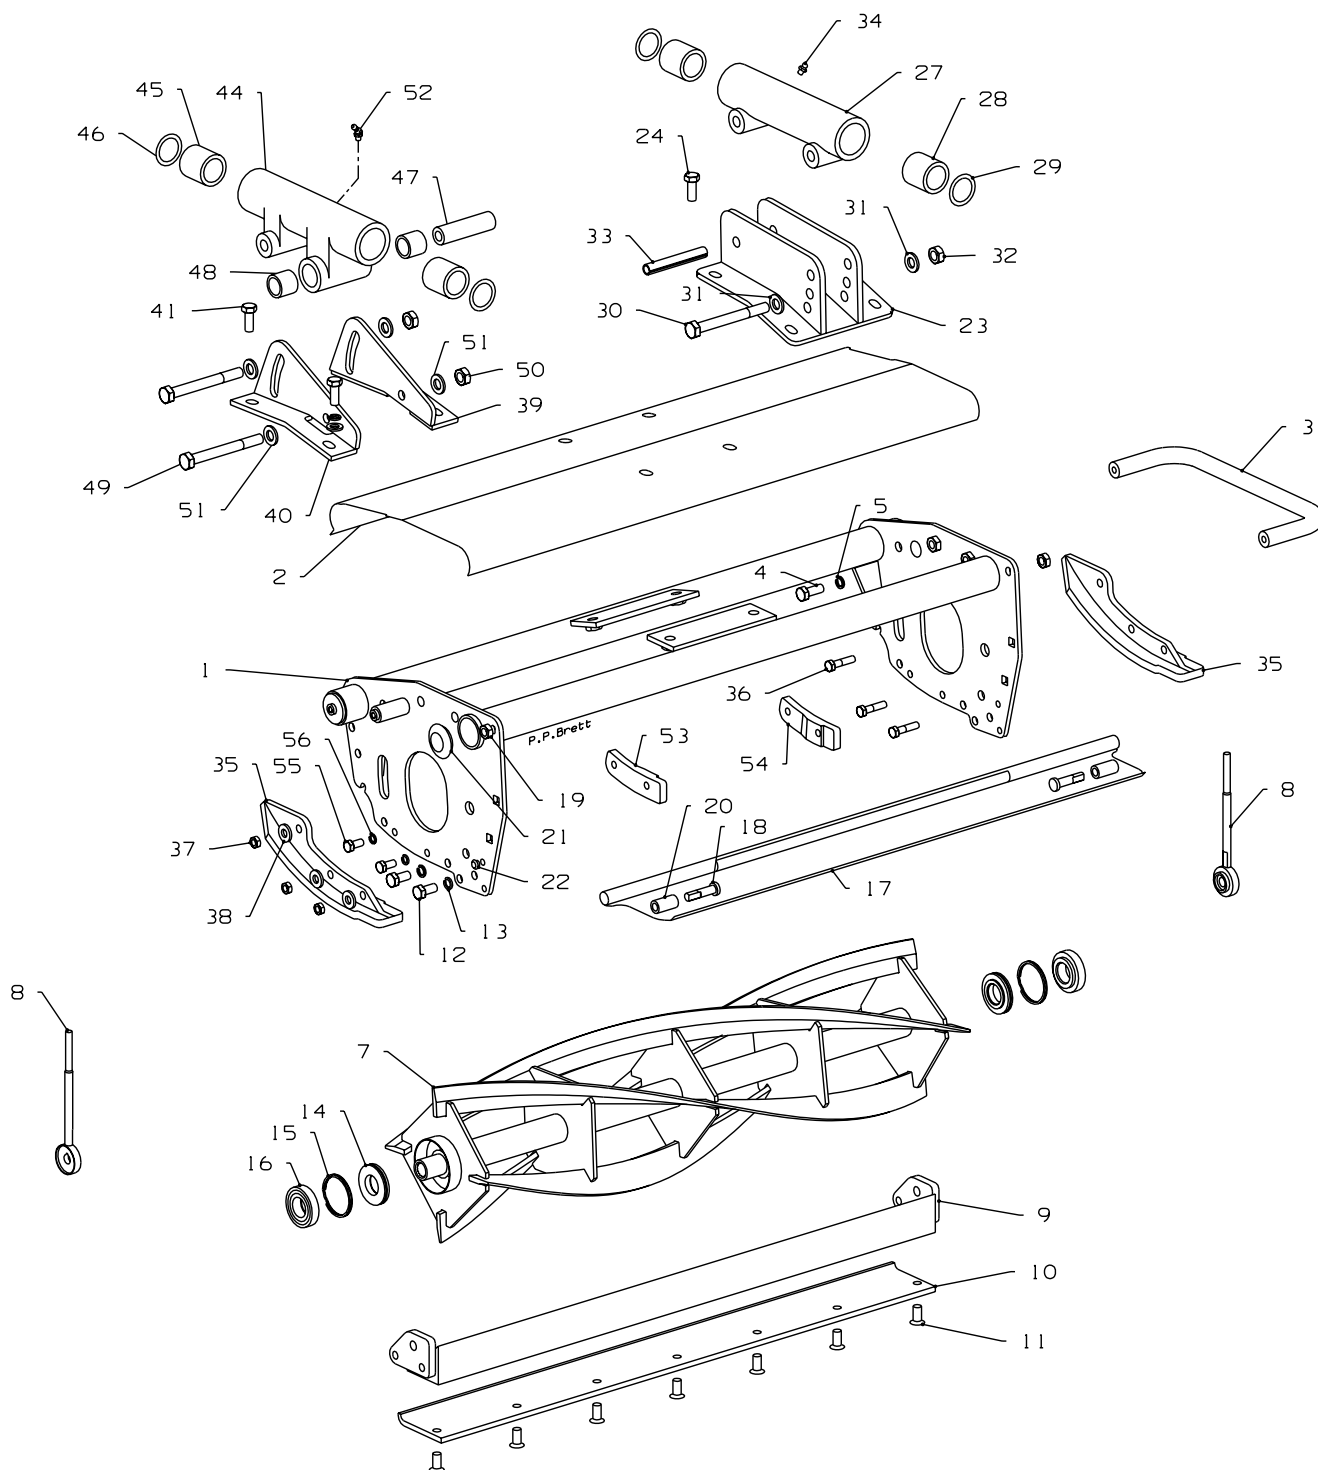



ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
1	MBC8950B	FRAME ASSEMBLY	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5 COMMANDER 3520
2	MBC8936A	COVER	1	
3	MBCE2649	BAR	1	
4	450190	SCREW M8 X 16	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
5	450396	WASHER 8MM	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
7	MBE0476A	CYLINDER 4K	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
7*	MBE4104	CYLINDER 4K	1	COMMANDER 3500DX / 3510
7*	MBF1466	CYLINDER 4K	1	HIGHWAY2130/PARKWAY2250+ COMMANDER 3520
7*	MBF1264	CYLINDER 6K	1	HIGHWAY2130/PARKWAY2250+ COMMANDER 3520
7*	MBC8390B	CYLINDER 6K	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
7*	MBE4105	CYLINDER 6K	1	COMMANDER 3500DX / 3510
7*	MBC8388B	CYLINDER 8K	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
7*	MBE4106	CYLINDER 8K	1	COMMANDER 3500DX / 3510
7*	MBF0566A	CYLINDER 8K	1	PARKWAY 2250 / TG 3400 & 4650/ COMMANDER 3520
7*	MBC8389B	CYLINDER 11K	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
7*	MBE4109	CYLINDER 11K	1	COMMANDER 3500DX / 3510
7*	MBF1091	CYLINDER 11K	1	PARKWAY 2250 / TG 3400 & 4650 HIGHWAY2130/PARKWAY 2250+/ COMMANDER 3520
8	MBE0271	ADJUSTING ROD	2	

\* NOT ILLUSTRATED

**RANSOMES**  
**SPORT 200**  
**MAGNA 250**

---

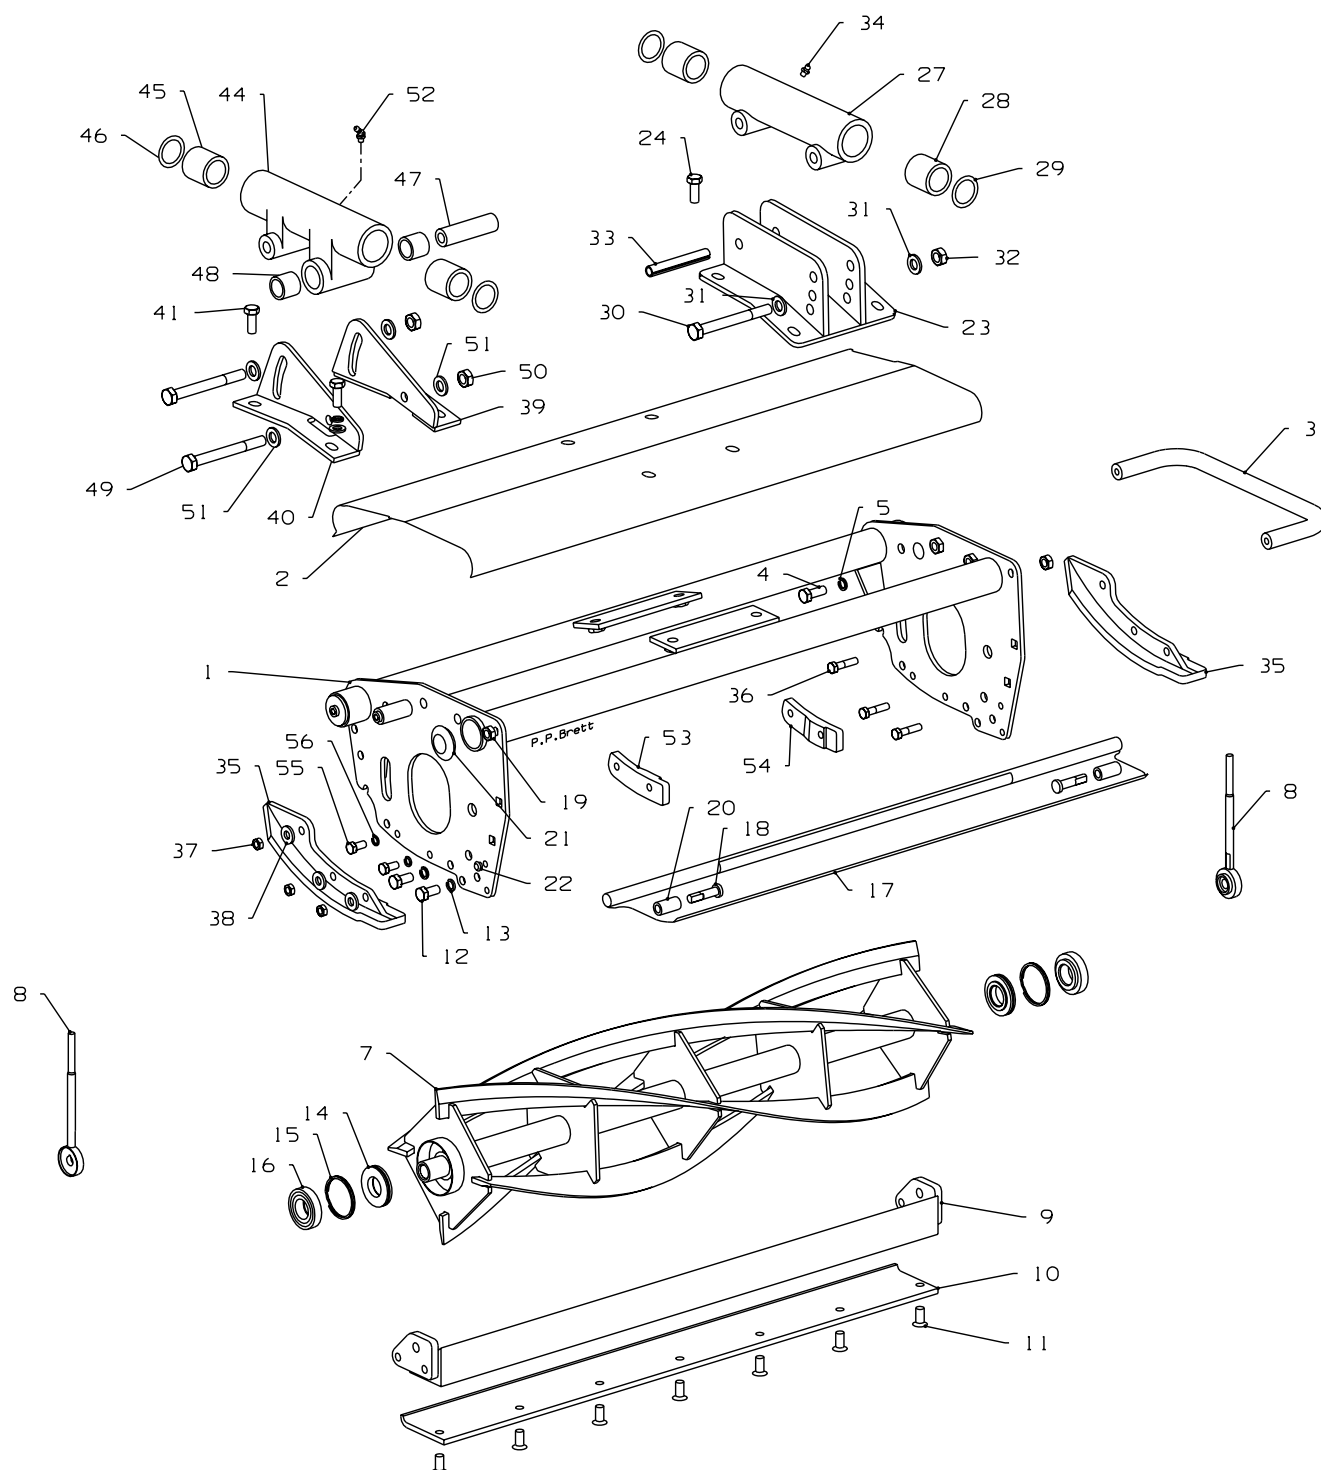



ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
9	MBE1151	BOTTOM BLOCK ASSY	1	WITH STANDARD BLADE
9	MBE1527	BOTTOM BLOCK ASSY	1	WITH THIN BLADE
9*		• BOTTOM BLOCK	1	
10	MBA7024A	• BOTTOM BLADE (STD.)	1	
10*	MBA7037A	• BOTTOM BLADE (THIN)	1	
11	A119000	• SCREW 3/8 X 11/16	7	
12	450213	SCREW M10 X 20	4	
13	450412	S.L.WASHER 10MM	4	
14	MBE1185	RING CARRIER	2	220 M28 / MOTOR 350D MK5 / PARKWAY 225
14*	MBE2231	RING CARRIER	2	COMMANDER 3500DX/3510/3520 TG 3400 & 4650 / PARKWAY 2250 PARKWAY 2250 + / HIGHWAY 2130
15	A230013	SEAL RING	2	220 M28 / MOTOR 350D MK5 / PARKWAY 225
15*	A230021	SEAL RING	2	COMMANDER 3500DX/3510/3520 TG 3400 & 4650 / PARKWAY 2250 PARKWAY 2250 + / HIGHWAY 2130
16	A205902	BEARING	2	220 M28 / MOTOR 350D MK5 / PARKWAY 225
16*	A209044	BEARING	2	COMMANDER 3500DX/3510/3520 TG 3400 & 4650 / PARKWAY 2250 PARKWAY 2250 + / HIGHWAY 2130
17	MBC8328D	DEFLECTOR (SHORT)	1	MOTOR 350D / PARKWAY 225
17*	MBG2190	DEFLECTOR (SHORT)	1	PARKWAY 2250 / TG3400 & 4650
17*	MBC9586A	DEFLECTOR (LONG)	1	MOTOR 350D / PARKWAY 225
18	MBC8956A	BOLT	2	
19	450379	STIFFNUT M10	2	
20	A298383	SPACER	2	
21	A295274	PLASTIC PLUG	2	
22	A295286	ROUND INSERT	2	(PARKWAY 225)

\* NOT ILLUSTRATED


**RANSOMES**  
**SPORT 200**  
**MAGNA 250**

---

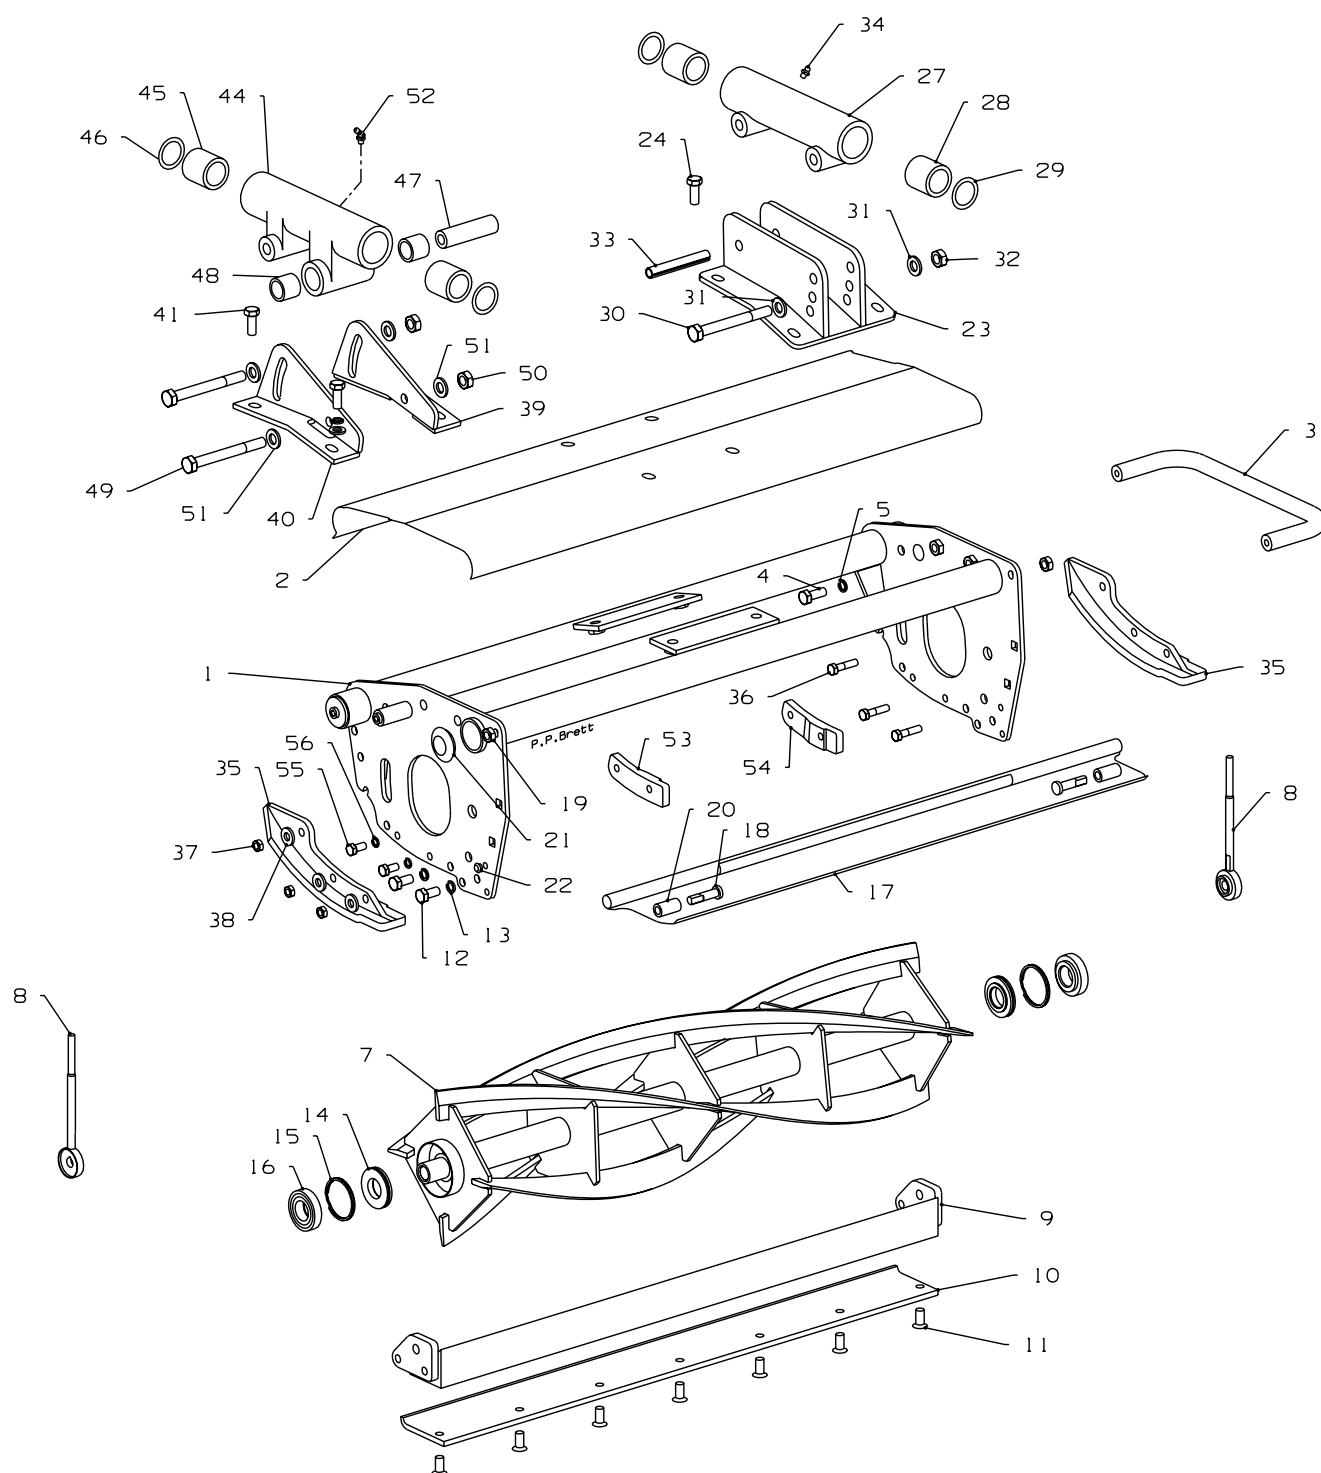

ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
		<b>FIXED HEAD MOUNTING.</b>		
23	MBC9623	PIVOT BRACKET	1	
24	450479	SCREW M10 X 30	4	
27	MBC8414	PIVOT BEARING	1	
28	A219331	BUSH	2	
29	A221321	O RING	2	
30	450059	BOLT M12 X 100	1	
31	450392	WASHER 12MM	2	
32	450380	STIFFNUT M12	1	
33	451807	TENSION PIN	1	
34	A299301	LUBRICATOR	1	
35	MBC8985	SKID	2	
36	450014	BOLT M8 X 30	6	
37	450378	STIFFNUT M8	6	
38	A907207	WASHER	6	
		<b>FLOATING HEAD MOUNTING</b>		
39	MBC9591	PIVOT BRACKET RH	1	
40	MBC9592	PIVOT BRACKET LH	1	
41	450479	SCREW M10 X 25	4	
44	MBE0022	PIVOT BEARING	1	
45	A219331	BUSH	2	
46	A221321	O RING	2	
47	MBC8417	PIVOT TUBE	1	
48	GSF3002TG	BUSH	2	
49	450061	BOLT M12 X 110	2	
50	450380	STIFFNUT M12	2	
51	450392	WASHER 12MM	4	
52	A299306	LUBRICATOR	1	
53	MBE2205	PAD LH	1	MOTOR 350D / PARKWAY 225
54	MBE2206	PAD RH	1	MOTOR 350D / PARKWAY 225
55	A110304	SCREW M8 X 20	4	MOTOR 350D / PARKWAY 225
56	A151008	S.L.WASHER 8MM	4	MOTOR 350D / PARKWAY 225
57*	A903468	DECAL - (-<->+)	4	
58*	A903816	DECAL - RANSOMES	1	
59*	A903818	DECAL - SPORT 200	1	
60*	A903494	DECAL - DANGER -	1	CUTTING CYLINDER


\* NOT ILLUSTRATED

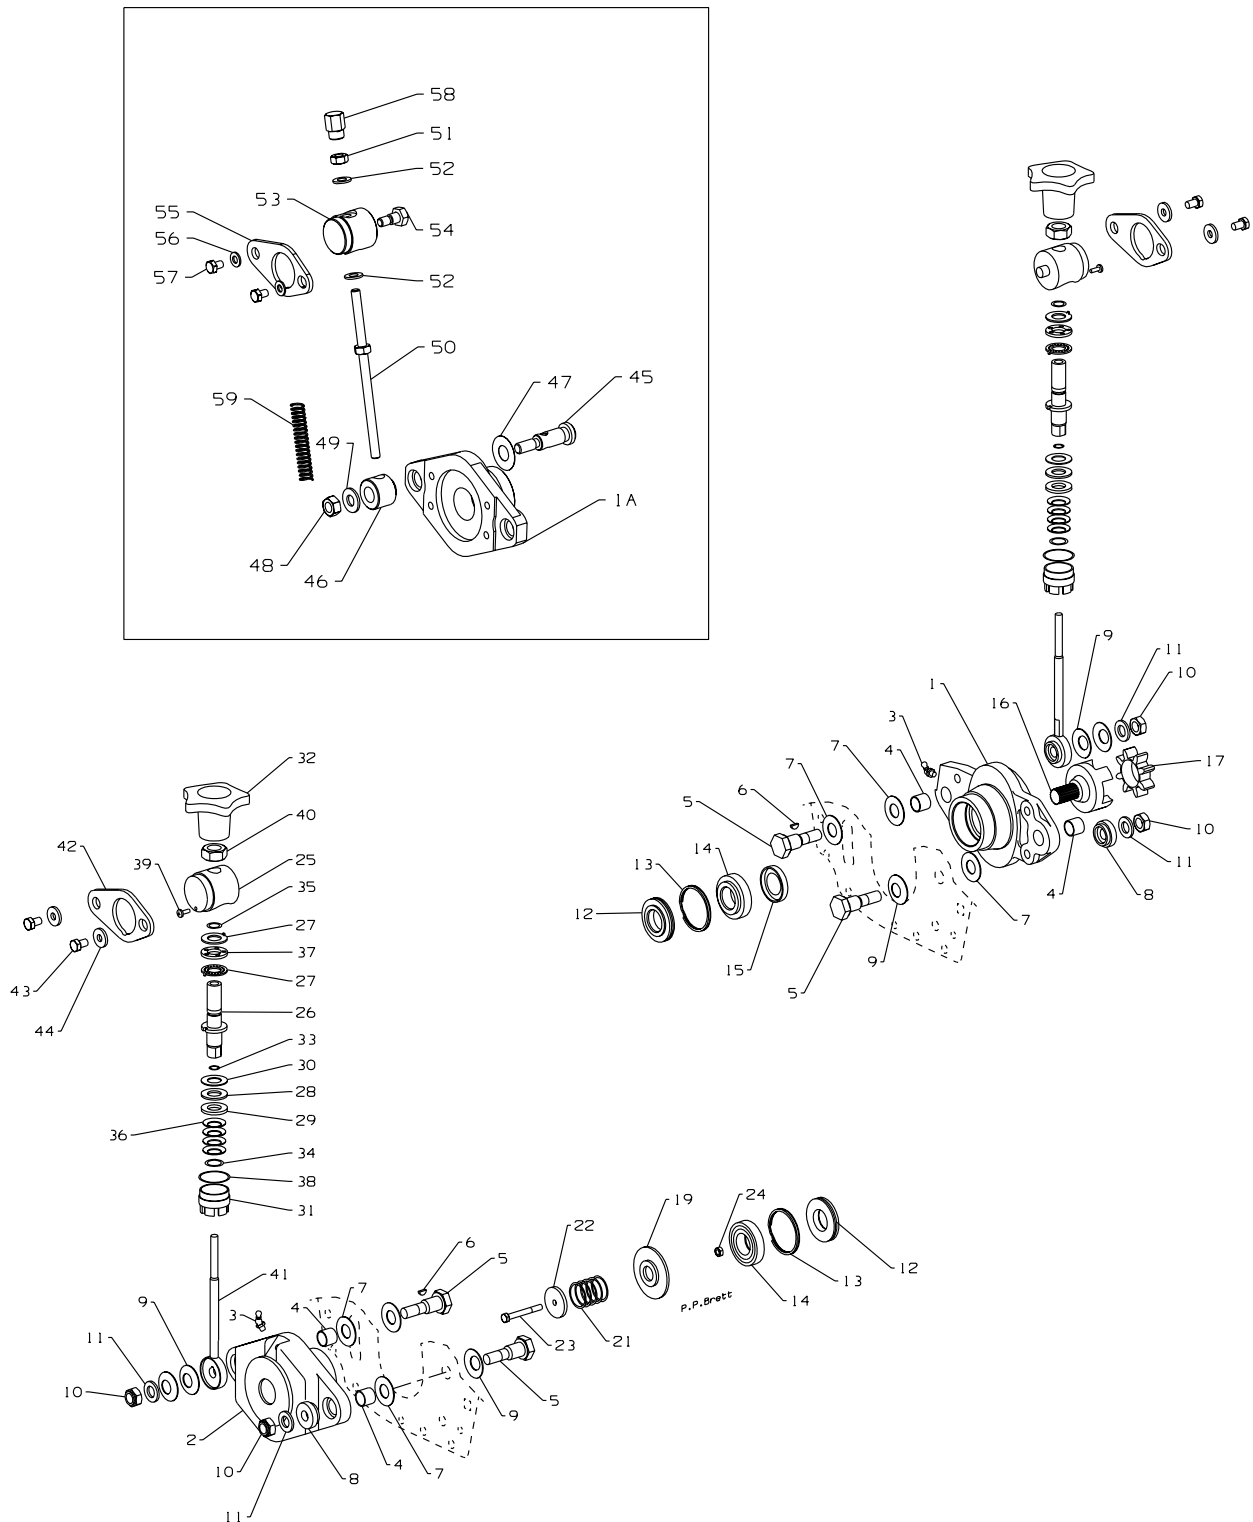




ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
1	LMSE057	BEARING HOUSING	1	(DRIVE SIDE) 220 M28 / PARKWAY 225 / MOTOR 350D MK5
*	A199302	• HELICOIL INSERT	4	
1A	MBE2229C	BEARING HOUSING	1	(DRIVE SIDE) PARKWAY 2250 / COMMANDER 3500DX / TG 3400 & 4650
2	MBC9180C	BEARING HOUSING	1	(NON DRIVE SIDE)
2A	MBG4936	BEARING HOUSING	1	COMMANDER 3520
3	A299316	LUBRICATOR	2	
4	A219324	BUSH	4	
5	MBC8191B	PIVOT PIN	4	
5A*	MBF1785	PIVOT PIN	2	COMMANDER 3520 (NON STANDARD DRIVE SIDE - CENTRE UNIT)
6	A163401	WOODRUFF KEY	4	
7	A159991	WASHER	6	
8	MBE0359	COLLAR	2	
9	A292122	DISC SPRING	6	
10	450380	STIFFNUT M12	4	
11	450392	WASHER 12MM	4	
12	MBE1185	RING CARRIER	2	220 M28 / MOTOR 350D MK5 / PARKWAY 225
12*	MBE2231	RING CARRIER	2	COMMANDER 3500DX/3510/3520 TG 3400 & 4650 / PARKWAY 2250 PARKWAY 2250 + / HIGHWAY 2130
13	A230021	SEAL RING	2	220 M28 / PARKWAY 225 / MOTOR 350D MK5
13*	A230013	SEAL RING	2	COMMANDER 3500DX/3510/3520 TG 3400 & 4650 / PARKWAY 2250 PARKWAY 2250 + / HIGHWAY 2130
14	A205902	BEARING	2	220 M28 / PARKWAY 225 / MOTOR 350D MK5
14*	A209044	BEARING	2	COMMANDER 3500DX/3510/3520 TG 3400 & 4650 / PARKWAY 2250 PARKWAY 2250 + / HIGHWAY 2130
15	A229987	SEAL	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
15*	A230019	SEAL	1	COMMANDER 3500DX/3510/3520 TG 3400 & 4650 / PARKWAY 2250 PARKWAY 2250 + / HIGHWAY 2130


\* NOT ILLUSTRATED

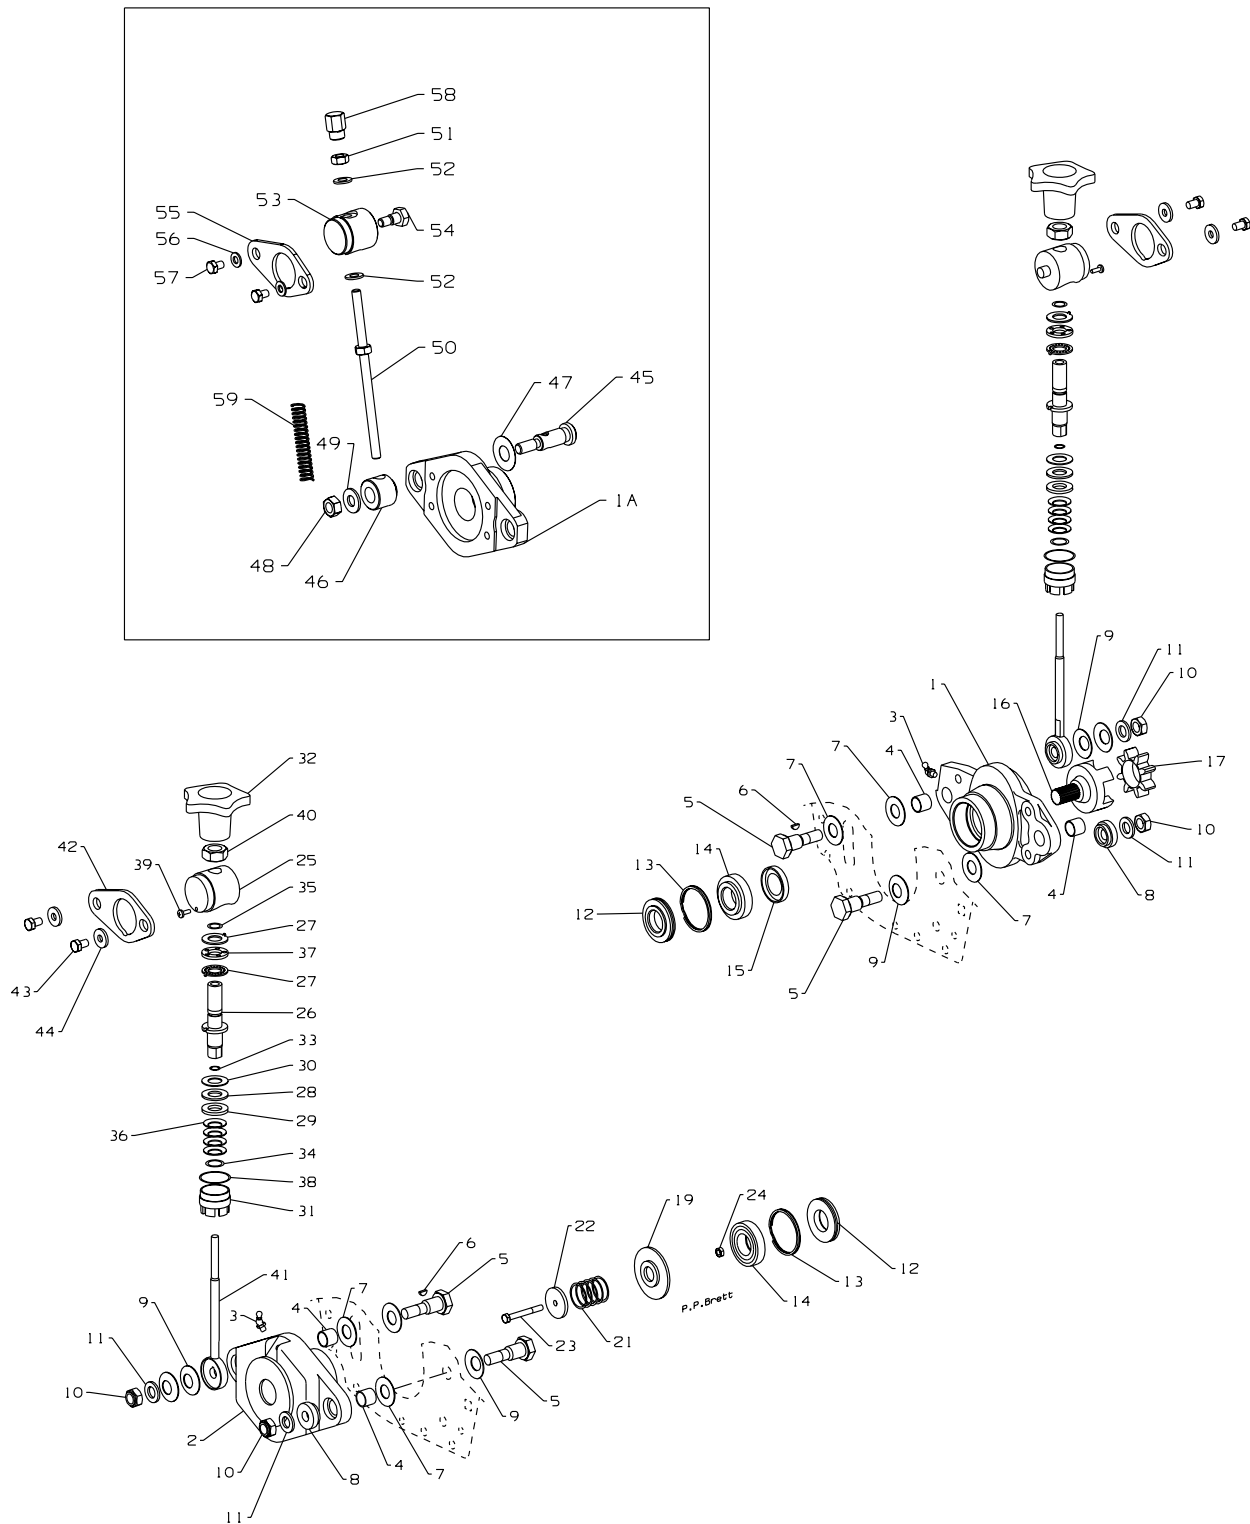

ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
16	MBC7984C	DRIVE SHAFT	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
17	A299456	ELEMENT	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
18	LMSE113	PLUNGER KIT	1	COMMANDER 3520 (NON STANDARD DRIVE SIDE - CENTRE UNIT)
19	MBE1392	• PLUNGER	1	
21	A291094	• SPRING	1	
21A*	A291132	• SPRING	1	
21B*	MBG4955	COLLAR	1	COMMANDER 3520 (NON STANDARD DRIVE SIDE - CENTRE UNIT)
22	MBF0544	• PLATE	1	
23	450004	• BOLT M6 X 50	1	
24	450377	• STIFFNUT M6	1	
	LMSE116	ADJUSTER ASSEMBLY (MAGNA)	2	
	LMSE117	ADJUSTER ASSEMBLY (SPORT)	2	
25	MBC9706B	• TRUNNION	1	
26	MBC9699A	• ADJUSTING NUT	1	
27	MBE0376	• CAM RING	2	
28	A207529	• THRUST BEARING	1	
29	A207530	• THRUST WASHER	1	
30	A207531	• THRUST WASHER	1	
31	MBC9814B	• GLAND NUT	1	
32	A299074	• HANDWHEEL	1	
33	A221014	• O RING	1	
34	A221012	• O RING	1	
35	A221017	• O RING	1	
36	A292293	• DISC SPRING	4	
37	MBE0473A	• BALL & CAGE ASSY	1	
38	A221027	• O RING	1	
39	450517	• SCREW M4 X 12	1	
40	450327	• NUT M16	1	
41	MBE0270	• ADJUSTING ROD (MAGNA)	1	
41*	MBE0271	• ADJUSTING ROD (SPORT)	1	
42	MBC9905A	PLATE	2	
43	450188	SCREW M8 X 12	4	
44	A907207	WASHER	4	

\* NOT ILLUSTRATED




ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
		SPANNER ADJUSTMENT		
45	MBF1415	CLAMP PIVOT	2	COMMANDER 3520 (NON STANDARD DRIVE SIDE - CENTRE UNIT)
45A*	MBF2135	CLAMP PIVOT	1	
46	MBF1418	CLAMP COLLAR	2	18 X 40 X 0.25
47	A159421	WASHER	2	
48	450380	NUT M12 NYLOC	2	
49	450402	WASHER M12	2	
50	MBG3957	STUD ASSEMBLY	2	
51	450325	NUT M10	2	
52	A292083	DISC SPRING	8	
53	MBF1413A	TRUNNION	2	
54	MBF1439	SHOULDER BOLT	2	
55	MBC9905A	PLATE	2	
56	A907207	SPECIAL WASHER	4	
57	450188	SCREW M8 X 12 HEX HD	4	
58	MBB2580	ADJUSTER	2	
59	A291130	SPRING	2	

\* NOT ILLUSTRATED


**RANSOMES**  
**SPORT 200**  
**MAGNA 250**

---

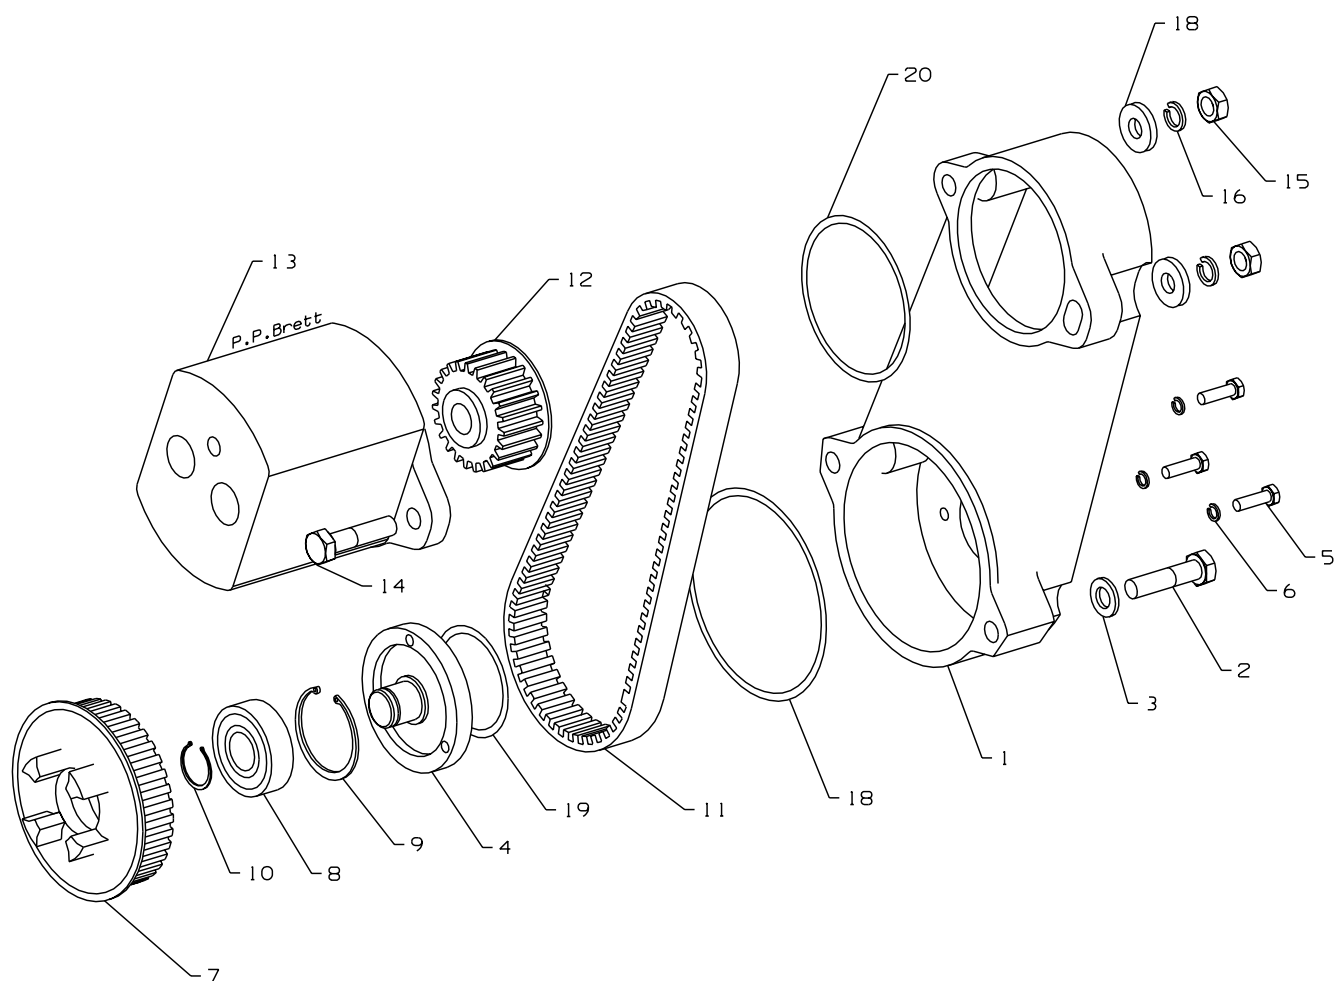


# BELT DRIVE ASSEMBLY


# LIST OF PARTS

ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
1	MBC9522B	DRIVE HOUSING	1	BI-DIRECTIONAL CLOCKWISE ANTICLOCKWISE
2	A100409	BOLT M10 X 45	2	
3	A151010	S.L.WASHER 10MM	2	
4	MBC8166A	STUB SHAFT	1	
5	A110204	SCREW M6 X 20	3	
6	A151006	S.L.WASHER 6MM	3	
7	MBE0192A	PULLEY (DRIVEN)	1	
8	A203604	BEARING	1	
9	A170047	CIRCLIP	1	
10	A171020	CIRCLIP	1	
11	A492107	DRIVE BELT (TOOTHED)	1	
12	MBE0190A	PULLEY (DRIVING)	1	
13	A800008	HYDRAULIC MOTOR 22CC/REV	1	
13	A809624	HYDRAULIC MOTOR 22CC/REV	1	
13	A809625	HYDRAULIC MOTOR 22CC/REV	1	
14	A100409	BOLT M10 X 45	2	
15	A130010	NUT M10	2	
16	A151010	S.L.WASHER 10MM	2	
17	MBC8846	WASHER	2	
18	A221046	ORING	1	
19	A221029	ORING	1	
20	A221043	ORING	1	


\* NOT ILLUSTRATED



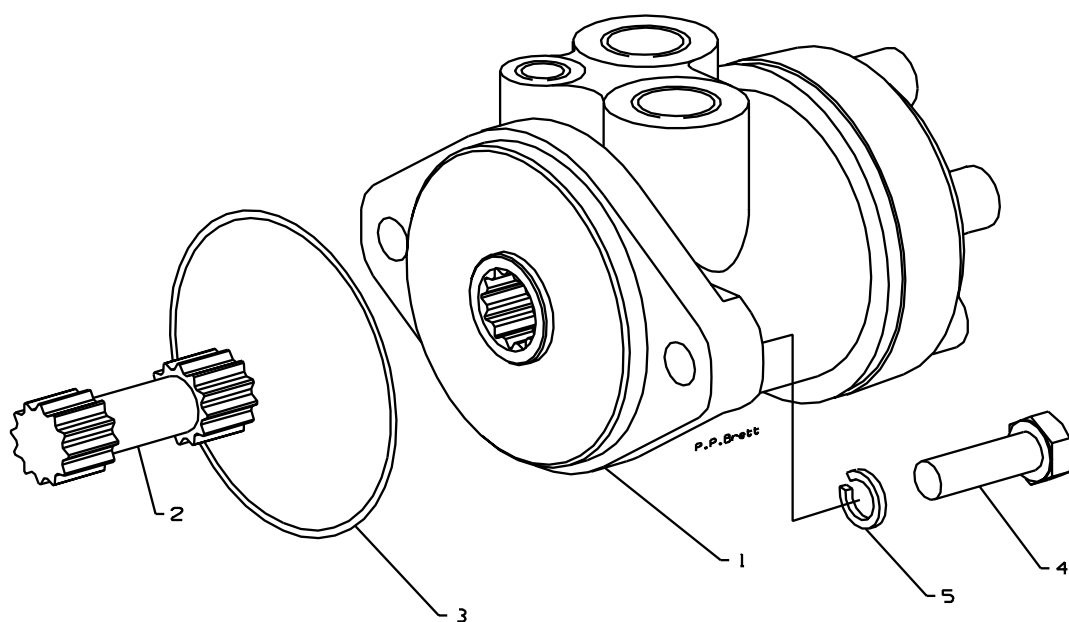


ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
1	A800020	HYDRAULIC MOTOR	1	
*	A230038	DANFOSS	1	
2	A800019	SEAL KIT	1	
		EXTERNAL CARDAN SHAFT	1	
3	A221327	O RING (1 TO BRG. HSG.)	1	
4	A110406	SCREW M10 X 30	2	
5	A151010	S.L.WASHER 10MM	2	



\* NOT ILLUSTRATED

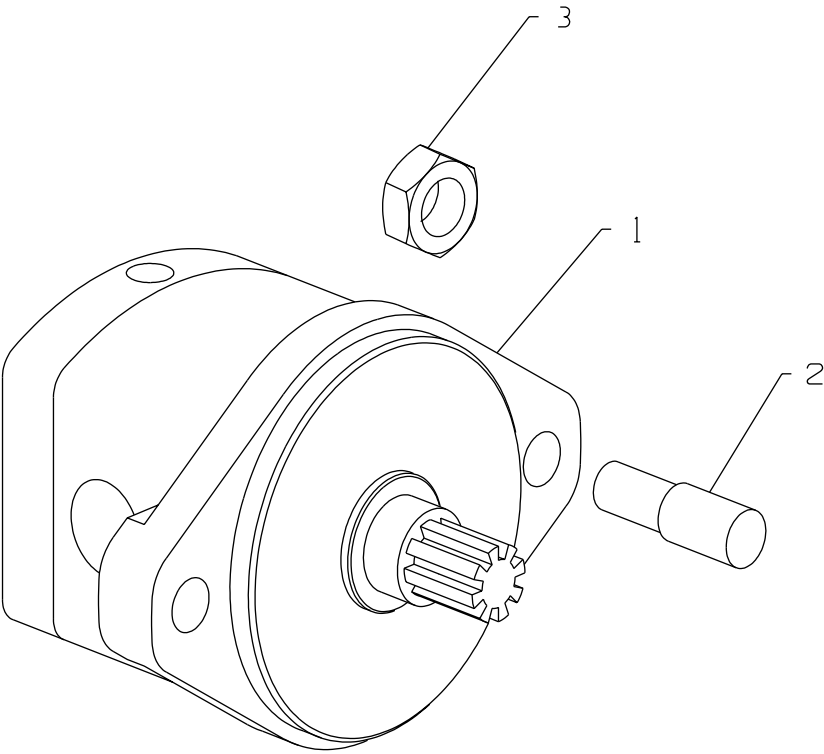

ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
1	A800604	HYDRAULIC MOTOR (ULTRA)		TOP DRAIN
1	A800651	HYDRAULIC MOTOR (ULTRA)		BOTTOM DRAIN
*	A230110	• SEAL KIT	1	
2	2203039	STEP STUD	2	
3	450379	NUT	2	
4*	W158061-04	'O' RING	1	COMMANDER 3520 (QTY 2 CENTRE UNIT)


\* NOT ILLUSTRATED

**RANSOMES**  
**SPORT 200**  
**MAGNA 250**

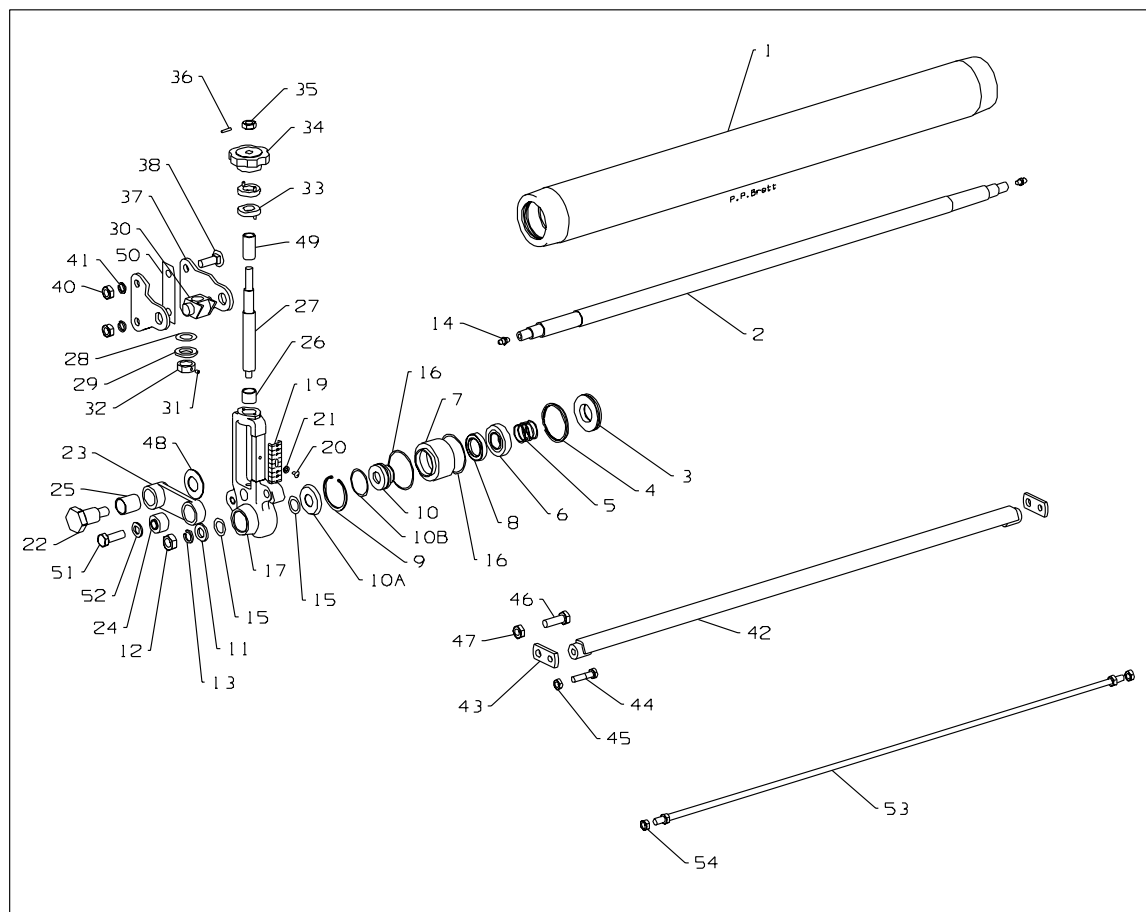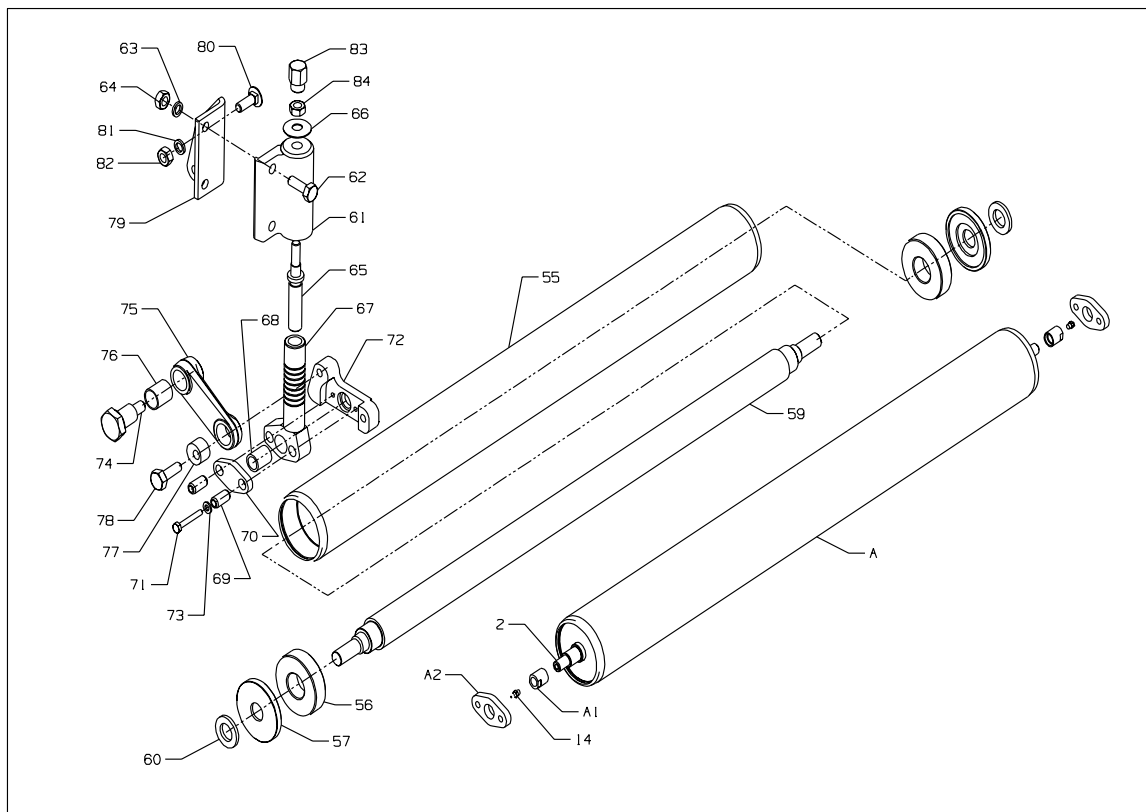


# REAR ROLL ASSEMBLY & ADJUSTERS

# LIST OF PARTS

ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
A	LMSE027	ROLL ASSEMBLY	1	
1	MBE2174C	• ROLL	1	
2	MBG0836	• ROLL SPINDLE	1	
3	MBF0349	• RING CARRIER	2	
3A	MBF0002	• WASHER	2	
3B	A292134	• DISC SPRING	AR	
4	A230013	• SEAL RING	2	
5	A291115	• SPRING	2	
6	A205929	• BEARING	2	
7	MBE2429	• BEARING HOUSING	2	
8	A220254	• SEAL	2	
9	451982	• CIRCLIP	2	
10	MBE2430	• SEAL JOURNAL	2	
10A	MBE2431B	• SHIELD	2	
10B	A230021	• SEAL RING	2	
11	MBE1372	• WASHER	2	
12	450326	• NUT M12	2	
13	450413	• S.L.WASHER 12MM	2	
14	A299301	• LUBRICATOR	2	
15	A221910	• O RING	4	
16	A221137	• O RING	4	
17	MBE1401A	ROLL SUPPORT LH	1	
18*	MBE1402A	ROLL SUPPRT RH	1	
19	A903461	INDICATOR	2	
20	450515	SCREW M4 X 8	2	
21	450387	WASHER 4MM	2	
22	MBC8156A	PIN	2	
23	MBC9333B	LEVER	2	
24	A217001	RUBBER BUSH	2	
25	A219323	BUSH	2	
26	A219327	BUSH	2	
27	MBC9172A	ADJUSTING SCREW	2	
28	A221911	ORING	2	
29	450393	WASHER 16MM	2	
30	MBC8160B	TRUNNION NUT	2	
31	450940	GRUBSCREW M4 X 4	2	
32	MBC8568	STOP COLLAR	2	
33	A914651	LOCKING WASHER	4	
34	A913331	HANDWHEEL	2	
35	450325	NUT M10	2	
36	A141424	TENSION PIN	2	
37	MBC8158B	BRACKET	4	
38	452586	BOLT M10 X 30	3	
39	452587	BOLT M10 X 35	1	
40	450325	NUT M10	4	
41	450412	S.L.WASHER 10MM	4	
42	MBE1434	SCRAPER (BAR)	1	
43	MBE1415	PLATE	2	
44	450016	BOLT M8 X 40	2	

\* NOT ILLUSTRATED


## Parts-26

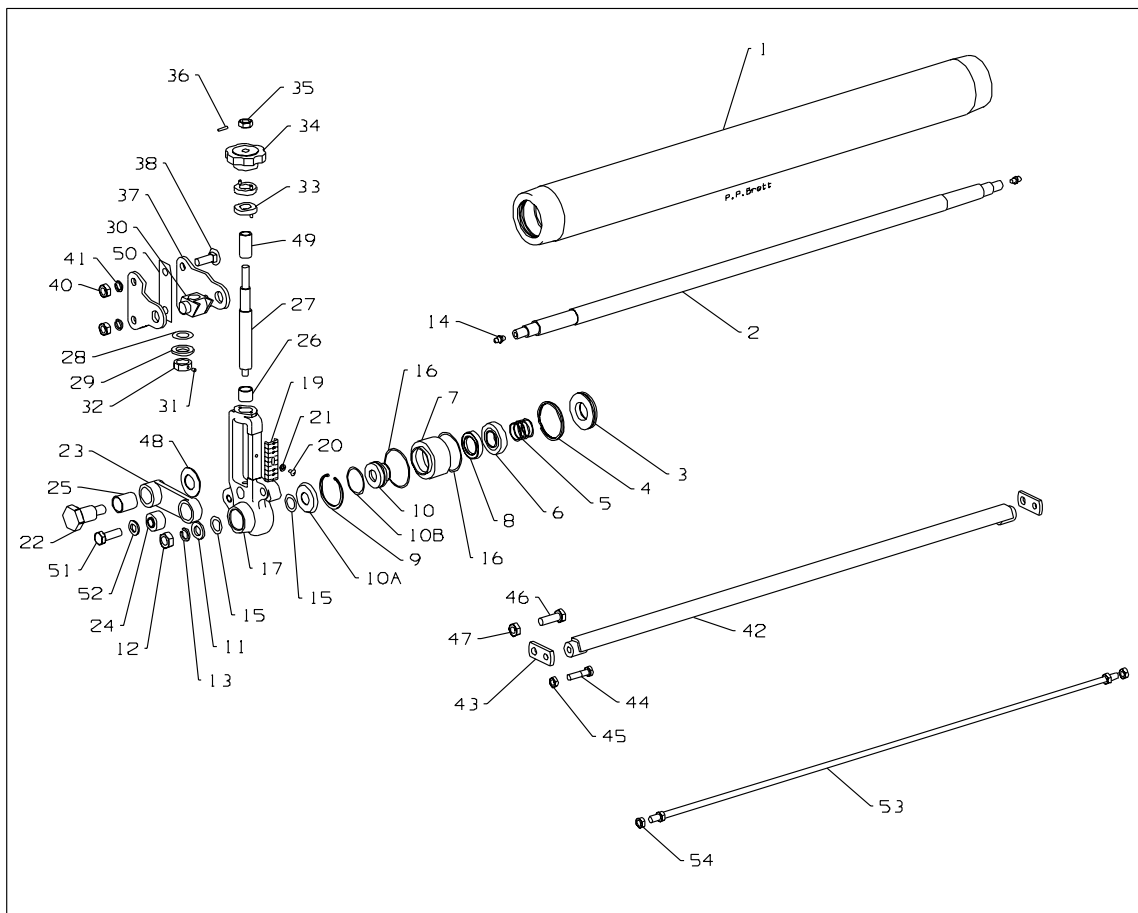





# REAR ROLL ASSEMBLY & ADJUSTERS

# LIST OF PARTS

ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
45	450378	STIFFNUT M8	2	VERTICUT UNIT ONLY
46	450215	SCREW M10 X 30	2	
47	450379	STIFFNUT M10	2	
48	A292134	DISC SPRING	2	
49	A219332	BUSH	2	
50	MBE2252A	PLATE	2	
51	450215	SCREW M10 X 30	2	
52	450391	WASHER 10MM	2	
53*	A906712	SCRAPER (WIRE)	1	
54*	450378	STIFFNUT M8	2	
*	MBE3195A	SPRING RETAINER TOOL	1	TO DISMANTLE C/U ROLL.
<b>SPANNER ADJUSTMENT</b>				
	MBF1426	ROLL ASSEMBLY	1	PLAIN
55	MBG2925	• ROLL TUBE	1	28 X 68 X 18
56	A203940	• BEARING	2	
57	MBF1107A	• BEARING SPACER	2	
58	451998	• INT. CIRCLIP	2	
59	MBG2924A	• ROLL SPINDLE	1	
60	A230086	• RB20 GAMMA SEAL	2	
61	MBB6818	OUTER SLEEVE LH	1	
*	MBB6817	OUTER SLEEVE RH	1	
62	450215	SCREW M10 X 30 HEX HD	4	
63	450412	S.L. WASHER M10	4	
64	450325	NUT M10	6	M8 MOUNTING HOLES M6 MOUNTING HOLES
65	MBB2579A	SCREW	2	
66	A292121	DISC SPRING	2	
67	4119718	SKID MOUNTING ASSEMBLY	2	
	MBC8148	SKID MOUNTING ASSEMBLY	2	
68	MBB2587	BUSH	2	
69	451761	TENSION PIN 12 X 24	4	
70	4119722	OUTER PLATE	2	
	MBG6096	OUTER PLATE	2	
*	4119721	OUTER PLATE	2	
	MBF0885C	OUTER PLATE	2	FOR USE WITH M6 BOLTS USE WITH DISPOSABLE ROLL M6 MOUNTING HOLES USE WITH STANDARD ROLL M6 MOUNTING HOLES
71	450016	BOLT M8 X 40 HEX HD	4	
	450003	BOLT M6 X 40 HEX HD	4	
72	4119720	SUPPORT PLATE LH	1	
	MBF1858A	SUPPORT PLATE LH	1	
*	4119719	SUPPORT PLATE RH	1	
	MBF1857A	SUPPORT PLATE LH	1	
*	A292110	SPRING DISK 16.3 X 31.5 X .08	2	
73	450390	WASHER M8	4	
74	MBC8156A	PIN	4	M8 MOUNTING HOLES M6 MOUNTING HOLES M8 MOUNTING HOLES M6 MOUNTING HOLES
75	MBC9333B	LEVER	2	
76	A219323	BUSH	2	
77	MBG2168A	ECCENTRIC BUSH	2	
78	MBF1421	CLAMP BOLT - ECCENTRIC	2	
79	MBG3970A	BRACKET REAR ROLL LH	1	
*	MBG3969A	BRACKET REAR ROLL RH	1	
80	452586	BOLT M10 X 30 SQ NECK	4	


\* NOT ILLUSTRATED

**RANSOMES**  
**SPORT 200**  
**MAGNA 250**

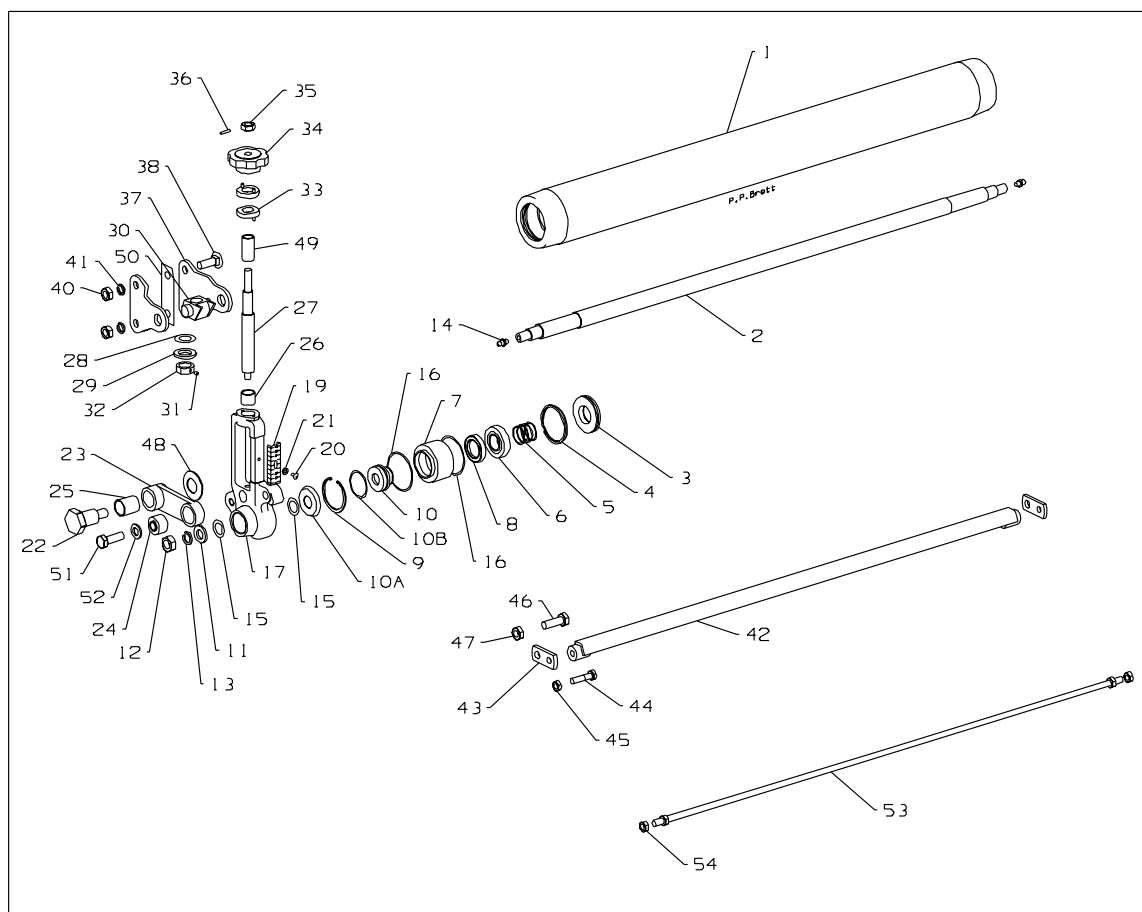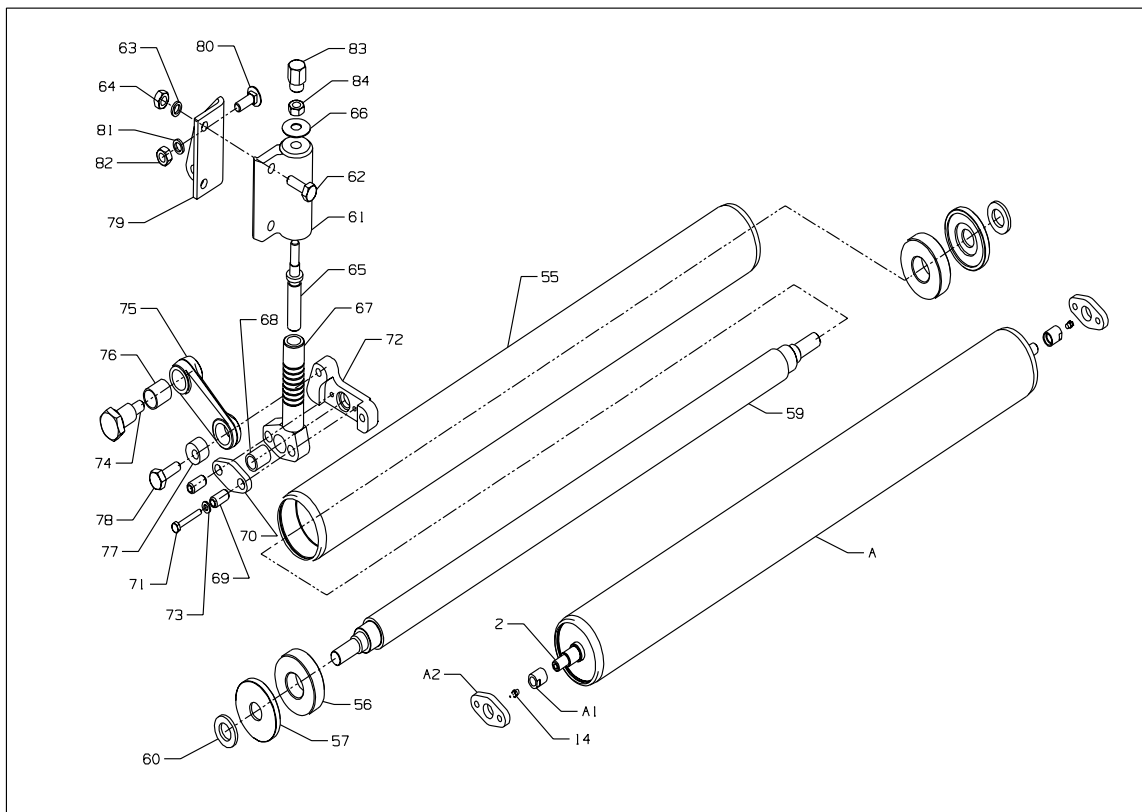

# REAR ROLL ASSEMBLY & ADJUSTERS


# LIST OF PARTS

ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
81	450412	S.L.WASHER M10	4	FOR ROLL LMSE027 WITH SPANNER HEIGHT AJUSTMENT.
82	450325	NUT M10	4	
83	MBB2580	ADJUSTER	2	
84	450325	NUT M10	2	
A1	MBF1693	SPINDLE ADAPTER	2	
A2	MBF0855C	OUTER PLATE	2	

\* NOT ILLUSTRATED


**RANSOMES**  
**SPORT 200**  
**MAGNA 250**

---

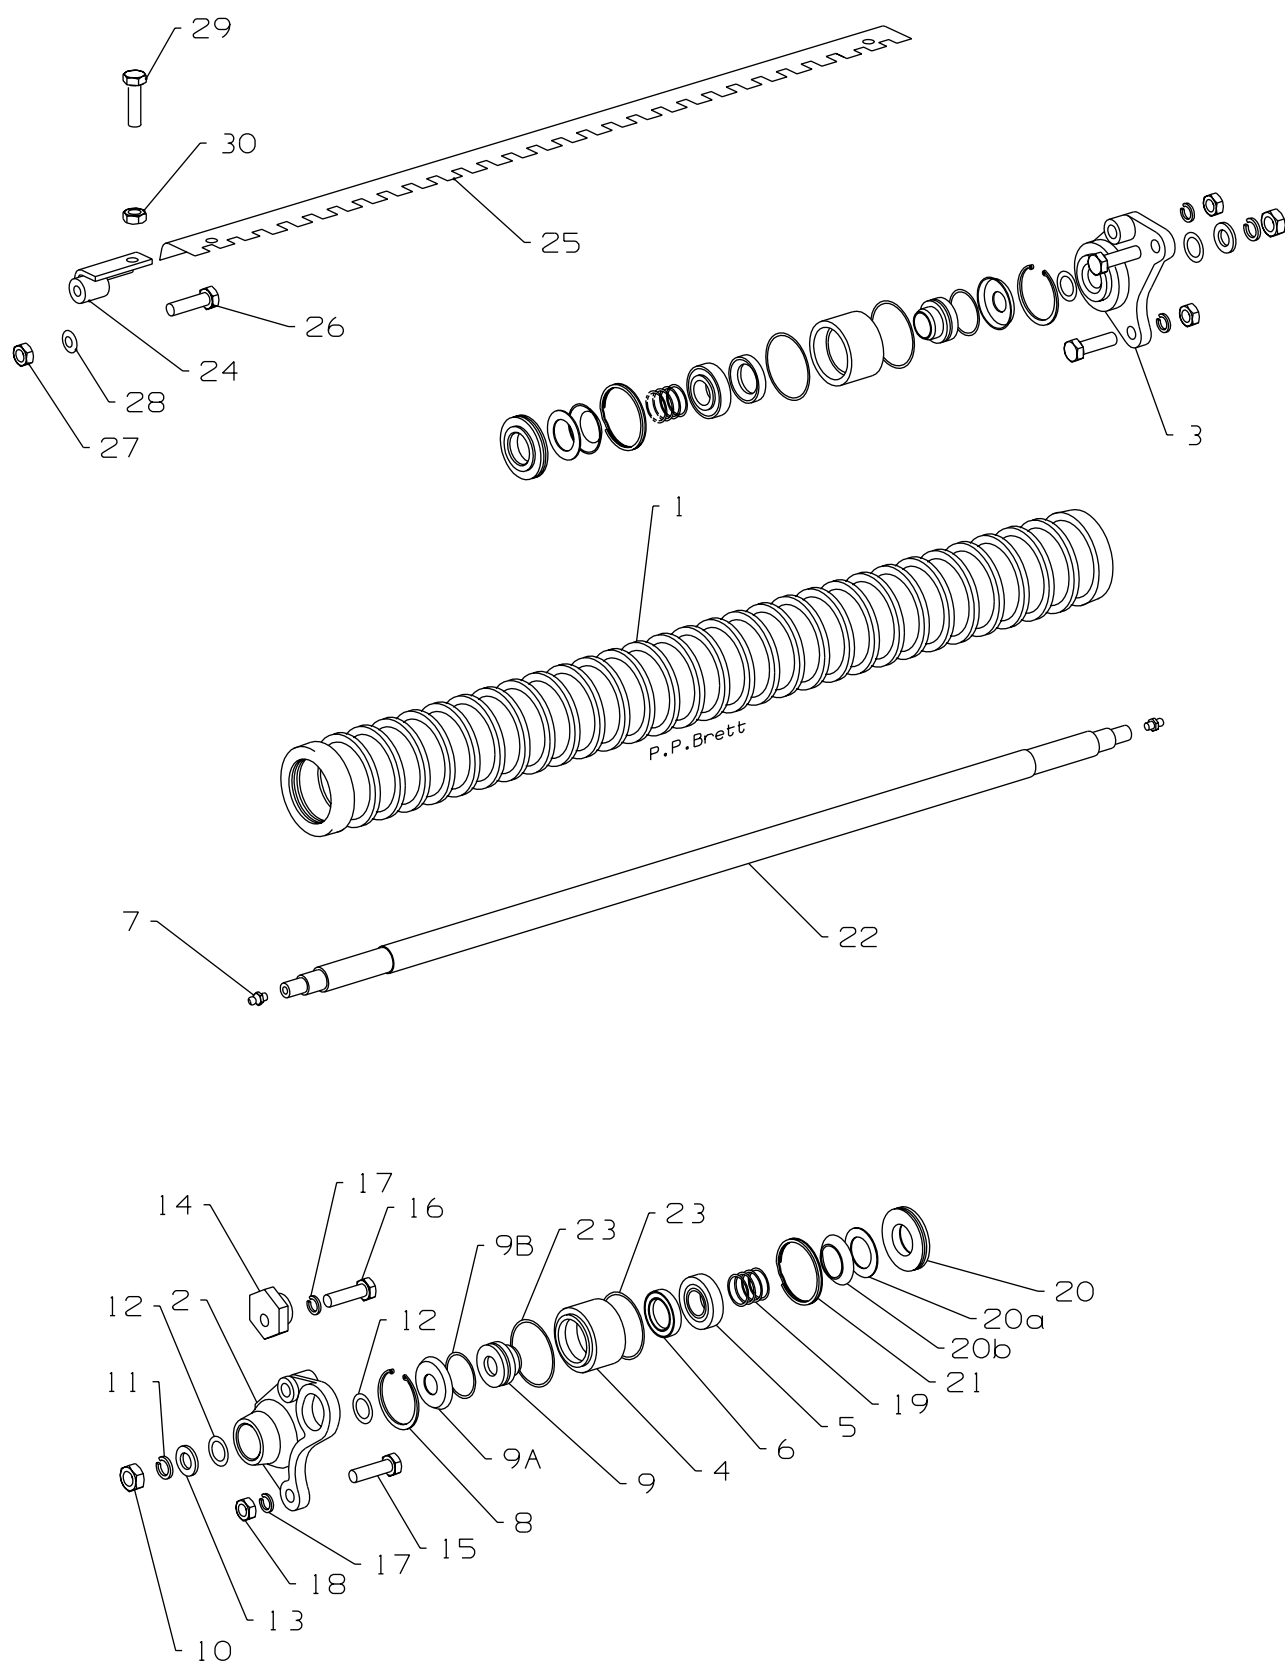


# FRONT ROLL ASSEMBLY AND ADJUSTERS

# LIST OF PARTS


ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
1	MBE1361A	ROLL TUBE	1	(CONT ITEM 1, 4 -13, 19 - 23)
2	MBE1413B	SUPPORT LH	1	
3	MBE1414B	SUPPORT RH	1	
4	MBE2429	BEARING HOUSING	2	
5	A205929	BEARING	2	
6	A220254	SEAL	2	
7	A299301	LUBRICATOR	2	
8	451982	CIRCLIP	2	
9	MBE2430	SEAL JOURNAL	2	
9A	MBE2431B	SHIELD	2	
9B	A230021	SEAL RING	2	
10	450326	NUT M12	2	
11	450413	S.L.WASHER 12MM	2	
12	A221910	ORING	4	
13	MBE1372	WASHER	2	
14	MBC8317A	ECCENTRIC NUT	1	
15	450215	SCREW M10 X 30	3	
16	450216	SCREW M10 X 35	1	
17	450412	S.L.WASHER 10MM	4	
18	450325	NUT M10	3	
19	A291115	SPRING	2	
20	MBF0349	RING CARRIER	2	
20A	MBF0002	WASHER	2	
20B	A292134	DISC SPRING	AR	
21	A230013	SEAL RING	2	
22	MBG0836	ROLL SPINDLE	1	
23	A221137	ORING	4	
	LMSE028	ROLL ASSEMBLY	1	
24	MBF0034	PIVOT	2	
25	MBG0095	SCRAPER	1	
26	450020	BOLT, M8 X 60, HEX HD	2	
27	450378	NUT, M8 NYLOC	2	
28	A292134	DISC SPRING	4	
29	450192	SCREW M8 X 25	2	
30	450378	NUT M8 STAYTITE	1	

\* NOT ILLUSTRATED

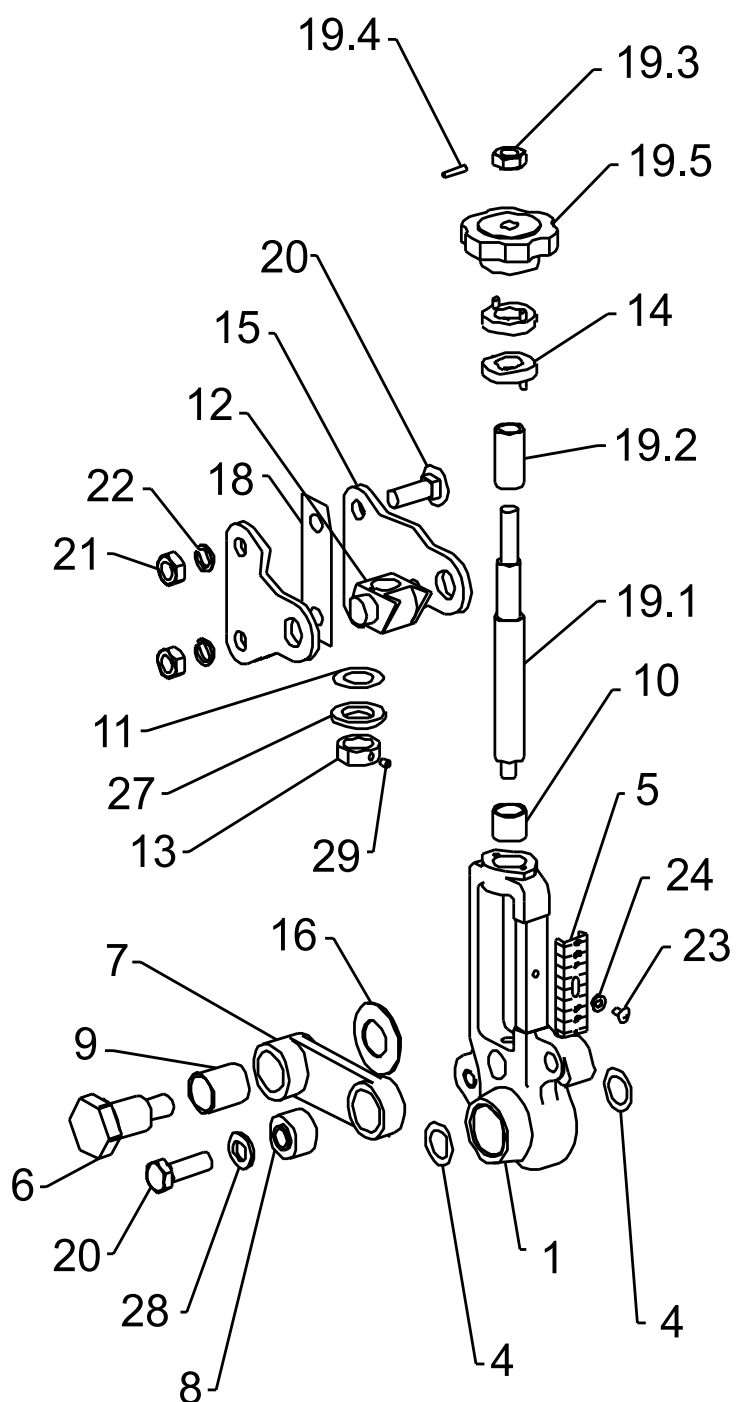


**HIGH HIGHT OF CUT KIT (FRONT) FOR FLOATING HEAD  
SPORT 200 (COMMANDER 3500, 3510 & 3520)**

**LIST OF PARTS**

ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
1	LMAB212	HIGH HOC KIT		FOR FLOATING HEAD
2*	MBE1401A	• SUPPORT, LH ROLL	1	
3*	MBE1402A	• SUPPORT, RH ROLL	1	
4	002993013	• LUBRICATOR-M6 STR	2	
5	002219100	• O-RING 16 ID X 4 SECT	4	
6	009034612	• INDICATOR	2	
7	MBC8156A	• PIN	2	
8	MBC9333C	• LEVER	2	
9	002170013	• RUBBER BUSH	2	
10	002193237	• BUSH-NYLON 20 X 23 X 25	2	
11	002193279	• BUSH-NYLON 16 X 18 X 12	2	
12	002219110	• O-RING 16 ID X 6 SECT	2	
13	MBC8160B	• NUT, TRUNNION	2	
14	MBC8568	• COLLAR, STOP	2	
15	009146512	• LOCKING WASHER — NYLON	4	
16	MBC8158B	• BRACKET	4	
17*	002921345	• SPRG-DISC 20.4 X 40 X 1.5	2	
18	MBE1372	• WSHR-12.5 X 26.15 X 3	2	FOR ITEM 6
19	MBE2252A	• PACKER	2	
19.1	MBE2638	• HANDWHEEL	2	
19.2	MBC9172A	• • ADJUSTING SCREW	1	
19.3	002193320	• • BUSH-NYLON 13 X 15.65 X 31	1	
19.4	450325	• • NUT-HEX M10	1	
19.5	451579	• • PIN-TENSION 3 X 16	1	
20	009133317	• • HANDWHEEL	1	
21	450215	• SCREW-HEX M10 X 30	6	
22	450325	• NUT-HEX M10	4	
23	450412	• LOCKWSHR-M10 X 15.9 X 2.5	4	
24	450515	• SCR-W-PAN HD M4 X 8	2	
25*	450387	• WSHR-M4 X 9 X 0.9	2	
27	450380	• NUT-HEX M12 NYLOC	2	FOR ITEM 6
28	450393	• WSHR-M16 X 30 X 3.3	2	
29	450391	• WSHR-M10 X 21 X 2.2	2	
	450940	• SCR-W-SET M4 X 4, CUP PNT	2	


\* NOT ILLUSTRATED

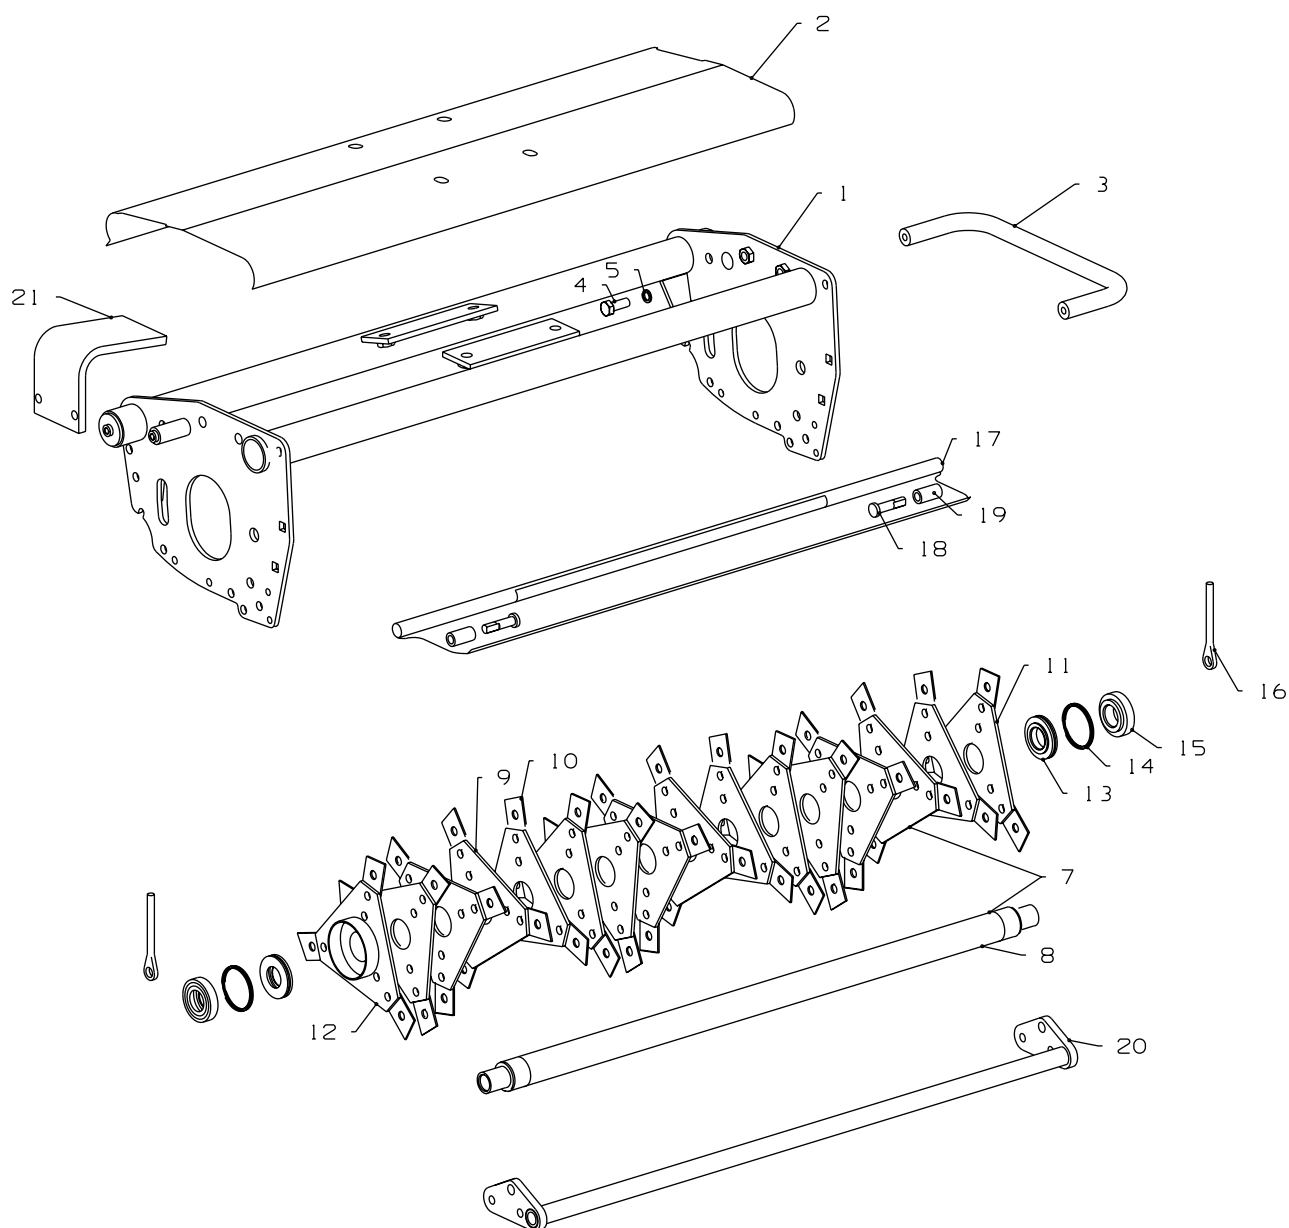




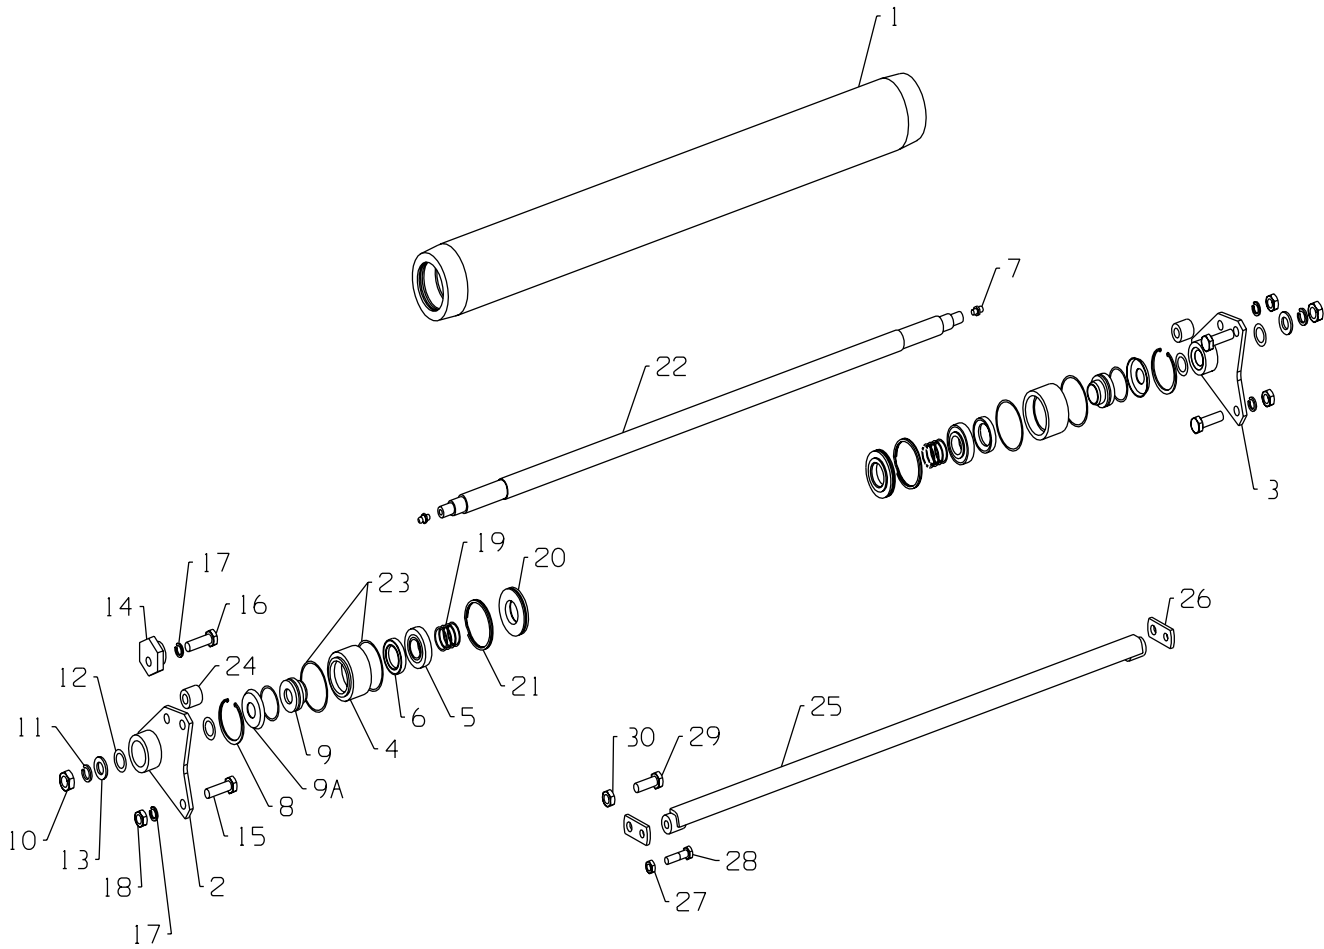
ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
1	MBC8950B	FRAME ASSEMBLY	1	
*	A295274	PLASTIC PLUG	2	
2	MBC8936	COVER	1	
3	MBE2649	GUARD	1	
4	A110396	SCREW M8 X 16	1	
5	A150008	WASHER 8MM	1	
7	MBE2669	VERTICUT CYLINDER	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
7*	MBE4148	VERTICUT CYLINDER	1	COMMANDER 3500DX / 3510
7A*	MBF1471	VERTICUT CYLINDER	1	COMMANDER 3520
8	MBC9896	SPINDLE	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
8*	MBE1627	SPINDLE	1	
9	MBE2673	COLLAR ASSY.	16	
10	A920038	BLADE	3	
10*	A110494	SCREW	3	
10*	A151010	WASHER	3	
10*	A141522	TENSION PIN	3	
11	MBE2672	END COLLAR ASSY LH	1	
12	MBE2671	END COLLAR ASSY RH	1	
13	MBE1185	RING CARRIER	2	220 M28 / PARKWAY 225 / MOTOR 350D MK5
13*	MBE2231	RING CARRIER	2	COMMANDER 3500DX / 3510 / 3520
14	A231003	SEAL RING	2	220 M28 / PARKWAY 225 / MOTOR 350D MK5
14*	A230021	SEAL RING	1	COMMANDER 3500DX / 3510 / 3520
14*	A205902	BEARING	2	220 M28 / PARKWAY 225 / MOTOR 350D MK5
14*	A209044	BEARING	2	COMMANDER 3500DX / 3510 / 3520
16	MBE2701	ADJUSTING ROD	2	
17	MBC8328D	DEFLECTOR (SHORT)	1	
18	MBC8956	BOLT	2	
19	A298383	SPACER	2	
20	MBE2679A	SUPPORT	1	
21	MBE1276	ROLLER BRACKET	2	


\* NOT ILLUSTRATED

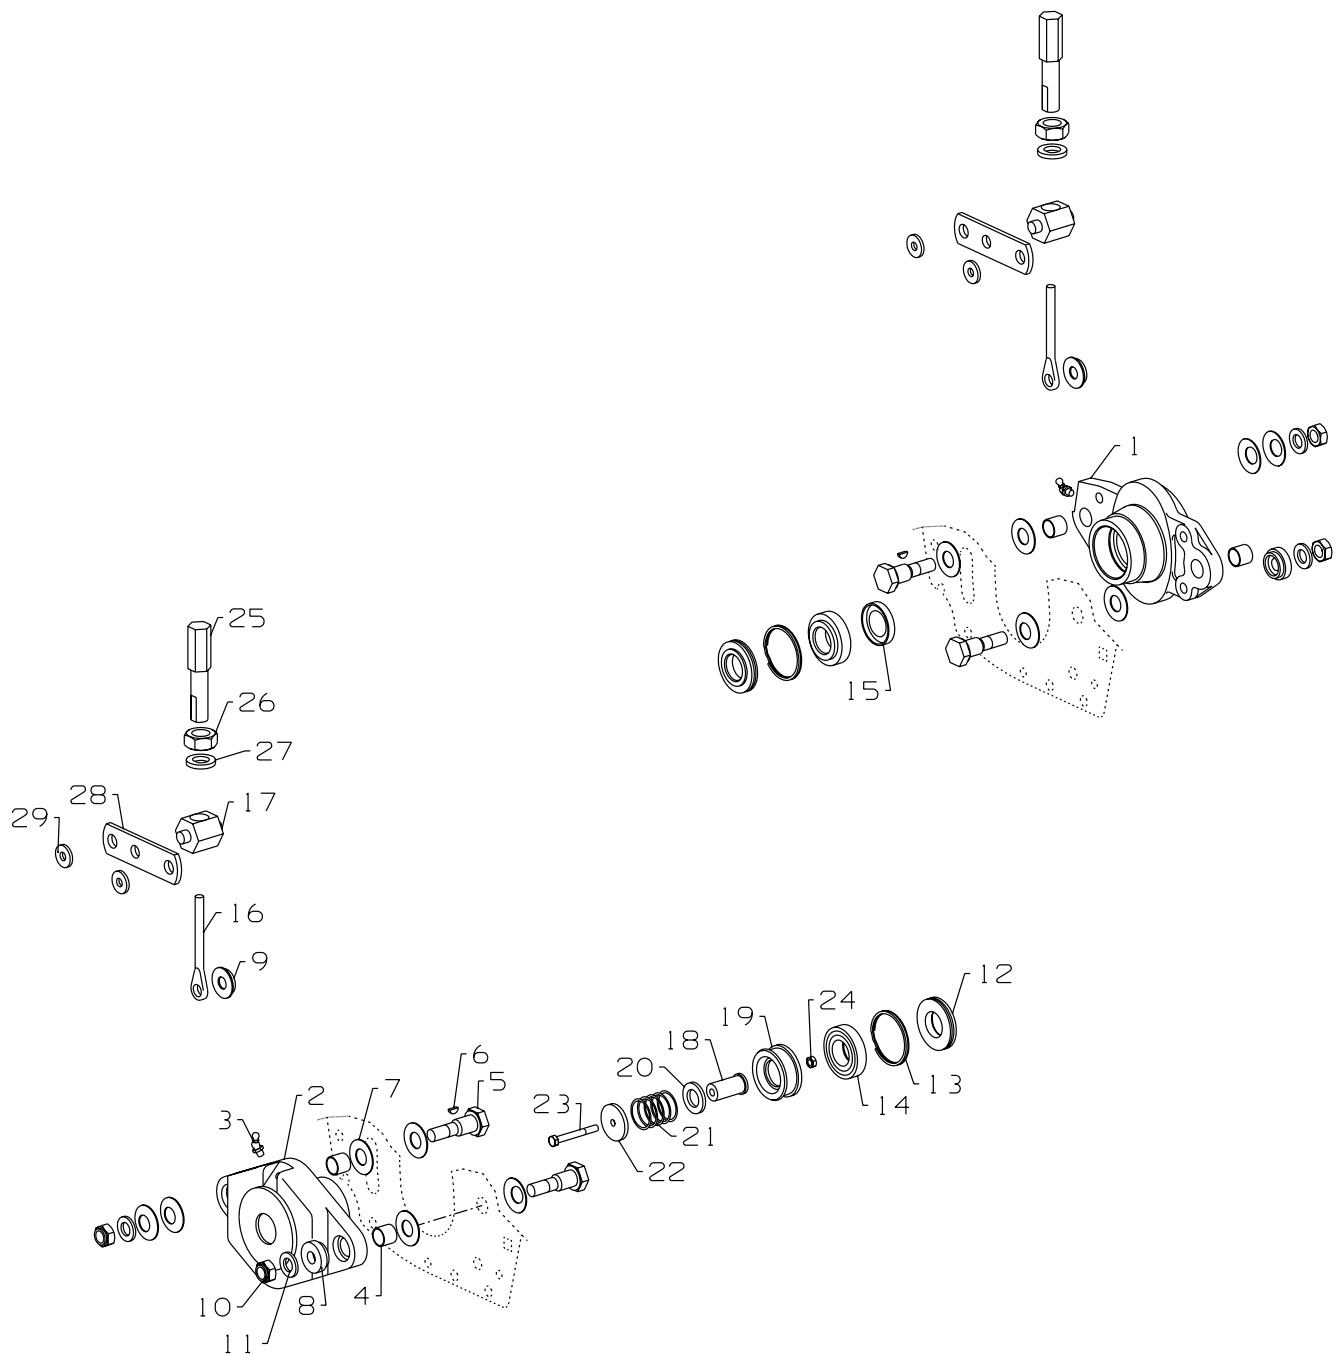

ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
1	LMSE057	BEARING HOUSING	1	(DRIVE SIDE) 220 M28 / PARKWAY 225 / MOTOR 350D MK5
*	A199302	• HELICOIL INSERT	4	
1*	MBE2229B	BEARING HOUSING	1	(DRIVE SIDE) PARKWAY 2250 / COMMANDER 3500DX / 3510 / TG 3400 & 4650 NON DRIVE SIDE
2	MBC9180B	BEARING HOUSING	1	
3	A299316	LUBRICATOR	2	
4	A219324	BUSH	4	
5	MBC8191B	PIVOT PIN	4	
6	A163401	WOODRUFF KEY	4	
7	A159991	WASHER	6	
8	MBE0359	COLLAR	2	
9	MBE2703	COLLAR	2	
10	A133212	STIFFNUT M12	4	
11	A150012	WASHER 12MM	4	
12	MBE1185	RING CARRIER	2	220 M28 / PARKWAY 225 / MOTOR 350D MK5
12*	MBE2231	RING CARRIER	2	COMMANDER 3500DX / 3510
13	A230013	SEAL RING	2	220 M28 / PARKWAY 225 / MOTOR 350D MK5
13*	A230021	SEAL RING	2	COMMANDER 3500DX / 3510
14	A205902	BEARING	2	220 M28 / PARKWAY 225 / MOTOR 350D MK5
14*	A209044	BEARING	2	COMMANDER 3500DX / 3510
15	A229987	SEAL	1	220 M28 / PARKWAY 225 / MOTOR 350D MK5
15*	A230019	SEAL	1	COMMANDER 3500DX / 3510
16	MBE2701	ADJUSTING ROD	2	
17	MBE2699	TRUNNION	2	
18	MBC9178	GUIDE	1	
19	MBC9175	PLUNGER	1	
20	A150016	WASHER 16MM	1	
21	A291094	SPRING	1	
22	MBC9177	PLATE	1	
23	A100210	BOLT M6 X 50	1	
24	A133206	STIFFNUT M6	1	
25	MBE2700A	ADJUSTER	2	
26	A130016	NUT M16	2	
27	MBC9251	COLLAR	2	
28	MBE2702	PLATE	2	
29	MBE2263	WASHER	4	

\* NOT ILLUSTRATED




ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
1	MBE2174	ROLL TUBE	1	TO DISMANTLE C/U ROLL.
2	MBE2676	SUPPORT LH	1	
3	MBE2675	SUPPORT RH	1	
4	MBE2429	BEARING HOUSING	2	
5	A205929	BEARING	2	
6	A220254	SEAL	2	
7	A299301	LUBRICATOR	2	
8	A170052	CIRCLIP	2	
9	MBE2430	SEAL JOURNAL	2	
9A	MBE2431	SHIELD	2	
9B	A230021	SEAL RING	2	
10	A130012	NUT M12	2	
11	A151012	S.L.WASHER 12MM	2	
12	A221910	ORING	4	
13	MBE1372	WASHER	2	
14	MBC8317A	ECCENTRIC NUT	1	
15	A110406	SCREW M10 X 30	3	
16	A110407	SCREW M10 X 35	1	
17	A151010	S.L.WASHER 10MM	4	
18	A130010	NUT M10	3	
19	A291115	SPRING	2	
20	MBE1363	RING CARRIER	2	
21	A230013	SEAL RING	2	
22	MBE1362	ROLL SPINDLE	1	
23	A221137	ORING	4	
24	MBE3454	SPACER	2	
25	MBE1434	SCRAPER	1	
26	MBE1415	PLATE	2	
27	A133208	STIFF NUT M8	2	
28	A100308	BOLT M8 X 40	2	
29	A110406	SCREW M10 X 30	2	
30	A133210	STIFF NUT M10	2	
30*	MBE3195A	SPRING RETAINER TOOL	1	
31*	A906712	SCRAPER (WIRE)	1	
32*	A133208	STIFF NUT M8	2	

\* NOT ILLUSTRATED

**RANSOMES**  
**SPORT 200**  
**MAGNA 250**

---

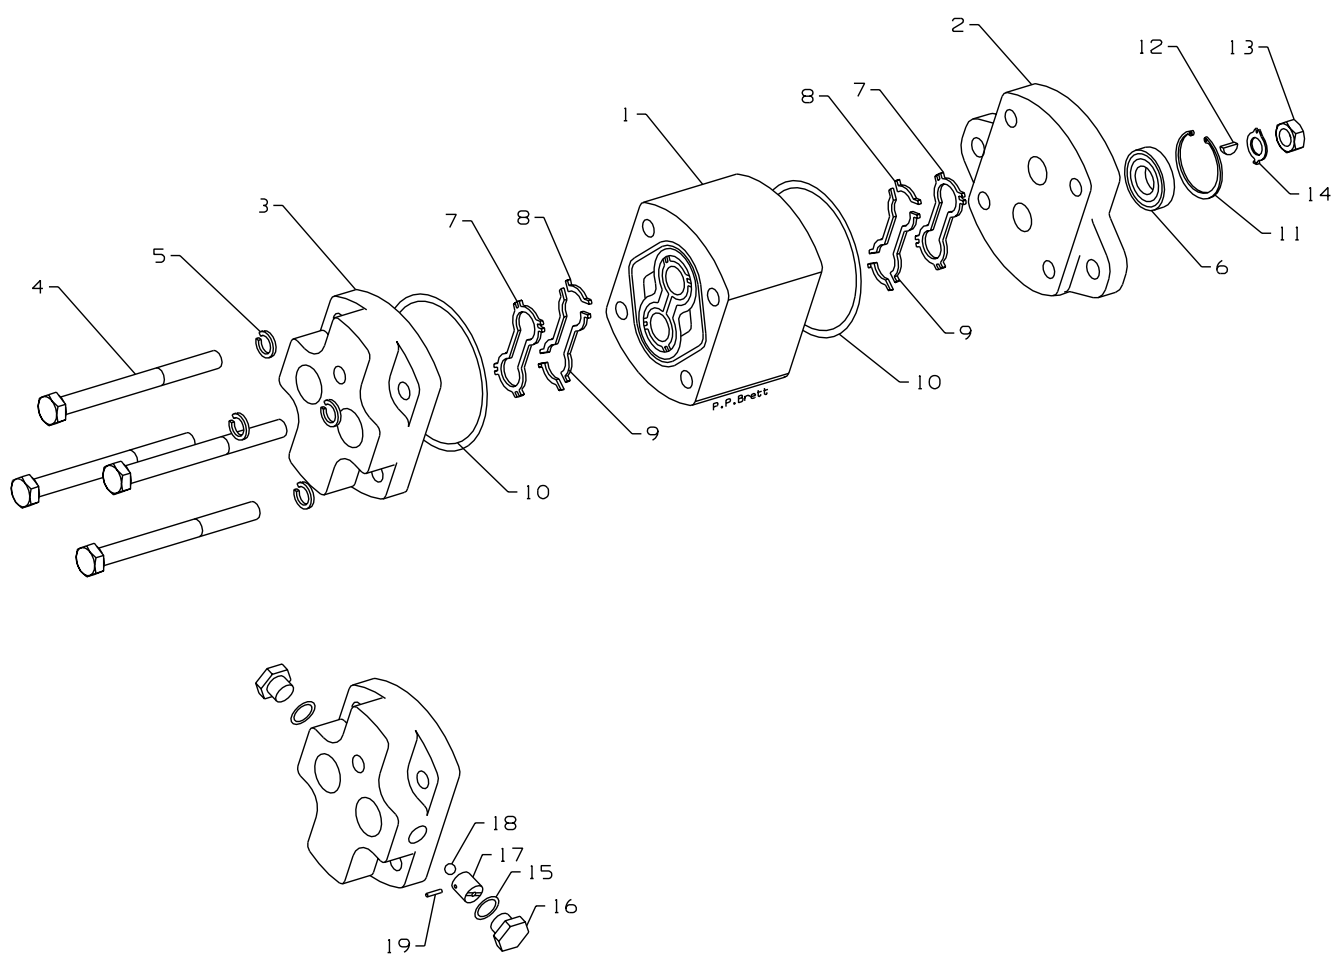


# HYDRAULIC MOTOR (BELT DRIVE)

# LIST OF PARTS

Motor identification

A800008 - Ultra code - 1MR022R 8604 (new code 1761) Used on Parkway 225 L & RH Drive Unit  
A800008 - Ultra code - 1MR022R 8604 (new code 1761) Used on 220 M28 4WD L & RH Drive Unit  
A809624 - Ultra code - 1MR022C 8628 (new code 3362) Used on Motor 350D Mk5 RH Drive Unit  
A809625 - Ultra code - 1MR022A 8628 (new code 3361) Used on 350D Mk5 LH Drive Unit

ITEM	RANSOMES PART NO	DESCRIPTION 	QTY	REMARKS
1	A800008	HYDRAULIC MOTOR	1	FOR A800008 FOR A809624/A809625
1	A809624	HYDRAULIC MOTOR	1	
1	A809625	HYDRAULIC MOTOR	1	
1	N/A	• BODY ASSEMBLY	1	
1	N/A	• DOWEL AND MATCHED	1	
1	N/A	• GEARS	1	
2	N/A	• FLANGE	1	
3	N/A	• COVER	1	
4		• BOLT	4	
5		• S.L.WASHER	4	
	A230018	• SEAL KIT (ITEM 6 - 14)	1	
	A230020	• SEAL KIT (ITEM 6 -15)	1	
6	A229945	•• SHAFT SEAL	1	
7	N/A	•• BACK UP SEAL	2	
8	N/A	•• BUSH SEAL	4	
9	N/A	•• BUSH SEAL	4	
10	N/A	•• O RING	2	
11	N/A	•• CIRCLIP	1	
12	GSF2230AF	•• KEY	1	
13	GSF2051AD	•• NUT	1	
14	H200038	•• TAB WASHER	1	FOR A809624/A809625
	A230020	• SEAL KIT (ITEM 6 -15)	1	
6	A229945	•• SHAFT SEAL	1	
7	N/A	•• BACK UP SEAL	2	
8	N/A	•• BUSH SEAL	4	
9	N/A	•• BUSH SEAL	4	
10	N/A	•• O RING	2	
11	N/A	•• CIRCLIP	1	
12	GSF2230AF	•• KEY	1	
13	GSF2051AD	•• NUT	1	
14	H200038	•• TAB WASHER	1	
15	N/A	•• O RING	2	
16		• PLUG	2	
	A809630	• CHECK VALVE (ITEM 17-19)	1	
17	N/A	•• BODY	1	
18	N/A	•• BALL	1	
19	N/A	•• SPRING PIN	1	

\* NOT ILLUSTRATED







**GB**

English

## World Class Quality, Performance and Support

Equipment from Ransomes Jacobsen Limited is built to exacting standards ensured by ISO 9001 registration at all our manufacturing locations. A worldwide dealer network and factory-trained technicians backed by Ransomes Jacobsen Parts Xpress provide reliable, high-quality product support.



**NL**

## Kwaliteit, prestatie en ondersteuning van wereldklasse

Dutch Machines van Ransomes Jacobsen Limited worden gebouwd volgens de hoogste normen, zoals verzekerd door de ISO 9001 registratie die op al onze productielocaties van toepassing is. Een wereldwijd dealernet en technici met een fabriekopleiding voorzien, mede dankzij de back-up van Ransomes Jacobsen Parts Xpress, in een betrouwbare productondersteuning van hoge kwaliteit.



**BOB-CAT BUNTON CUSHMAN JACOBSEN RANSOMES RYAN E-Z-GO**

Ransomes Jacobsen Limited  
Central Avenue, Ransomes Europark, Ipswich, England, IP3 9QG  
English Company Registration No. 1070731  
[www.ransomesjacobsen.com](http://www.ransomesjacobsen.com)